 


Hello

User Manual

INNIOASIS S1 MP3 Player

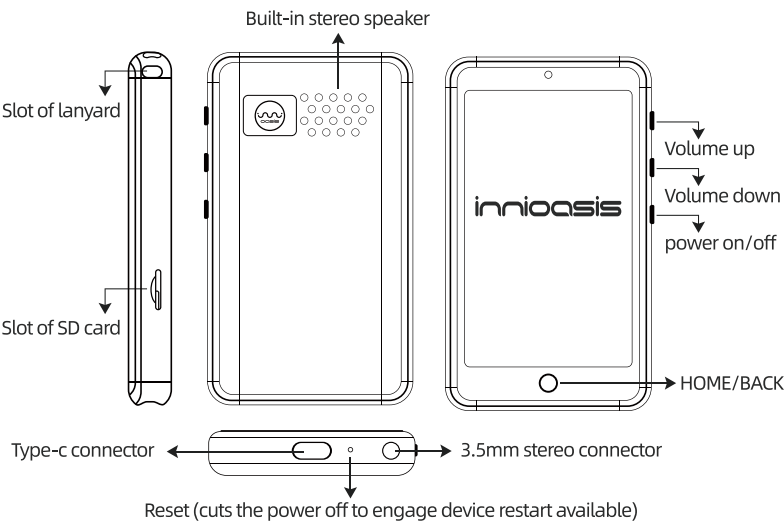

In the Box

S1 digital MP3 player x 1 TYPE-C cable x 1
User manual x 1

Specification

Bluetooth 4.2 wireless technology
Capacity: 1GB RAM + 8GB ROM (2GB for system used)
Display: 4-inch
Battery: 5V=1A, wired charging up to 150 minutes
Video playback: Up to 5 hours (wired headphone connecting)
Audio playback: Up to 25 hours (wired headphone connecting)
Audio attachment support: MP3, FLAC, OGG, M4A, APE, WMA...
Video attachment support: MP4, AVI, MKV, RM, RMVB, VOB, 3GP..
Image attachment support: JPEG, BMP, GIF..
E-book attachment support: TXT, EPUB, PDF, MOBI, DOC...
FM radio: 87.5 MHz to 108 MHz

Connection and Powering

1. USB connection

Make MP3 connecting to laptop via TYPE-C cable, which will be read as a SD card, then have your music files copied to MP3 folder.

2. Bluetooth connection

 
- S1 device: Settings>>>Bluetooth>>>turn on
- Repeat a option on your Android phone
- SEARCH FOR DEVICES on S1 device
- Make your both devices(S1 and Android phone) connected, and selecting your files(music, pictures, videos) for send.

3. Powering MP3

Enable powering MP3 with any TYPE-C cable connected to phone charge adaptor (wired) or computer/laptop.

Music

1. Music scan: Scan music in all folders or specified folder.

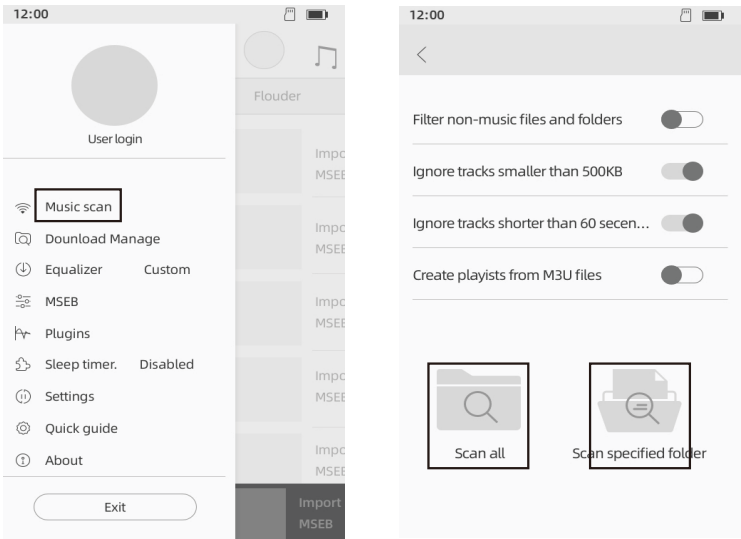


2. Page of management:

- Favourite / Recently / Playlist
- TYPEs of Play order
- Bulk music management: create playlist, add to favourite,
- Details of play bar
- Play queue

3. Details of play bar:

 - Playlist / favourites add
- Play model change
- Play queue

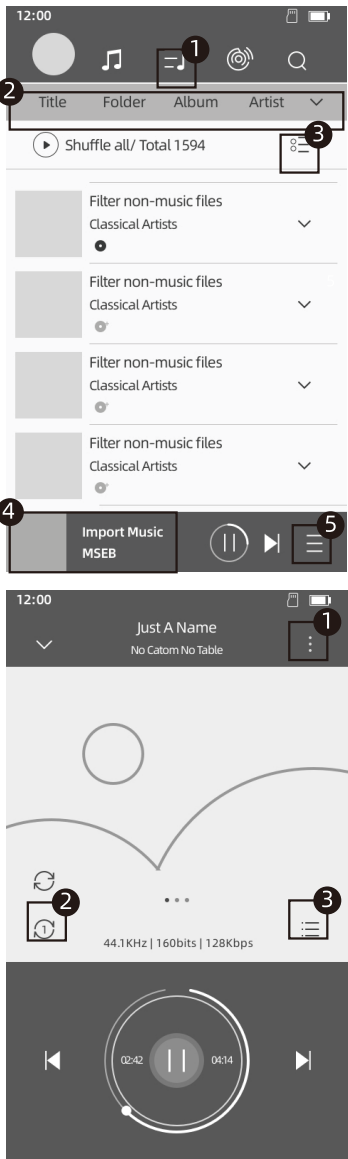

Video

Video files would be find as folder view when App opened.

Function symbols while a file is playing:

- Rotate the screen
- Lock the operation function for prevent touch incorrectly
- SW -- Decoder choice.
- Choose the audio track you want, if available. If you select "Disable", there will be no sound when playing the video.
- Click to switch to the next video; Long press, a pop-up menu will let you choose the playback mode: Loop one, Loop all, Shuffle.
- Click to switch to the previous video.
- Play/Pause
- Switch the viewing size: Fit to screen, Stretch, CROP, 100% full screen

Gallery

- Three modes of view are able to select - Albums, Locations, Times
- 3-dots menu for bulk management of files.
- Press for editing when a photo is watching.
- Photos are available for share to other device with Bluetooth by pressed.

FM Radio















- All list of found channels.
- Quit for FM Radio.
- Add/move current channel to favorites.
- Search channels, Speaker playing, Record current channel.

E-book

3-dots menu:

 
- Recent list - Find books you have read recently.
- My Shelf - Import books from folder to Shelf view.
- My Files -- Find your local folders
- Net Library - Unavailable.
- Bookmarks - Manage all Bookmarks, Notes, Highlights...

Function symbols from reading page:

-  - Screen of orientation switch
-  -- Day/Night mode switch
-  -- TTS voice speaking activate
-  -- Automatic scrolling activate
-  **Chapters** -- Manage the chapters and bookmarks of the book.
-  **Bookmark** -- Add a new bookmark.
-  **Brightness** - Brightness adjust.
-  **Font Size** -- Font size adjust.
-  **Search** - Finding words in the current book.
-  **Visual Options** -- Provide more options as font, font size/ color/style, background color, paragraph spacing, line spacing, etc.
-  **Control Options** -- Page operation and screen control.
-  **Auxiliary settings** -- Selection of full screen mode, screen awake, automatic scrolling mode.
-  **Options** -- Adjustment and control options. It is equivalent to the shortcut button of the menu in the upper right corner of the page.
-  **Quit** -- Exit the e-book

Recorder

Function symbols from page:

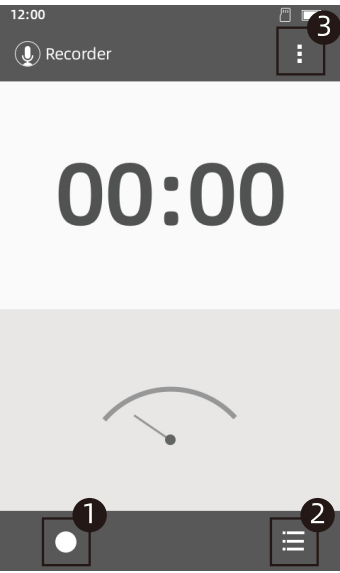




- ① Start recording
- ② Record files
- ③ Settings for Voice quality, recording mode

Clock

Function symbols of page:



-  -- Add/editing alarm clock

-  -- Add/editing cities time
-  -- Add/editing Timer
-  -- Add/editing Stopwatch

Tip: Please turn to setting page “Date and time” if TIME of device adjustment needed.




Calendar

Function symbols of page



-  -- For view of Day, Week, Month, Agenda switch
-  -- For new event, refresh, search, clear events, go to, settings options

 
Scientific calculator

Function symbols of page:

-  -- Settings
-  -- History
-  -- Scientific symbols

File manager

-  -- Add new folder
 -  -- Search files
- Long press on file/folder: copy, delete, cut, rename, details.

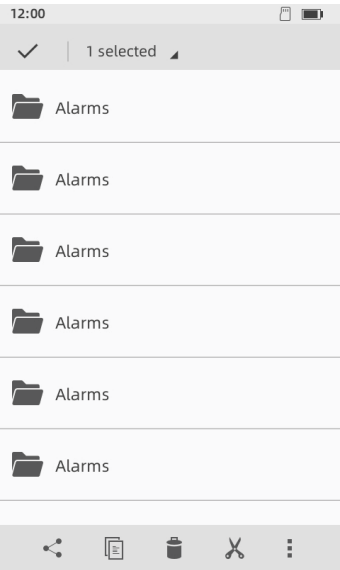

Setting

- Bluetooth Switch on/off.
- Sound - Volumes adjustment, sound types.
- Display - Wallpaper, Brightness, Sleep timer, font size.
- Storage - Space of device.

- Disable App - FM, Recorder, E-book, Video are able to disable.
- Factory data reset - Clean all data and reset device.
- Language & input - Select your display language.
- Reset locked - password setting of reset device, if you don't want somebody restore APPs without you are aware.(Once system has reset, a new reset pass word is required.)

- Date & time - Setting time on main page.
- Scheduled power on & off - Auto power on/off.
- About device - Detail of system code.

Warranty

Thank you for value your business with us. Please enjoy the following services.

Period of Warranty: One Year Warranty from the date of order.

Scope of Warranty: S1 device only, nor the accessories
Warranty terms:

- ① Quality issue caused by product will be earned a replacement or refund.
- ② Accessories are not included in the warranty, such as USB cable, earphones, etc.
- ③ The following conditions are not covered by the warranty
 - Out of the warranty period.
 - It has been disassembled or repaired privately by the customer.
 - Man-made damage, accidental damage or deformation.
 - Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity.
 - Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

Support needs

- Any question, concern and advice please reach out to us
- E-mail: JiuYun_css@hotmail.com
- Online support: <https://www.facebook.com/JiuYunCSS/>

Reply Guaranteed: Three business days.