

Operating instructions

Combi-Steam HSL

Combi-steam cooker

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarise yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Validity

The product family (model number) corresponds to the first alphanumeric on the identification plate. These operating instructions apply to:

| Type | Product family | Size system |
|-------------|-----------------------|--------------------|
| CSTHSLZ60 | 23004 | 60-381 |
| CSTHSLZ60c | 23004 | 60-381 |

Variations depending on the model are noted in the text.

Colour operating instructions can be downloaded from the internet from www.vzug.com.

Table of contents

| | |
|-------------------------------------------------------------|-----------|
| 1 Safety precautions | 6 |
| 1.1 Symbols used | 6 |
| 1.2 General safety precautions | 7 |
| 1.3 Appliance-specific safety precautions | 8 |
| 1.4 Instructions for use | 9 |
| 2 Disposal | 12 |
| 3 Using for the first time | 13 |
| 4 Appliance description | 15 |
| 4.1 Construction | 15 |
| 4.2 Operating and display elements | 15 |
| 4.3 Cooking space..... | 16 |
| 4.4 Accessories..... | 17 |
| 5 Operating modes | 19 |
| 5.1 Overview of operating modes..... | 19 |
| 5.2 Steam | 19 |
| 5.3 Hot air..... | 20 |
| 5.4 Hot air with steaming..... | 20 |
| 5.5 Regeneration..... | 21 |
| 5.6 Hot air humid | 22 |
| 6 Using the appliance | 23 |
| 6.1 Filling the water tank..... | 24 |
| 6.2 Selecting and starting the operating mode..... | 24 |
| 6.3 Checking and changing the settings..... | 26 |
| 6.4 Setting a duration | 26 |
| 6.5 Setting a delayed start / end time | 26 |
| 6.6 Food probe temperature..... | 28 |
| 6.7 Cancelling / ending the operating mode before time..... | 29 |
| 6.8 Changing the operating mode..... | 29 |
| 6.9 Timer..... | 30 |
| 6.10 End of operation..... | 31 |
| 6.11 Switching the appliance off | 33 |
| 6.12 Emptying the water tank | 34 |
| 7 GourmetGuide | 35 |
| 7.1 Recipe book..... | 35 |

| | | |
|-----------|----------------------------------------|-----------|
| 7.2 | Own recipes | 37 |
| 7.3 | BakeOmatic..... | 41 |
| 7.4 | Professional baking | 43 |
| 7.5 | Soft roasting | 44 |
| 7.6 | RegenerateOmatic | 49 |
| 7.7 | Wellness * | 51 |
| 7.8 | Hygiene * | 52 |
| 7.9 | Keep warm * | 52 |
| 8 | EasyCook | 53 |
| 8.1 | Overview of food groups | 53 |
| 8.2 | Selecting foods and starting | 54 |
| 9 | Favourites | 55 |
| 9.1 | Creating favourites..... | 55 |
| 9.2 | Selecting and starting favourites..... | 55 |
| 9.3 | Changing favourites..... | 56 |
| 9.4 | Deleting favourites | 56 |
| 10 | Tips and tricks | 57 |
| 10.1 | Unsatisfactory cooking result..... | 57 |
| 10.2 | General tips..... | 58 |
| 10.3 | Saving energy | 58 |
| 11 | User settings | 59 |
| 11.1 | Overview of user settings | 59 |
| 11.2 | Adjusting user settings..... | 59 |
| 11.3 | Language | 59 |
| 11.4 | Display..... | 60 |
| 11.5 | Date..... | 60 |
| 11.6 | Clock..... | 60 |
| 11.7 | Notifications..... | 61 |
| 11.8 | Descaling the appliance | 61 |
| 11.9 | Water hardness | 62 |
| 11.10 | Volume | 62 |
| 11.11 | Assistance functions..... | 62 |
| 11.12 | Temperature | 63 |
| 11.13 | Childproof lock | 63 |
| 11.14 | Appliance information..... | 64 |
| 11.15 | Demo mode | 64 |
| 11.16 | Factory settings | 64 |

| | |
|-----------------------------------------------------|-----------|
| 12 Care and maintenance | 65 |
| 12.1 Cleaning the exterior | 65 |
| 12.2 Cleaning the cooking space | 65 |
| 12.3 Cleaning the appliance door..... | 66 |
| 12.4 Cleaning the door seal..... | 67 |
| 12.5 Replacing the door seal..... | 67 |
| 12.6 Replacing the halogen light bulb | 67 |
| 12.7 Cleaning the accessories and shelf guides..... | 68 |
| 12.8 Descaling | 69 |
| 13 Trouble-shooting | 73 |
| 13.1 What to do if | 73 |
| 13.2 After a power failure | 77 |
| 14 Accessories and spare parts | 79 |
| 14.1 Accessories..... | 79 |
| 14.2 Special accessories..... | 79 |
| 14.3 Spare parts..... | 80 |
| 15 Technical data | 81 |
| 15.1 Note for testing institutes | 81 |
| 15.2 Temperature measurement | 81 |
| 15.3 Product data sheet..... | 82 |
| 15.4 Automatic energy-saving stand-by | 83 |
| 15.5 Reference to «Open Source» licence..... | 83 |
| 16 Index | 84 |
| 17 Service & Support | 87 |

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the operating instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be undertaken by children without supervision.
- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- READ THE IMPORTANT SAFETY PRECAUTIONS CAREFULLY AND RETAIN FOR FUTURE USE.
- WARNING: The appliance and its accessible parts get hot during use. Be careful not to touch the heating elements. Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- WARNING: Accessible parts can get hot during use. Keep young children away from the appliance.
- This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops, offices and other commercial establishments; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments.
- A heatable appliance drawer and its contents get hot.
- Do not use aggressive or abrasive cleaning agents or sharp metal scrapers for cleaning the glass in the oven door as they could scratch the surface. This can destroy the glass.
- For appliances with pyrolytic self-cleaning: Excessive soiling and any and all accessories (tableware, baking trays, runners, shelf guides) must be removed before carrying out pyrolytic self-cleaning.
- Only use the food probe recommended for this oven.
- Under no circumstances use a steam cleaner to clean this appliance.
- WARNING: Before replacing the light bulb, ensure the appliance is switched off and disconnected from the mains power supply to avoid possible electric shock.

- See the 'Accessories' section for the proper use of insertable parts.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/ electrician carry out the necessary work.

Correct use

- The appliance is designed for use in the home for preparing food. Under no circumstances flambé or cook food using a lot of fat in the cooking space! No liability is assumed for any damage caused by improper use or incorrect handling.
- Never use the appliance to dry animals, textiles or paper, etc.
- Do not use the appliance as a room heater.
- The appliance should only be installed and operated at an ambient temperature of 5 °C to 35 °C. If frost develops, residual water left in the pumps could freeze and cause damage.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the «Service & Support» section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference.
- The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

Note on use

- Use the childproof locking facility.

1 Safety precautions

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the power supply immediately.
- Ensure there are no foreign bodies or pets in the cooking space before closing the appliance door.
- Objects that could pose a danger if the appliance were accidentally switched on should not be stored in the cooking space or the heatable appliance drawer. Do not store food or any temperature-sensitive or inflammable materials, e.g. cleaning agents, oven sprays, etc., in the cooking space or the heatable appliance drawer.
- For appliances with grill: Leave the appliance door closed when grilling. The heat could otherwise damage the operating and display elements or the fitted units above.

Caution: Risk of burns!

- The appliance gets very hot when in use. The appliance door also gets hot.
- Steam and/or hot air may escape from the cooking space when the appliance door is opened.
- The appliance will remain hot for some time after it is switched off and will only cool down slowly to room temperature. Allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Overheated fat and oil can easily catch fire. Heating oil in the cooking space to sear meat is dangerous and should not be done. Never attempt to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a fire blanket. Keep doors and windows closed.
- Do not pour spirits (brandy, whisky, schnapps, etc.) over hot food. Danger of explosion!
- Do not leave the appliance unattended when drying herbs, bread, mushrooms, etc. If the foodstuff dries out too much, it can pose a fire hazard.
- If you notice smoke possibly coming from the appliance itself or from inside the cooking space, keep the appliance door closed. Disconnect the appliance from the power supply.
- Accessories get hot in the cooking space. Use protective gloves or oven cloths.

Caution: Risk of injury!

- Be careful not to put fingers in the door hinges, there is otherwise a risk of injury if the appliance door is moved. Particular care should be taken when children are around.
- Only leave the appliance door open in the at-rest position. An open appliance door poses a danger of tripping or injury! Do not sit or rest on the appliance door or use it as a storage surface.
- For hobs: A hob guard can be fitted to protect small children. Hob guards are available from specialist retailers.

Caution: Risk to life!

- Danger of suffocation! Keep packaging material, e.g. plastic film and polystyrene, away from children. Packaging material can be dangerous for children.

How to avoid damaging the appliance

- Close the appliance door carefully.
- For appliances with visible bottom heating element: Do not place any objects directly on the bottom heating element.
- Do not use protective aluminium inserts with appliances with no visible bottom heating element.
- Do not use objects that can rust in the cooking space.
- Using knives or cutting wheels on the baking tray will visibly damage the surface.
- To prevent corrosion, leave the appliance door open in the at-rest position until the cooking space has cooled down.
- When cleaning the appliance, make sure no water gets inside it. Use a moderately damp cloth. Do not spray the outside or the inside of the appliance with water. If water gets inside the appliance, it will cause damage.

2 Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

 
Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by an electrician. Then cut the mains cable off flush with the appliance.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

3 Using for the first time

Before operating the newly installed appliance for the first time, the following steps should be taken:

- ▶ Remove the packaging and transportation material as well as any blue protective film from the cooking space.
- ▶ Clean the cooking space and the accessories.
- ▶ Press the power button.
 - The appliance switches on.

Scenario 1 *

* applies only to appliances which were produced after March 2016 or have received a software update.

- Various user settings necessary for operation, such as language, time and temperature unit, are shown on the display one after the other.
- ▶ Make the settings and confirm.
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.




Language and time must be set so that the appliance can be operated.

Scenario 2 **

** applies only to appliances produced before or during February 2016.

- ▶ Set the time (see page 60).
- ▶ If necessary, adjust the user settings to the water hardness (see page 62).
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.

Finishing the first-time use process

- Heat the empty cooking space (without wire shelves, baking trays, etc.) using the  operating mode at 180 °C for about 30 minutes.




As there is likely to be some smoke and odour given off, we recommend ventilating the room well during this phase.



All temperatures in these operating instructions are in degrees Celsius. Apply the corresponding conversions via the user setting «Degrees Fahrenheit» (see page 63).


4 Appliance description

4.1 Construction

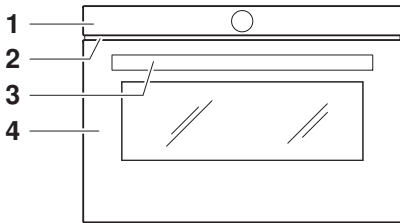


- 1 Operating and display elements
- 2 Ventilation opening
- 3 Door handle
- 4 Appliance door

4.2 Operating and display elements

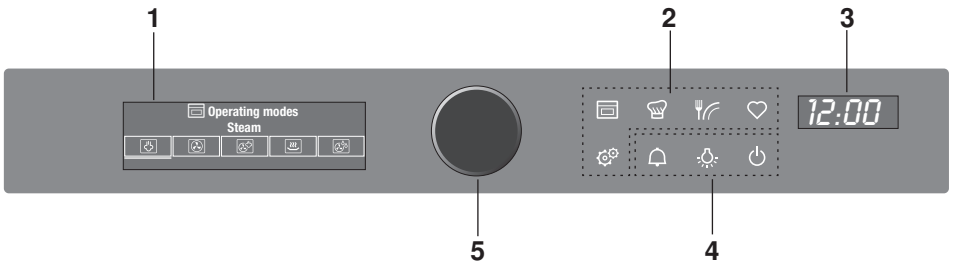

- 1 Display
- 2 Menu buttons
- 3 Digital display (duration/timer/time)
- 4 Action buttons
- 5 Switch on the adjusting knob/appliance

Overview of touch buttons

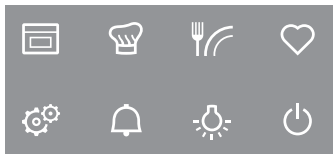


- Operating modes
- GourmetGuide
- EasyCook
- Favourites
- User settings
- Timer
- Cooking space illumination
- Switch off

4.3 Cooking space



Using protective inserts or aluminium foil can damage the appliance.

Do not place any protective insert or aluminium foil on the floor of the cooking space.

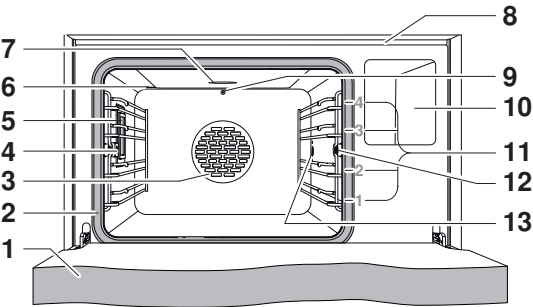

- | | | | |
|---|----------------------------|----|------------------------|
| 1 | Appliance door | 8 | Steam vent |
| 2 | Door seal | 9 | Temperature sensor |
| 3 | Hot air blower | 10 | Water tank compartment |
| 4 | Socket for food probe | 11 | Levels |
| 5 | Cooking space illumination | 12 | Knurled nut |
| 6 | Climate sensor | 13 | Steam inlet |
| 7 | Cooking space ventilation | | |

4.4 Accessories







 
Incorrect handling can cause damage!

Do not use knives or cutting wheels on the accessories.


Stainless steel tray



- Use together with the wire shelf and perforated cooking tray as a drip tray.
- Serves as a baking tray for aperitif nibbles and bread.
- If not fully covered by the baking, its shape can become distorted during baking. This is normal. As it cools down, it will go back to its original form.
- Use with the ,  and  operating modes as well as with  GourmetGuide.



 - ▶ Push the stainless steel tray with the openings **1** against the back of the cooking space. When it is pulled out, it will click into place.
- ▶ Lift the stainless steel tray in order to pull it out of the cooking space fully.




- ▶ Only use the normal way round – not upside down.

Perforated cooking tray




 - For cooking fresh or frozen vegetables, meat and fish.
- For standing ramekins, preserving jars, etc. on.
- For extracting juice from berries, fruit, etc.




- ▶ Push the cooking tray with the openings **1** against the back of the cooking space. When it is pulled out, it will click into place.
- ▶ Lift the cooking tray in order to pull it out of the cooking space fully.

 Wire shelf



 - For standing roasting and baking tins on
- For standing meat, frozen pizza, etc. on
- ▶ Ensure that the cross strut **1** is to the back of the cooking space. It enables the food to be removed safely from the cooking space.
- Serves as a cooling rack



Food probe



- For measuring the core temperature of food



For recommended food probe temperatures, see «EasyCook».



Not suitable for temperatures of over 230 °C. There must be a distance between the food probe and the roof of the cooking space of at least 5 cm.

 
Water tank with cover



Do not use demineralised (filtered) or distilled water.



- ▶ Only fill with fresh, cold drinking water.



Special accessories



Place any accessories not included in the scope of delivery on the wire shelf.

- ▶ Special accessories can be found at: www.vzug.com

5 Operating modes

5.1 Overview of operating modes

All the operating modes are described below.



Follow the advice given in «Tips and tricks» (see page 57) and in «EasyCook».

5.2 Steam



Temperature range


30–100 °C

Recommended value

100 °C

Level

1 to 4

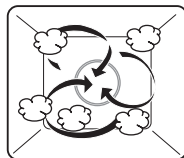

The cooking space is heated simultaneously by steam and hot air. The food is heated up or cooked by steaming.

Uses

- Cooking vegetables, rice, cereal products, pulses and egg dishes
- Poaching meat, poultry and fish
- Extracting juice from fruit and berries
- Making yoghurt
- Preserving




Possible to cook on several levels simultaneously.

- Place the stainless steel tray underneath the perforated cooking tray.

5.3 Hot air



| | |
|-------------------|------------|
| Temperature range | 30–230 °C |
| Recommended value | 180 °C |
| Level | 1 or 1 + 3 |

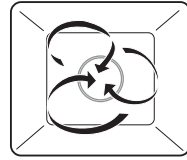

A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly.


Uses

- For cakes, savouries, biscuits, bread and roasts on 1 or 2 levels

5.4 Hot air with steaming



| | |
|-------------------|------------|
| Temperature range | 80–230 °C |
| Recommended value | 180 °C |
| Level | 1 or 1 + 3 |

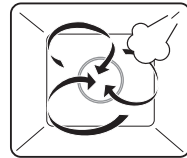

A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. With condensing steam, the energy is transferred more efficiently to the food than when cooking with hot air, which accelerates the cooking process. Steam over 100° C is not visible.





Uses

- Puff pastries, yeast pastries, bread, plaited bread
- Baked dishes and gratins
- Meat
- Frozen and convenience foods



Particularly suitable for low-fat cooking of frozen foods such as oven chips and spring rolls.

The supply of steam can be switched off and on again during operation.

- ▶ Start the operating mode.
- ▶ To switch off the supply of steam, select  «Switch steaming off» in the settings of the operating mode.
 - The  symbol goes out.
- ▶ To switch the supply of steam on again, select  «Switch steaming on».
 - The  symbol illuminates.

5.5 Regeneration



Temperature range


80–200 °C

Recommended value

120 °C

Level

1 to 4

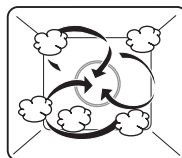

The cooking space is heated by steam and hot air. The food is reheated gently without drying it out.

Uses

- Reheating precooked foods and convenience foods



Possible to regenerate on several levels simultaneously.

5.6 Hot air humid



Temperature range


30–230 °C

Recommended value

180 °C

Level

1 or 1 + 3

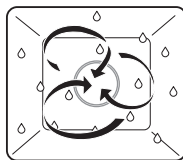

A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. The steam produced is largely retained in the cooking space. The food retains its moisture.

Uses


- Roasting, braising








 
6 Using the appliance

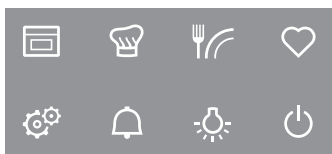The different main menus and functions are selected by pressing the corresponding touch button. Selected touch buttons and functions are illuminated in white; other selectable functions are illuminated in orange.

Settings and functions that cannot be selected or changed are greyed out in the various menus.

The appliance offers the following touch buttons with the following main menus and functions:



| | |
|-----------------------------------------------------------------------------------|----------------------------|
|  | Operating modes |
|  | GourmetGuide |
|  | EasyCook |
|  | Favourites |
|  | User settings |
|  | Timer |
|  | Cooking space illumination |
|  | Switch off |

Adjusting knob functions

- | | |
|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Press | <ul style="list-style-type: none">▪ Switching on the appliance▪ Selecting/opening a submenu, setting, etc.▪ Confirming/closing a message |
| Turn | <ul style="list-style-type: none">▪ Activating/deactivating a user setting▪ Navigating within the submenus▪ Changing/setting a value or user setting |

6.1 Filling the water tank



Do not use demineralised (filtered) or distilled water.


- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Remove the water tank to fill it.
- ▶ Fill the water tank with fresh, cold drinking water and seal it with the cover.
- ▶ Slot the filled water tank into position in the water tank compartment.

Refilling water

The contents of the water tank normally suffice for one cooking session. If, however, the water tank needs to be refilled:

- ▶ Fill the water tank with a maximum of 0.5 l of water as otherwise water could spill over at the end of operation.

6.2 Selecting and starting the operating mode

- ▶ If the appliance is switched off: first press the adjusting knob.
- ▶ If the appliance has another menu open: press the  touch button.
 - The selection of operating modes appears in the display.
- ▶ Select the operating mode.
 - The operating mode settings appear in the display; a recommended value appears above the temperature.
- ▶ Set the values for duration, end time, temperature and target temperature as required and confirm.

Press and go

Once all the necessary settings for the operating mode have been made, a bar appears in the display and counts down 20 seconds. If no further settings are made during this time, operation starts automatically. If a setting is changed, Press and go starts again.




The duration of Press and go can be adjusted (see page 63) or it can be deactivated altogether in the user settings.

- ▶ To start operation immediately, i.e. without Press and go, select ►.
 - If it is set, the remaining time appears on the display and in the digital display.



The operating mode selected cannot be changed after operation has started.

Display overview

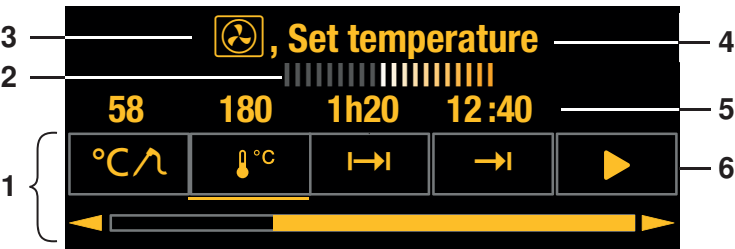

- | | |
|-------------------------------------|--------------------------------------------------------------------|
| 1 Operating mode settings | 4 Current position of the adjusting knob / selected setting |
| 2 Press and go | 5 Set values / recommended values |
| 3 Operating mode with symbol | 6 Symbols for settings |

6.3 Checking and changing the settings

- ▶ Select the symbol for the desired setting.
- ▶ To change the value, turn the adjusting knob to the right or left.
- ▶ Press the adjusting knob to confirm the setting.
 - The operating mode settings are displayed.
 - The changed value can be seen above the corresponding symbol.



The end time can only be changed during the first 60 seconds of operation.

6.4 Setting a duration

The selected operating mode ends automatically when the set duration is up.

- ▶ Select the desired operating mode.
- ▶ Select **I→** in the operating mode settings.
- ▶ Set the desired duration – max. 9hrs 59mins – and confirm.
 - The duration is displayed in the operating mode settings as well as the end time which is calculated based on this value.
 - End of operation / Duration finished (see page 31)

6.5 Setting a delayed start / end time

The delayed start is activated when both the duration and the end time are set for the selected operating mode.

The appliance switches automatically on and off again at the desired times. If you use the food probe, you will need to estimate and set the duration. You will find a guide on times in «EasyCook». The appliance switches on with a delay and switches off again when the set target temperature is reached. Depending on the estimated duration, this can occur earlier or later than the end time.





Perishables should not be kept unrefrigerated.


Before setting the delayed start

- ▶ Place the food in the cooking space.
- ▶ Select the desired operating mode.
- ▶ Set the temperature.
- ▶ Set the duration.

Setting a delayed start

- ▶ Select  in the operating mode settings.
 - The current end time calculated using the duration is displayed.
- ▶ Set the desired end time and confirm.
 - The remaining time until the start of the operation is displayed.
 - After 3 minutes, the display goes out and the  touch button is illuminated in white. The display can be called up again at any time by pressing the adjusting knob.
 - The appliance remains switched off until 3 minutes before the automatic start of operation.
- ▶ Checking and changing the settings (see page 26)

Example

- ▶ Select the  operating mode and 180°C.
- ▶ At 8:00, set a duration of 1 hour and 15 minutes.
- ▶ Set the end time to 11:30.
 - The appliance will automatically switch on at 10:15 and off again at 11:30.

6.6 Food probe temperature



Only use the supplied food probe.

Do not clean the food probe in the dishwasher. Always keep the plug clean.

The food probe is used to measure the temperature inside the food (referred to as the **food probe temperature**). As soon as the food reaches the **target temperature** (the food probe temperature that should be attained at the end of the cooking process), operation stops automatically. It is also possible to simply measure the food probe temperature without stopping operation.



The food probe must be inserted as far into the middle of the meat as possible to get a correct reading of the food probe temperature.

The optimal target temperature is dependent on the cut of meat and on the degree of doneness.

Refer to the information on target temperatures in «EasyCook».

Setting

- ▶ Select the desired operating mode and set the temperature.
- ▶ Select $\text{^{\circ}C}$ in the operating mode settings.
- ▶ Set the desired target temperature and confirm.
- ▶ To start operation, select ▶.



Operation can only be started when the food probe is plugged in.

- ▶ Checking and changing the settings (see page 26)
 - The current food probe temperature is shown in the top part of the display when cooking.
 - The set target temperature is displayed above $\text{^{\circ}C}$.
 - Operation ends automatically once the target temperature has been reached – see also End of (see page 31)operation.






If the meat is left in the cooking space after having switched off the appliance, the food probe temperature will continue to rise due to the residual heat.

Measuring the food probe temperature



If you only wish to measure the food probe temperature without operation stopping automatically when the target temperature is reached, proceed as follows:

- ▶ Select the desired operating mode and set the temperature and, if you wish, the duration.
- ▶ Plug in the food probe.
- ▶ Start the operating mode.
 - As soon as the cooking space has reached the desired temperature, the current food probe temperature is shown in the top part of the display when cooking.

6.7 Cancelling / ending the operating mode before time


- ▶ In the operating mode settings, select ■ or press the  touch button.
 - An acoustic signal is emitted.
 - The selected operating mode is aborted.
 - The following appears in the display: « Residual heat» and, for example: « Hot air aborted».
 - If the food probe is inserted, the food probe temperature is displayed. *

* applies only to appliances which were produced after March 2016 or have received a software update.

- ▶ If you wish to start a new operating mode, press the  touch button.
- ▶ If you wish to switch off the appliance, press the  touch button.


6.8 Changing the operating mode

If no operating mode is running:

- ▶ Select  in the settings of the current operating mode.
 - The operating modes menu is displayed.

If an operating mode is already running:


- ▶ Select ■ or press the  touch button.

- The selected operating mode is cancelled.
- ▶ Press the  touch button and choose a new operating mode.

6.9 Timer

The timer functions like an egg timer. It can be used at any time and independently of all other functions.


Setting and starting the timer

- ▶ Press the  touch button.
 - A suggested value of «10mins» appears in the display.
- ▶ Turn the adjusting knob and set the desired duration.
 - The duration and the end time for the timer appear on the display.


The timer can be set for:

- up to 10 minutes in 10-second intervals, e.g. 9 minutes and 50 seconds.
- over 10 minutes in 1-minute intervals, e.g. 1 hour and 12 minutes.

The maximum timer duration is 9 hours and 59 minutes.

- ▶ Press the adjusting knob to confirm.
 - The timer starts.
 - If there is no operating mode running with a set duration, the remaining time on the timer will be displayed in the digital display.
 - The  touch button is illuminated in white.
 - If the appliance was in another menu before the timer was set, e.g. operating modes, the menu or the submenu selected within it, e.g. a running operating mode, appears.
 - If the appliance was not in another menu, the display goes black.

Checking and changing


- ▶ Press the  touch button.
 - The countdown to the remaining time appears in the display.
- ▶ Shorten or extend the time by turning the adjusting knob.
- ▶ Confirm this shortening or extending of the time.

When the timer finishes

When the set duration is up:

- An acoustic signal is emitted.
 - «Timer finished» appears in the display.
- To close the message, select ✓.

Switching the timer off before time

- Press the  touch button.
- The countdown to the remaining time appears in the display.
- Set the timer to 0 by turning the adjusting knob and confirm.

Or, if the timer is the only active function:




- Press the  touch button.

Or, if you wish to switch off the appliance:

- Press the  touch button 2×.


6.10 End of operation

When the set duration is up or, if the food probe is being used, when the set target temperature is reached:

- The selected operating mode ends automatically.
 - An acoustic signal is emitted.
 - Three options are displayed:
- Select  to choose a new operating mode
 - Select  to extend the operation
 - Select  to switch the appliance off.
 - The appliance switches off automatically after 3 minutes without interaction.



You can adjust (see page 60) the appliance end time individually.

- As long as the temperature is above 80 °C, « Residual heat» appears in the display.

- If the food probe is inserted, the food probe temperature is displayed. *



The food can be kept warm with residual heat for some time. As soon as the temperature falls below 80 °C, all the displays go out. If at this point the food probe is still inserted, the displays only go out when the food probe is removed. *

The cooling fan can continue to run.

* applies only to appliances which were produced after March 2016 or have received a software update.

For all operating modes that use steam, steam reduction can take place at the end of the cooking process. The steam is gradually released from the cooking space into the atmosphere – this takes about 1 minute. This means that there is no sudden rush of steam when the appliance door is opened; it can, however, be opened at any time.

Removing food from cooking space





Risk of scalding!

Hot steam or hot air may escape from the cooking space when the appliance door is opened.

The accessories get hot. Use protective gloves or oven cloths.


- ▶ Take the food out of the cooking space when done.
- ▶ Any condensate or food particles in the cooking space must be completely removed after each cooking session with steam.
- ▶ Wipe away traces of water or soiling with a soft cloth to prevent corrosion and unpleasant odours.
- ▶ Leave the appliance door open in the at-rest position until the cooking space has cooled down and dried out.

6.11 Switching the appliance off



- ▶ Press the  touch button.
 - An acoustic signal is emitted.
 - Any running operating mode or application is ended; if switched on, the timer or cooking space illumination will remain active.
 - « Residual heat» appears in the display.
 - If the food probe is inserted, the food probe temperature is displayed. *

* applies only to appliances which were produced after March 2016 or have received a software update.


- The following message appears in the display after all operating modes with steam: «Draining appliance. Please do not remove the water tank.»

- ▶ Press the  touch button again.
 - All touch buttons go out.
 - All functions are ended and switched off.

Or, at the end of operation:

- ▶ Choose the  option in the display.
 - An acoustic signal is emitted.
 - Any running operating mode or application is ended; if switched on, the timer or cooking space illumination will remain active.
 - The following appears in the display: « Residual heat».
 - If the food probe is inserted, the food probe temperature is displayed. *

* applies only to appliances which were produced after March 2016 or have received a software update.

- ▶ Press the  touch button.
 - All touch buttons go out.
 - All functions are ended and switched off.



The appliance is switched off if none of the touch buttons are illuminated any more and the display is dark.

The cooling fan can continue to run.

6.12 Emptying the water tank



Scalding hazard!

The water in the tank may be hot. If «Please do not remove the water tank» appears in the display, the temperature of the residual water is too high. Do not remove the water tank!

For safety reasons, the residual water is not pumped off until the temperature has fallen below a certain level.

When the appliance is switched off, the residual water is pumped back into the water tank.


The following appears in the display: «Water is being pumped off». When the water has been pumped back:

- ▶ Remove, empty and dry the water tank.
- ▶ Put the water tank back.



Any operating mode can be started again.

7 GourmetGuide

The GourmetGuide  encompasses several programmes which make preparing meals as easy as possible for you. The following programmes can be called up:

 Recipes

 BakeOmatic

 Professional baking

 Soft roasting

 RegenerateOmatic

 Wellness *

 Hygiene *

 Keep warm *

* applies only to appliances which were produced after March 2016 or have received a software update.

7.1 Recipe book

A recipe book contains recipes which are tailored to suit the particular appliance. These are already programmed into the appliance and run automatically once started.





The following recipe books are available for your appliance:

-  Magical steaming

Starting a recipe



For recipes that do not require preheating, place the food in the cold cooking space.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the desired recipe book or  «Own recipes».
- ▶ To select a recipe, choose .
- ▶ Select a recipe.
 - The recipe settings are displayed.
- ▶ If you wish, set the end time or delayed start.



When cooking recipes from recipe books, a delayed start is only possible if the cooking space does not need to be preheated and the food does not need to be stirred or turned partway through, for example.

- ▶ To start the recipe, select ▶.
 - The recipe starts.
 - The display shows the current recipe step, the time remaining in this step and the entire duration of the recipe.
 - The digital display shows the remaining time for the current recipe step.

In the course of the recipe

In the course of the recipe, it may be necessary to open the appliance door, e.g. to turn over the food or to spread a topping over it. In such an instance, operation is paused and the display shows instructions on what to do next. To continue the recipe, proceed as follows:

- ▶ Open the appliance door.
- ▶ Carry out the action, e.g. turn over food.
- ▶ Close appliance door and select ✓ in the display.
 - The recipe will continue to run.




Aborting the recipe

- ▶ In the recipe settings, select ■.
 - The following appears in the display: «Should the current recipe be aborted?»
- ▶ To abort the recipe, select «Yes».
 - The recipe is aborted.

7.2 Own recipes

Up to 24 of your own favourite recipes can be created and saved. A recipe can consist of several steps with any operating modes (including Professional baking), pauses and hold times, which run automatically once started. You can also change and save existing recipes.

Creating your own recipe


- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select .
- ▶ To create a new recipe, select **+**.
 - The selection of operating modes including professional baking appears in the display.
- ▶ Select the desired operating mode.
- ▶ Set the target temperature, duration or temperature for step 1.




If you are only making temperature settings, this step takes as long as is necessary for the cooking space to reach the required temperature. This represents the preheating process.

- ▶ To confirm the settings, select **✓**.
- ▶ To add a new step, select **+**.
- ▶ Set an operating mode, pause or hold time to step 2.



For the intermediate step  «Hold», the heating continues to run and the cooking space temperature remains constant. For the intermediate step **II** «Pause», the cooking space is not heated any more and the temperature drops.

After a hold or pause step, a preheating stage can be set.

- ▶ To save the settings, select **✓**.
 - The overview of the set steps is displayed.
- ▶ Set additional steps in the same way. A recipe can consist of up to 9 steps.
- ▶ To save the recipe, select .
- The overview of the available storage spaces is displayed.

- ▶ Select the desired (empty) storage space and confirm.
- ▶ Enter the recipe name using the on-screen keypad and confirm by pressing ✓.
 - The recipe is now saved.
 - The following appears in the display: «Do you want to run the recipe?». If you do not wish to run the recipe, you will return to the recipes main menu.

Step duration

The duration of a step depends on whether values have been set for the target temperature, duration or temperature. If multiple values have been set, e.g. the duration and the temperature, only one of these takes priority for the step duration.


The table below shows the priorities in descending order:

| | Setting |
|---|--------------------|
| 1 | Target temperature |
| 2 | Duration |
| 3 | Temperature |

Aborting recipe entry/change

- ▶ Select ↶ in the overview of the set steps.
 - The following appears in the display: «Do you really want to cancel the entering of the recipe?»
- ▶ To abort the recipe entry, select «Yes».
 - The menu for your own recipes or, if a recipe from a recipe book was changed, the menu for the recipe book appears in the display.

Ending a step before time




This is only possible for  «Own recipes». If, for example when a recipe is running, you realise that the food or the cooking space is ready for the next step in the recipe even though the current step is still in progress, you can end the step before time.

- ▶ Select the symbol for target temperature, duration or temperature in the operating mode settings. Pay attention to the priorities for the step duration as described under «Step duration».


- ▶ Set the displayed value to 0 or reduce it until it is less than the currently measured value.
- ▶ Press the adjusting knob to confirm.
 - The step is ended.
 - If it was the final step, the recipe ends too.
 - If it was not the final step, the next step starts.

Changing recipes



Any recipe – from a recipe book as well as your own recipes – can be copied and changed.

- ▶ Select the desired recipe book or  .
- ▶ Select .
- ▶ Choose a recipe.
 - An overview of the steps in the recipe is displayed.


Changing a step

- ▶ Select the step you want to change.
- ▶ Make the settings and confirm with .



Adding a step

- ▶ Select .
- ▶ Make the settings and confirm with .

Deleting a step


- ▶ Select 
 - The overview of the steps in the recipe is displayed.
- ▶ Select the step.
 - The following appears in the display: «Do you want to delete this step?».
- ▶ To delete the step, select «Yes».
 - The step is deleted.

Saving an amended recipe


- ▶ Select .
- ▶ Select storage space, enter the recipe name and confirm by pressing .
- The amended recipe is now saved.





A storage space that is already being used can be overwritten.



Recipes that have been amended from recipe books are not saved in the recipe book, but under  «Own recipes». The original recipe remains in the corresponding recipe book.

Deleting your own recipe

Any recipe in  «Own recipes» can be deleted.

- ▶ Select  «Own recipes».
- ▶ Select .
- ▶ Select the recipe to be deleted.
 - The following appears in the display: «Do you want to delete this recipe?»
- ▶ To delete the recipe, select «Yes».
 - The recipe is deleted.




7.3 BakeOmatic

BakeOmatic  comprises applications for different food groups. The size and shape of the food are recognised and the duration and cooking space climate are adjusted automatically.  BakeOmatic is suitable for the following foods and dishes:

| | |
|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Fresh aperitif nibbles |  * Frozen pizza (F) * |
|  * Frozen aperitif nibbles (F) * |  Flan |
|  Gratin |  Bread |
|  Soufflé/sweet baked dishes |  Plaited bread |
|  Baked potatoes |  Yeast pastry with filling |
|  * Pre-fried frozen products * |  Muffins/tray-baked cakes |
|  Braising meat |  Cake |
|  Fresh pizza | |

* applies only to appliances which were produced after March 2016 or have received a software update.

Degree of browning

For certain food categories, the degree of browning can be adjusted by selecting the  «lightly browned»,  «medium browned» or  «well browned» setting.



When used for frozen products, the approximate duration indicated on the packaging must be selected instead of the degree of browning. Frozen products are prepared in a variety of ways.


Duration

When BakeOmatic starts, sensors determine the optimum duration. The effective duration is displayed after about 10–15 minutes.



Before starting, the cooking space must have cooled down and dried out in order to determine the optimum duration. The appliance door must not be opened whilst the duration is being determined.

Preheating

In the case of the  «Flan» food category, after starting, separate preheating takes place first. Do not put the food in until preheating has ended.



Selecting and starting BakeOmatic



The filled water tank must be in position in the water tank compartment.




A delayed start is only possible for applications where preheating is not required and is only suitable for food that does not need to cool or rise.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select **Ä**.
- ▶ Select the desired application.
- ▶ Select the degree of browning or, for frozen products, the appropriate time indicated on the packaging.
 - The BakeOmatic settings are displayed.
- ▶ Set an end time or delayed start if necessary.
- ▶ To start BakeOmatic, select ►.
 - Depending on the application, the cooking space may be preheated first; when the temperature is reached, an acoustic signal is emitted.
 - The following appears in the display: «Put in the food. Select ✓ to continue.».
- ▶ Place the food onto the appropriate level.
- ▶ To confirm the message, select ✓.
 - The display reads « is being determined.».
 - The remaining time appears on the display and in the digital display.







The appliance door must not be opened whilst the duration is being determined. Otherwise, the optimal duration and temperature will not be calculated correctly.

7.4 Professional baking

With professional baking , the cold cooking space is heated by a steam phase (about 10 minutes) and a hot air phase, which follows automatically. This makes yeast and puff pastries light and airy while also forming a nice, glistening crust. «Proofing» allows you to proof a large batch of dough or pre-prepared portions at optimal temperature and humidity levels.


Professional baking  has the following range of uses:

-  Bread
-  Plaited bread
-  Puff pastry
-  Proofing






The appliance door must not be opened during the steam phase, as this would allow cold air to stream in, extending the steaming phase and oversteaming the bread. The bread would come out flatter as a result.

Tips

- Allow bread, bread buns and other yeast pastries to proof for about 15 minutes after forming into shape. Place on a stainless steel tray, which has been lined with baking paper, put it into the cold cooking space and bake.
- The adjustable temperature corresponds to that of the hot air phase. The temperature during the steam phase is preset.
- For a nice, crispy crust, the smaller the baked goods, the higher the temperature. The optimum temperature for bread buns is generally higher than for a single loaf of bread.
- When using  «Plaited bread», we recommend brushing the baked goods with egg beforehand.

Selecting and starting professional baking

- ▶ Put in the food.
- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .


- ▶ Select the desired application.
 - The operating mode settings are displayed.
- ▶ Set the temperature, duration and, if necessary, an end time or delayed start and confirm.
- ▶ To start  professional baking, select ▶.





The filled water tank must be in position in the water tank compartment.

7.5 Soft roasting

How it functions

The  soft roasting function allows high-quality cuts of meat to be prepared gently. You can select exactly when the cooking process is complete, irrespective of the weight and thickness of the meat. The temperature is automatically regulated.

The cooking time can be set to between 2½ and 4½ hours for  «Soft roasting seared» or between 1½ and 2½ hours for  «Soft roasting with steam».

Tips for an optimal result

- Take the meat out of the refrigerator ½ to 1 hour before soft roasting.
- Weight of meat:
 - Soft roasting seared: 500–2000 g
 - Soft roasting with steam: 500–1500 g
- Meat food probe temperature: up to 90 °C
- Meat thickness: at least 4 cm
- Quality: lean, high-quality meat

Soft roasting table for «Soft roasting with steam» and «Soft roasting seared»

| Cut of meat | Degree of doneness | Recommended target temperature °C | |
|-------------------------|--------------------|-----------------------------------|--------|
| | | With steam | Seared |
| Fillet of veal | rare | 54 | 58 |
| | medium | 58 | 62 |
| Rump or loin of veal | medium | 59 | 63 |
| Fillet of beef | rare | 49 | 53 |
| | medium | 53 | 57 |
| Rib-eye or sirloin | rare | 49 | 53 |
| | medium | 53 | 57 |
| Rump of beef | medium | 59 | 63 |
| Rump or loin of pork | medium | 61 | 65 |
| Leg of lamb | rare | 59 | 63 |
| | medium | 63 | 67 |
| Freely select meat type | – | 60 | 70 |

«Soft roasting seared»

- Season or marinate the meat.



Remove any marinade made with herbs, mustard, etc. from the meat before searing. These ingredients burn easily.

- Salt the meat immediately before searing.
- Briefly sear the meat all over for no longer than 5 minutes.
- Then place the meat in a glass or porcelain roasting dish.



If you do not intend to sear the meat until after the soft roasting, lower the recommended target temperature by around 3–4 °C.

- Insert the food probe into the meat so that the tip is in the centre of the thickest part.



The food probe must be inserted as far into the middle of the meat as possible to get a correct reading of the food probe temperature. The temperature inside the meat is crucial for optimal results at the end of cooking.

- ▶ Put the wire shelf at level 1 and place the dish on it.
- ▶ Insert the food probe plug into the socket.
- ▶ Start \mathcal{A}^{S} «Soft roasting seared» (see page 47).

«Soft roasting with steam»

For \mathcal{A}^{S} «Soft roasting with steam», the meat is cooked gently with steam. Since steam transfers energy better, shorter cooking times and thus energy savings are possible. As steam produces condensate, more residual water is left in the cooking space at the end of the cooking process than with «Soft roasting seared».

- ▶ Insert the food probe into the meat so that the tip is in the centre of the thickest part.



The food probe must be inserted as far into the middle of the meat as possible to get a correct reading of the food probe temperature. The temperature inside the meat is crucial for optimal results at the end of cooking.

- ▶ Push the stainless steel tray into level 1 and the perforated cooking tray with the meat into level 1.



The perforated cooking tray allows the condensate to drain and so prevents the meat from overcooking.

Tip: If you would like to add more flavour to the meat, lay it on a bed of fresh herbs or hay.

- ▶ Insert the food probe plug into the socket.
- ▶ Start \mathcal{A}^{S} «Soft roasting with steam» (see page 47).
- ▶ After soft roasting, gently sear the meat all over for a total of 4–6 minutes.
- ▶ After searing, wrap the whole piece of meat in aluminium foil and leave it covered for about 5 minutes.
- ▶ Cut the meat and serve immediately.





As the meat is only seared after soft roasting for optical reasons, the recommended target temperature is 4 °C lower than for «Soft roasting seared».


Selecting and starting soft roasting




The longer the meat is cooked, the more tender and succulent it becomes. This applies particularly for thicker pieces of meat. The target temperature cannot be changed once soft roasting has started.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the desired soft roasting method.
- ▶ Select the desired type of meat.
- ▶ Select the desired cut.



- ▶ If the desired type of meat or cut cannot be selected, select the  «Freely select meat type» option.

- ▶ Select the degree of doneness (not possible for  «Freely select meat type»).
- The operating mode settings are displayed.
- A recommended value appears above the target temperature.
- ▶ Adjust the recommended value if necessary and set a delayed start if you wish.
- ▶ To start soft roasting, select ▶.





The food probe must be plugged in.

- Soft roasting starts.
- The set target temperature, the current food probe temperature and the remaining time are displayed.
- The remaining time appears in the digital display.







The appliance door must be closed during operation. If the appliance door is opened while soft roasting is running, the operation is interrupted and then, after a short time, cancelled.


Inadvertently interrupting the programme

- ▶ If the  touch button is pressed, the soft roasting programme is interrupted.
 - The following appears in the display: «Should  be cancelled?»
- ▶ To continue soft roasting, select «No».
 - Operation is continued.

Cancelling / ending soft roasting before time


- ▶ Select  in the soft roasting settings or press the  touch button.
 - The following appears in the display: «Should  be cancelled?».
- ▶ Select «Yes».
 - Operation is cancelled.
- ▶ To switch off the appliance, press the .





If you accidentally pressed «Yes» or you wish to finish cooking the meat, you must press the  touch button and select an operating mode. «Soft roasting» is not suitable for partially meat.



7.6 RegenerateOmatic

How it functions

With  «RegenerateOmatic», food can be heated without having to set an operating mode, temperature or duration. The quantity and shape of the food are recognised and the regeneration time and cooking space climate are adjusted individually and automatically.

Degree of moisture



With RegenerateOmatic, you can choose between  «Regenerate moist» and  «Regenerate crispy».

| Degree of moisture | Uses |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  | Foods that should not dry out e.g. vegetables, meat, pasta |
|  | Foods that should be crispy after regeneration e.g. pizza, flans, aperitif nibbles |

Regeneration time

Sensors detect when the food is hot.

The approximate time for the most common uses is as follows:

-  «Regenerate moist»: 10–14 minutes
-  «Regenerate crispy»: 14–18 minutes

Selecting and starting RegenerateOmatic







Before starting, the cooking space should have cooled down and be dry in order to determine the optimum duration.

The appliance door should not be opened during operation.

 


The filled water tank must be in position in the water tank compartment.

- ▶ Put the food in a heat-resistant dish, place it on the wire shelf and push it into the cold cooking space.
- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the  «Moist» or  «Crispy» degree of regeneration.
- ▶ Set an end time or delayed start if necessary.



An estimated average regeneration time is used to calculate the delayed start. The regeneration can therefore also be ended earlier or later.

- ▶ Select ► to start.
 - Operation starts.
 - The following appears in the display: « is being determined».
 - The remaining time is then displayed.



The operation cannot be extended after the end of the regeneration.

7.7 Wellness *

* applies only to appliances which were produced after March 2016 or have received a software update.

With 🌿 «Wellness», the following items can be prepared for personal well-being:

- Hot towels
- Hot wraps
- Hot stones for massage
- Cherry stone or grape seed cushions



Caution hot!

Feel the temperature of the heated objects with your hand first before placing them on any other parts of the body.

Hot towels

Before starting the application:

- ▶ Wet and wring out the towels.
- ▶ Place towels open in the perforated cooking tray, or:
- ▶ Roll up the towels to the desired size and place in the perforated cooking tray.

Hot wraps

Before starting the application:

- ▶ Place the prepared towels spread as widely as possible in the perforated cooking tray.

Hot stones

Before starting the application:

- ▶ Add the clean, smooth stones to suitable containers and place the containers directly on the bottom of the cooking space.

Cherry stone or grape seed cushions

Before starting the application:

- ▶ Add the cherry stone or grape seed cushions to suitable containers and place the containers directly on the bottom of the cooking space.

7.8 Hygiene *

* applies only to appliances which were produced after March 2016 or have received a software update.

You can sterilise containers using  «Hygiene». The following applications are available:

- «Sterilise baby bottles» replaces the need to boil baby bottles in hot water.
- «Prepare bottling jars» replaces the need to prepare empty jars by rinsing them with hot water.
- «Preserve bottling jars» helps to preserve the jam for longer.

Baby bottles

Before starting the application:

- ▶ Clean the bottles.
- ▶ Unscrew the bottles and place all parts into the perforated cooking tray.

Once the application is finished:

- ▶ Place the bottles upside down on a clean kitchen towel and leave to dry completely.

7.9 Keep warm *


* applies only to appliances which were produced after March 2016 or have received a software update.

Cooked foods can be kept warm using the  «Keep warm» setting.



If the cooking space is already hot, open the appliance door and allow the cooking space to cool down for 3 to 4 minutes before starting the «Keep warm» function. This ensures that the food does not overcook. The longer the food is kept warm, the greater the changes may be to the consistency of the food.

8 EasyCook

 EasyCook helps you to prepare any food simply and conveniently. After choosing the food group and food, the appliance suggests the suitable operating modes or GourmetGuide applications, including the settings and accessories.



The brochure of the same name, which you received with the operating instructions, contains the same settings information in paper form. The values given for temperature and duration serve only as guide. They may vary depending on the type and size of the food as well as on individual preference.

8.1 Overview of food groups

Foods are categorised into different groups; an item of food can appear in more than one group.

The following food groups can be selected:



Vegetables



Fruit



Mushrooms



Pulses



Grains



Potatoes



Meat



Poultry



Fish and seafood



Flans and pizza



Bakery products



Baked dishes and gratins



Accompaniments



Desserts



Dairy products






Eggs



Chestnuts

8.2 Selecting foods and starting

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
 - The overview of food groups is displayed.
- ▶ Select the food group.
- ▶ Select the desired type of food.
- ▶ If necessary, select the shape (whole, in pieces, etc.) of the food.
- ▶ If necessary, select the preparation method (cooking, baking, etc.).
- The display contains information about:
 - Temperature
 - Duration
 - Preheating necessary/not necessary
 - Accessories required
 - Level
 - Possible tips
- ▶ Select .
- ▶ The operating mode summary is displayed.
- ▶ To start operation, select .




You can change the set values to a limited extend frame.


9 Favourites

Up to 24 operating modes, GourmetGuide and EasyCook applications together with the settings made can be saved as favourites.


9.1 Creating favourites

- ▶ Select an operating mode, GourmetGuide or EasyCook application.
- ▶ Make the settings.
- ▶ Press the  touch button.
 - The favourites menu opens.
- ▶ Select a storage space and confirm.
- ▶ Enter the name of the favourite using the on-screen keypad and confirm.
 - The favourite is saved.



9.2 Selecting and starting favourites

- ▶ Press the  touch button.
- ▶ Choose the desired favourite and select «Yes».
- ▶ To start the favourite, select ▶.
 - The favourite starts.

9.3 Changing favourites

- ▶ Select the desired favourite.
- ▶ Adjust the settings as you wish.
- ▶ Press the  touch button.
- ▶ Select the storage place or favourite that is to be overwritten.
- ▶ Enter the favourite name or overwrite as appropriate.
 - The modified favourite is saved.

9.4 Deleting favourites




- ▶ If the appliance has another menu open, press the  touch button.
- ▶ Select .
- ▶ Select the favourite to be deleted.
 - The following appears in the display: «Do you want to delete this favourite?».
- ▶ To delete the favourite, select «Yes».
 - The favourite is deleted.

10 Tips and tricks

10.1 Unsatisfactory cooking result...

...when baking and roasting

| Result | Solution |
|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ The baking or roast looks good on the outside but is still doughy or raw on the inside. | <ul style="list-style-type: none"> ▶ Next time, set a lower temperature and lengthen the operating time. |
| <ul style="list-style-type: none"> ▪ The cake collapses. | <ul style="list-style-type: none"> ▶ Check that the settings used correspond to those recommended in «EasyCook». ▶ Next time, set a lower temperature and lengthen the operating time. ▶ Stir the cake mixture well. When finished, bake immediately. ▶ For whisked sponges, beat the egg yolks / egg whites to a foam a little longer and then carefully fold into the mixture. When finished, bake immediately. ▶ Follow the instructions on how much baking powder to add. |

| Result | Solution |
|---------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ The baking has browned unevenly. | <ul style="list-style-type: none"> ▶ Next time, set a lower temperature and adjust the operating time. ▶ If using ,  and , check that the levels used correspond to «EasyCook». ▶ Do not push baking tins or bulky foodstuffs right to the back of the cooking space. |
| <ul style="list-style-type: none"> ▪ The baked goods have come out lighter on one baking tray than on the other. | <ul style="list-style-type: none"> ▶ Check that the settings used correspond to those recommended in «EasyCook». |



Some uneven browning is normal. More even browning is generally achieved at lower temperatures.



...for regenerated foods

| Result | Solution |
|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| ▪ Regenerated food is dried out. | ▶ Next time, set a lower temperature and reduce the operating time. ▶ Use 🔼 «RegenerateOmatic moist». |
| ▪ Too much condensate on or around the regenerated food. | ▶ Next time, set a higher temperature and lengthen the operating time. ▶ Use 🔼 «RegenerateOmatic crispy». |

10.2 General tips

- Several foods can be cooked simultaneously to save energy, e.g. rice or pulses together with vegetables with similar cooking times.
- With the appropriate amount of liquid, grains, e.g. rice or millet, and pulses, e.g. lentils, cook directly in suitable tableware.
- Put the tableware directly on the perforated cooking tray or wire shelf.

10.3 Saving energy

The  operating mode consumes less energy than the  operating mode.















- ▶ Avoid opening the appliance door frequently.
- ▶ Only switch the illumination on when needed.
- ▶ For gratins, use the residual heat: for cooking times over 30 minutes, switch the appliance off 5–10 minutes before the end of the operating time.
- ▶ Minimize preheating.
- ▶ Only preheat the cooking space if the cooking or baking results depend on it.




Power consumption can be reduced to a minimum by selecting «Hide time» in the user settings. Despite automatic energy-saving stand-by, all safety functions remain active.

11 User settings

11.1 Overview of user settings



| | | | |
|-----------------------------------------------------------------------------------|----------------------|-----------------------------------------------------------------------------------|-----------------------|
|  | Language |  | Volume |
|  | Display |  | Assistance functions |
|  | Date |  | Temperature |
|  | Clock |  | Childproof lock |
|  | Notifications |  | Appliance information |
|  | Descalcify appliance |  | Demo mode |
|  | Water hardness |  | Factory settings |

11.2 Adjusting user settings

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.

- The user settings main menu appears in the display:



- ▶ Select the desired user setting or submenu.
- ▶ Adjust the desired user setting and press the adjusting knob to confirm.
 - Either the user settings main menu or the relevant submenu appears in the display.
- ▶ To exit a submenu and return to the user settings main menu, select .
- ▶ To exit the user settings, press a different touch button or the  touch button.



All user settings are retained in the event of a power failure.

11.3 Language

The language in the display can be changed. Different languages are available for selection.

11.4 Display

Contrast

With this function, the readability of the display can be adjusted based on how the appliance is installed.

Brightness

The brightness of the display can be changed.

Start screen *

* applies only to appliances which were produced after March 2016 or have received a software update.

With this user setting, you can determine the menu that is displayed when you start the appliance. The following menus can be selected:

- Operating modes (factory set)
- GourmetGuide
- EasyCook
- Favourites

Appliance switch-off time

If no operating mode is running but the appliance is switched on, it is automatically switched off after a certain period of time without any user interaction.

Example: After the end of an operating mode.




The appliance switch-off time can be set between 3 and 30 minutes; the factory setting is 15 minutes.

11.5 Date

The date can be retrieved and changed.

11.6 Clock

The following time functions are available:

-  Time
- ¹²/₂₄ Time format
-  Time display
-  Mains synchronization

Time format

The time can be displayed in the European 24-hour time format or the US 12-hour format (a.m./p.m.).

Time display

With the «Show time» setting (factory setting), the time is dimmed between 00:00 and 06:00 (24-hour format) or 12:00 a.m. and 06:00 a.m. (12-hour format).

If «Hide time» is selected, the displays are not illuminated when the appliance is off.



To reduce power consumption to a minimum, select «Hide time» in the user settings. Despite automatic energy-saving stand-by, all safety functions are active.

Mains synchronisation

Mains synchronisation synchronises the appliance clock with the mains frequency. Irregular mains frequency can cause the clock to not run correctly. A pulse generator inside the appliance is used when mains synchronisation is switched off.

11.7 Notifications

Acoustic signals and instruction messages can be switched off or disabled.

11.8 Descaling the appliance

This function can be used to descale the appliance or read the remaining operating time until the next descaling process.

See Descaling (see page 69).

11.9 Water hardness

The appliance features a system that automatically indicates when it is time to descale. The system can be optimised for households with soft water (also through using a water softening appliance) and medium water hardness by changing the user settings to the relevant range of water hardness.

There are three settings for water hardness:

| Type | Water hardness [°fH] | Water hardness [°dH] | Water hardness [°eH] |
|----------|-------------------------|-------------------------|-------------------------|
| ▪ Hard | 36 to 50 | 21 to 28 | 26 to 35 |
| ▪ Medium | 16 to 35 | 9 to 20 | 12 to 25 |
| ▪ Soft | 1 to 15 | 1 to 8 | 1 to 11 |

11.10 Volume

The acoustic signal can be set at one of two levels of loudness or can be completely switched off.




An acoustic signal is emitted in the event of a malfunction even if the setting is set to «off».

A short acoustic signal is emitted when the appliance is switched off even if the setting is set to «off» (safety function).


11.11 Assistance functions

Illumination

The «Automatic» setting switches on the cooking space illumination:


- 3 minutes before a cooking process ends, e.g. in the case of an automatic programme or an operating mode with a set duration,
- if the operation is ended before time, i.e. cancelled (using ■ or the  touch button),
- when the appliance door is opened.





Press the  sensor button to switch the illumination on or off at any time.

If the illumination is not switched off, it will go out after a maximum of 5 minutes to save electricity.

Press and go

 «Press and go» refers to the period of time after which an operating mode/ programme starts automatically as long as all necessary settings are available or have been made. Adjusting the settings restarts the countdown.

 «Press and go» can be switched on or off.

When  «Press and go» is activated, values between 10 seconds and 1 minute are possible; the factory setting is 20 seconds.

11.12 Temperature

Temperature unit

The temperature can be displayed in «°C» or «°F».

- °C: Degrees Celsius
- °F: Degrees Fahrenheit

Default value for soft roasting

The default value is the target temperature that is automatically set when soft roasting. With this user setting, it can be increased or decreased by up to 4 °C; the setting then applies for all cuts of meat.

Example: When using «Soft roasting seared» with a 2 °C increase in the default value, a «medium» fillet of beef is cooked to a target temperature of 59 °C instead of 57 °C.

11.13 Childproof lock

The childproof lock is to prevent children accidentally switching on the appliance.

When the childproof lock is activated, the appliance can only be operated after first entering a code. The code is displayed in reverse order when unlocking.



The childproof lock activates 3 minutes after the appliance is switched off.

11.14 Appliance information

Under  «Appliance information», you will find:

- A link to the Service Desk
- The article and serial number (FN) of your appliance
- The software versions of your appliance as well as the acoustic signals and background images currently being used (depending on model)
- The operating data:
 - Number of descaling processes already performed
 - Date and time of the last descaling process
 - The current steam operating time

11.15 Demo mode

In demo mode, almost all the appliance functions are available but it is not possible to cook with the appliance. This ensures operating safety during product demonstrations and consultations.

It is only possible to switch demo mode on and off with a safety code.

11.16 Factory settings

If one or more user settings have been changed, these can be reset to the factory settings.

12 Care and maintenance



Risk of burns from hot surfaces!

You should allow the appliance and the accessories to cool before cleaning.

Do not reach into the water tank compartment if the following appears in the display: «Please do not remove the water tank».

Improper use can result in damage to the appliance!

Do not use any abrasive or caustic cleaning agents, metal scrapers that are sharp or scratch, steel wool, abrasive scouring pads, etc. These products will damage the surfaces. Glass surfaces that are scratched can crack.

Never use a steam cleaner to clean the appliance.

12.1 Cleaning the exterior


- ▶ Remove any soiling or excess cleaning solution immediately.
- ▶ Clean the surfaces with a soft cloth dampened with water and a little washing-up liquid – for metallic surfaces rub in the direction of the original polish lines.
- ▶ Wipe dry with a soft cloth.

12.2 Cleaning the cooking space



Improper use can result in damage to the appliance!

Do not bend the temperature sensor.

- ▶ Any condensate or food particles must be completely removed after each cooking session with steam.
- ▶ Place the stainless steel tray under the perforated cooking tray or wire shelf when cooking to catch food particles and condensate.
- ▶ Remove any soiling from the cooking space while still hand warm. Use a soft cloth dampened with water and a little washing-up liquid. Wipe dry with a soft cloth.
- ▶ To remove dried-on soiling more easily, switch the appliance on for about 30 minutes beforehand, setting it to the  operating mode and a temperature of 80 °C. This will soften the soiling.

- ▶ For stubborn soiling, e.g. chicken, clean the cooking space when cold with a grease-dissolving spray cleaner or cream cleaner in accordance with the manufacturers' instructions.



With use, the cooking space will over time turn a golden colour, which is normal for stainless steel. Neither the cooking and baking properties of the appliance nor its operation is affected.

Blue tarnish spots and condensate residue can be removed using a mild acidic cleaning agent or some lemon juice.



Over time with use, the cooking space can turn a shimmering rainbow colour or the surface can turn slightly matt. Neither the cooking and baking properties of the appliance nor its operation is affected.

These discolourations can be removed using a non-abrasive cream cleaner.

12.3 Cleaning the appliance door

- ▶ Clean the appliance door with a soft cloth dampened with water and a little washing-up liquid.
- ▶ Wipe dry with a soft cloth.

Removing the appliance door




Risk of injury from moving parts!


Be careful not to put fingers in the door hinges.

The appliance door is heavy. When removing and reassembling the appliance door, hold it firmly at the sides with both hands.

- ▶ Open the appliance door as far as it will go.
- ▶ Fold the clips **2** on both door hinges **1** forward.

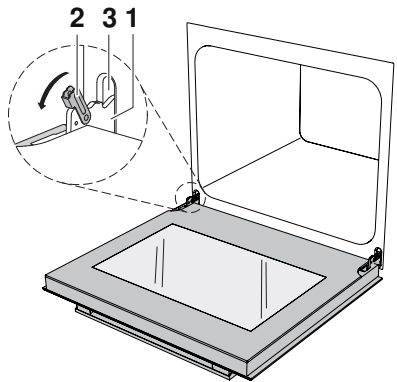

- ▶ Close the appliance door as far as its at-rest position (about 30°).
- ▶ Lift the appliance door out at an angle.

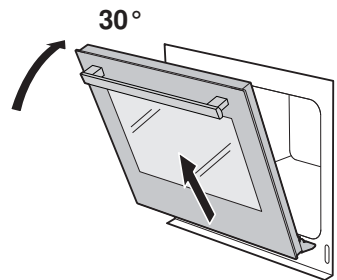

Reassembling the appliance door

- ▶ From the front, push both hinges **1** into the opening **3**.
- ▶ Open the appliance door as far as it will go and close back the clips **2**.

12.4 Cleaning the door seal

- ▶ Clean the door seal with a soft cloth dampened with water, but do not use any cleaning agent.
- ▶ Wipe dry with a soft cloth.

12.5 Replacing the door seal

For safety reasons, the door seal must be replaced by our Customer Services.

12.6 Replacing the halogen light bulb

For safety reasons, the halogen light bulb must be replaced by our Customer Services.

12.7 Cleaning the accessories and shelf guides




Improper use can cause damage!

Do not clean the food probe and the water tank in the dishwasher.

- The stainless steel tray, the perforated cooking tray, the wire shelf and the shelf guides can be cleaned in the dishwasher.
- Watermarks in the water tank can be removed using a standard descaler (not detergent).
- ▶ Clean the food probe with a soft cloth dampened with water and a little washing-up liquid.
- ▶ If the water tank valve drips, descale it.

Removing the shelf guides

- ▶ Loosen front knurled nut **1** on shelf guides by turning it anti-clockwise.
- ▶ Ease shelf guides **2** away from the screw by moving them in a sideways direction and then take them out at the front.

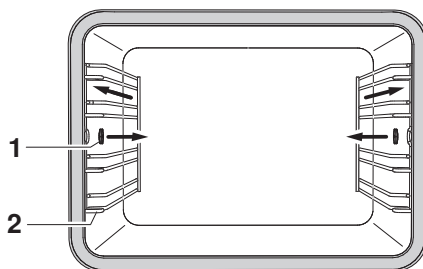

Reassembling the shelf guides


- ▶ Insert the shelf guides into the openings in the back wall of the cooking space and position on the screws. Place the knurled nuts on the screws and tighten securely in a clockwise direction.

12.8 Descaling

How it functions

Whenever steam is produced, depending on the hardness of the local water supply (i.e. the limescale content of the water), limescale is deposited in the boiler.

The appliance automatically detects when descaling is necessary and indicates this information.

- After pressing the  touch button and at the end of each cooking process, the following appears in the display:
- Would you like to descale the appliance now?
You must accompany the process.



We recommend descaling the appliance whenever the warning appears in the display.

Continued failure to descale the appliance will likely impair its functions or cause damage to the appliance.

Descaling takes about 45 minutes.

Descaling interval

The time interval between descaling depends on the hardness of the water and frequency of use. If steaming 4× 30 minutes per week, the appliance must be descaled – depending on water hardness – roughly as follows:

| Water hardness | Descal after about |
|----------------|--------------------|
| Hard | 5 months |
| Medium | 8 months |
| Soft | 12 months |

Read remaining operating time

The remaining steam operating time until the next descaling process can be read in the user settings under «Descaling».

Descaler

durgol swiss steamer



Using the wrong descaler can damage the appliance!

Only use «durgol swiss steamer» to descale your appliance.

The descaler contains highly effective acid. Immediately rinse away any splashes with water. Follow the manufacturer's instructions.



See «Accessories and spare parts» for where to obtain this descaler.



«durgol swiss steamer» was developed especially for this appliance.

Standard descaling solutions are not suitable as they may contain foam-creating additives or not be effective enough.

Using a different descaler could cause:

- Overfoaming inside the appliance
- Insufficient descaling of the boiler
- Damage to the appliance in the worst case.

Starting the descaling process



The appliance must have cooled down before descaling.

Remove accessories, dishes or other objects from the cooking space.


Do not leave the appliance unattended: During the descaling process, the descaler must be filled and the water tank must be emptied.

The appliance door must be kept closed during descaling.

When the following message appears in the display «Would you like to descale the appliance now? You must accompany the process.»:

- ▶ Select «Yes».
- ▶ The following appears in the display: «The appliance is being prepared for descaling.»



If an acoustic signal is emitted and « Residual heat too high» appears in the display, the appliance has not cooled down sufficiently and the descaling process cannot be started.

- ▶ Allow the appliance to cool down.
- ▶ As soon as the corresponding message appears in the display: fill the water tank with 0.5 l undiluted descaler, insert the tank and select ▶.
 - The descaling process starts.
 - The following appears in the display: «Descaling appliance.»



For safety reasons, once started the descaling process cannot be cancelled.

Replacing the rinsing solution

- ▶ As soon as the corresponding message appears in the display, remove the water tank, pour the rinsing solution away and fill it with 1 l warm water.
- ▶ Put the water tank back.
 - The rinsing phase starts automatically.
 - The following appears in the display: «Rinsing appliance.».
- ▶ Repeat the process as often as is necessary.




 


As the water is heated up during final rinsing, the appliance door may steam up.

Ending the descaling process

- ▶ As soon as the corresponding message appears in the display, remove, empty and dry the water tank.
- ▶ Wipe up any water in the bottom of the cooking space with a soft cloth.
- ▶ To confirm the message, select ✓.
 - The following appears in the display: «Appliance has been successfully descaled».
- ▶ To confirm the message, select ✓.
 - The appliance is ready for operation again.



For the , ,  or  operating modes, after descaling, the water that is pumped back into the water tank may not be clear. This will not affect the cooking or baking characteristics nor the quality of the food being cooked or baked.

13 Trouble-shooting

13.1 What to do if ...

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.



Before calling Customer Services, please note down the error message in full.

Fxx/Exxx see operating instructions

FNxxxxx xxxxxx.

... the appliance is not working

| Possible cause | Solution |
|----------------------------------------------------|----------------------------------------------------------------------------------------------|
| ▪ A household fuse or circuit breaker has tripped. | ► Change the fuse. ► Reset the circuit breaker. |
| ▪ The fuse or circuit breaker keeps blowing. | ► Call Customer Services. |
| ▪ An interruption in the mains power supply. | ► Check the power supply. |
| ▪ Demo mode is switched on. | It is only possible to switch off demo mode with a safety code. ► Call Customer Services. |
| ▪ The appliance is faulty. | ► Call Customer Services. |

... just the illumination is not working

| Possible cause | Solution |
|-----------------------------------|---------------------------|
| ▪ The halogen light is defective. | ► Call Customer Services. |


... the cooking time seems unusually long

| Possible cause | Solution |
|-----------------------------------------------------|-------------------------------------|
| ▪ The appliance only has a single-phase connection. | ► Establish a two-phase connection. |

... no visible steam is produced when steaming

| Possible cause | Solution |
|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| <ul style="list-style-type: none"> The temperature of the cooking space is over 100 °C. | <p>No solution required: Steam is invisible above 100 °C.</p> |

...the food probe temperature is not displayed

| Possible cause | Solution |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> The food probe is not plugged in correctly. | <ul style="list-style-type: none"> ▶ Check whether the food probe is correctly plugged into the socket. ▶ Check whether the food probe is correctly inserted in the food: The tip must be in the centre of the thickest part. |
| <ul style="list-style-type: none"> In the selected automatic programme, the food probe cannot be used; the $\wedge^{\circ}\text{C}$ symbol is illuminated in grey. | <ul style="list-style-type: none"> ▶ If you wish to use the food probe in spite of this, change to the  operating mode menu and set a suitable operating mode. |
| <ul style="list-style-type: none"> The food probe or the socket is defective. | <ul style="list-style-type: none"> ▶ Call Customer Services. |



The food probe temperature is never displayed during the heating process.

...the control panel has steamed up

| Possible cause | Solution |
|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> Steam escaping when using operating modes with steam. | <p>It is normal for the control panel to steam up temporarily.</p> <ul style="list-style-type: none"> ▶ When closing the appliance door, make sure that it forms a seal all the way round. ▶ If it keeps steaming up, call Customer Services. |

...the appliance makes noises during operation

| Possible cause | Solution |
|------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| <ul style="list-style-type: none"> The appliance may emit noise when operating (e.g. switching and pumping noises). | Such noise is normal. |


... the clock is not running correctly

| Possible cause | Solution |
|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> Irregular mains frequency | <ul style="list-style-type: none"> Switch off the mains synchronization. |
| <ul style="list-style-type: none"> Internal pulse generator is imprecise when mains synchronization is switched off. | <ul style="list-style-type: none"> Call Customer Services. |

...the following appears in the display

FX/EXX see operating instructions


FN XXX XXXXXX

| Possible cause | Solution |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> Various situations can lead to an error message. | <ul style="list-style-type: none"> Cancel the error message by pressing the  touch button. Disconnect from the power supply for about 1 minute. Reconnect the power supply. If the error appears again, note down the error message in full along with the serial number (FN; see identification plate). Disconnect from the power supply. Call Customer Services. |

... the following appears in the display

UX/EXX see operating instructions

FN XXX XXXXXX

| Possible cause | Solution |
|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">▪ An interruption in the power supply. | <ul style="list-style-type: none">▶ Cancel the error message by pressing the  button.▶ Disconnect from the power supply for about 1 minute.▶ Reconnect the power supply.▶ If the error appears again, note down the error message in full along with the serial number (FN; see identification plate).▶ Disconnect from the power supply.▶ Call Customer Services. |

...the following appears in the display

 Residual heat

Do not remove the water tank.

| Possible cause | Solution |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">▪ Water temperature in the boiler is too high. | <ul style="list-style-type: none">▶ Wait for it to cool down (this can take up to 30 minutes). <p>For safety reasons, water is only pumped off when it falls below a certain temperature. The appliance may be used without further ado.</p> |

...the following appears in the display

Descaling failed.

Appliance has not been descaled.

| Possible cause | Solution |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▪ Used unsuitable descaler. | ► Descale again using the recommended descaler. |
| ▪ Descaling was not carried out correctly. | ► If the message does not disappear after repeating the descaling process several times, note down the error message in full and the serial number (FN; see identification plate). ► Call Customer Services. |

13.2 After a power failure

The user settings remain unchanged.

Brief power failure during operation

- The current operation of the appliance is aborted.
- The following appears in the display when the appliance is switched on: «Power failure. Operation aborted».
- To confirm the message, select ✓.
 - The operating modes menu appears in the display.

Brief power failure during descaling

- The descaling process is interrupted.
- The following appears in the display when the appliance is switched on: « Power failure. Continuing descaling.»
- To confirm the message, select ✓.
 - The descaling process continues.

Prolonged power failure

Scenario 1 *

* applies only to appliances which were produced after March 2016 or have received a software update.

The process involved in using the appliance for the first time is carried out after a prolonged power failure. However, only the language and time need to be reset to enable the appliance to be operated again. It is not necessary to make any other settings.

- If a descaling process was running, the descaling process continues.

Scenario 2 **

** applies only to appliances produced before or during February 2016.

The process involved in using the appliance for the first time is carried out after a prolonged power failure. However, only the time needs to be reset to enable the appliance to be operated again. It is not necessary to make any other settings.

- The following appears in the display when the appliance is switched on: «Power failure. Set time.»
- ▶ To confirm the message, select ✓.
 - The «Clock» menu in the user settings appears in the display.
- ▶ Select ⌚, set the time and confirm.
 - The «Clock» menu appears again in the display.
- ▶ Select ↶.
 - The following appears in the display: «Do you want to continue using for the first time?»
- ▶ If you wish to make additional user settings, select «Yes».
 - The relevant user settings menu appears in the display.
- ▶ If you do not wish to make any additional user settings, select «No».
 - The appliance is ready for operation again.
 - If a descaling process was running, the descaling process continues.

14 Accessories and spare parts

The accessories listed below, as well as spare parts, can also be ordered in addition to the scope of delivery of the appliance. Ordering is subject to a fee, except in the event of warranty claims. Please give the product family of the appliance and exact description of the accessory or spare part when ordering parts.

14.1 Accessories

Gastronorm stainless steel tray $\frac{2}{3}$



Gastronorm perforated cooking tray $\frac{2}{3}$



Wire shelf



Food probe with straight handle



EasyCook brochure



Recipe book



Gastronorm (GN) is a sizing system used in the catering industry. The basic measurement $\frac{1}{4}$ GN is 325 × 530 mm.

14.2 Special accessories

For information see:

www.vzug.com

14.3 Spare parts

Shelf guides
left/right




Knurled nut



Lid for water tank



Water tank

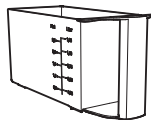

durgol swiss steamer
descaler



The descaler is also available from specialist retailers.


15 Technical data

Dimensions


- See installation instructions

Electrical connection

- See identification plate 1

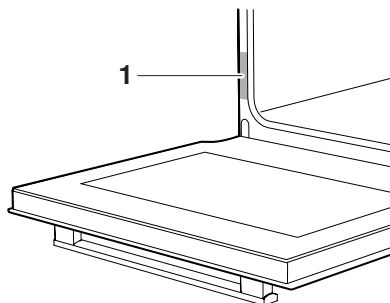

15.1 Note for testing institutes

The energy efficiency class according to EN 50304/EN 60350 is determined using the  operating mode.

Placing thermocouples between the appliance door and the seal can cause lack of leak-tightness and thus measuring errors.

The usable volume as defined by EN 50304/EN 60350 is obtained with the shelf guides disassembled.

General note

Maximum load capacity: 2 kg

15.2 Temperature measurement


The temperature of the cooking space is measured when the cooking space is empty according to an internationally accepted standard. Own measurements can be imprecise and are not suitable for checking the accuracy of the temperature.

15.3 Product data sheet

| In accordance with EU Regulation No.: 66/2014 | | |
|---------------------------------------------------------------------------|---------------|--------------|
| Brand | – | V-ZUG Ltd |
| Type of appliance | – | Steam cooker |
| Model designation | – | CSTHSL |
| Mass of appliance | kg | 28 |
| Number of cavities | – | 1 |
| Heat source per cavity | – | Electric |
| Volume per cavity | l | 34 |
| Energy consumption in conventional mode ¹⁾ | kWh/ cycle | – |
| Energy consumption in hot air / forced con- vection mode ²⁾ | kWh/ cycle | 0.47 |
| Energy-efficiency index per cavity ³⁾ | – | 68.1 |
| Measurement and calculation methods used | – | IEC 60350 |

1) required to heat a standardised load in cavity
2) required to heat a standardised load in cavity
3) Measurement methods:Ssee EU Regulation No. 66/2014, Annex II, Chapter 1

Saving energy while cooking

The  operating mode consumes less energy than the  operating mode.

- ▶ Avoid opening the appliance door frequently.
- ▶ For gratins, use the residual heat: for cooking times over 30 minutes, switch the appliance off 5–10 minutes before the end of the operating time.
- ▶ Minimize preheating.
- ▶ Only preheat the cooking space if the cooking or baking results depend on it.

15.4 Automatic energy-saving stand-by

To prevent unnecessary energy consumption, the appliance is equipped with an automatic energy-saving stand-by feature.



To reduce power consumption to a minimum, select «Hide time» in the user settings. Despite automatic energy-saving stand-by, all safety features are active.

15.5 Reference to «Open Source» licence

Your appliance contains Newlib open-source software. This is subject to the licensing conditions specified in Section 4.1 (4.1.1-4.1.8; 4.1.9; 4.1.10; 4.1.14-4.1.16) of the enclosed open-source software licence text document.

16 Index

A

| | |
|-----------------------------------------|--------|
| Aborting | |
| Changing recipes | 38 |
| Creating your own recipe | 38 |
| Operating mode | 29 |
| Recipes | 36 |
| Accessories | 17, 79 |
| Cleaning | 68 |
| Acoustic signals | 61 |
| Activating/deactivating steam supply .. | 21 |
| Appliance door | |
| Cleaning | 66 |
| Removing | 66 |
| Appliance information | 64 |
| Appliance switch-off time | 60 |

B

| | |
|---------------------------------------|----|
| BakeOmatic | 41 |
| Before using for the first time | 9 |
| Brightness | 60 |

C

| | |
|-------------------------------|----|
| Care | 65 |
| Cleaning | 65 |
| Accessories | 68 |
| Cooking space | 65 |
| Door seal | 67 |
| Food probe | 68 |
| Shelf guides | 68 |
| Water tank | 68 |
| Cleaning the exterior | 65 |
| Clearing | |
| Favourites | 56 |
| Clock | 60 |
| Construction | 15 |
| Contrast | 60 |
| Cooking space | |
| Cleaning | 65 |
| Temperature measurement | 81 |
| Cooking tray | 17 |

D

| | |
|--------------------------|----|
| Degree of moisture | 49 |
| Delayed start | 26 |
| Deleting | |

| | |
|----------------------------------------|----|
| Own recipe | 40 |
| Demo mode | 64 |
| Descaler | 70 |
| Descaling | 69 |
| Duration until next descaling process. | 64 |
| Failed | 77 |
| Rinsing phase | 72 |
| Starting | 71 |
| Dimensions | 81 |
| Disconnection | 12 |
| Disposal | 12 |
| Door seal | |
| Cleaning | 67 |
| Replacing | 67 |
| Duration | 26 |
| Recipe step | 38 |

E

| | |
|-----------------------------|--------|
| EasyCook | 53, 79 |
| Food groups | 53 |
| Electrical connection | 81 |
| End | 26 |
| Extended warranty | 87 |
| Extending operation | 31 |

F

| | |
|------------------------------|--------|
| F and E messages | 75 |
| Factory settings | 64 |
| Favourites | 55 |
| Changing | 56 |
| Clearing | 56 |
| Creating | 55 |
| Starting | 55 |
| FN | 64 |
| Food probe | 18, 28 |
| Cleaning | 68 |
| Food probe temperature | 28 |
| Measure only | 29 |

H

| | |
|--------------------------|----|
| Halogen light bulb | 67 |
| Hold | 37 |
| Hot air | 20 |
| Hot air humid | 22 |

| | |
|-----------------------------|----|
| Hot air with steaming | 20 |
| Hygiene | 52 |

I

| | |
|----------------------------|--------|
| Identification plate | 81 |
| Illumination | 62, 73 |
| Initial set-up | 9 |
| Instruction message | 61 |
| Instructions for use | 9 |

K

| | |
|-----------------|----|
| Keep warm | 52 |
|-----------------|----|

L

| | |
|-------------------------|----|
| Language | 59 |
| Levels | 16 |
| Load capacity | 81 |
| Long cooking time | 73 |

M

| | |
|-----------------------------|-------|
| Mains synchronisation | 61 |
| Maintenance | 65 |
| Model number | 2, 64 |

O

| | |
|--------------------------------------|----|
| Operating and display elements | 15 |
| Operating mode | |
| Aborting | 29 |
| Changing | 29 |
| Selecting | 24 |
| Operating mode settings | 25 |
| Changing | 26 |
| Checking | 26 |
| Operation | 23 |
| Own recipes | 37 |
| Creating | 37 |
| Deleting | 40 |

P

| | |
|---------------------------|--------|
| Packaging | 12 |
| Pause | 37 |
| Power failure | 77 |
| Preheating | 58, 82 |
| Press and go | 25, 63 |
| Product family | 2 |
| Professional baking | 43 |

Q

| | |
|--------------------------|----|
| Quick instructions | 88 |
|--------------------------|----|

R

| | |
|---------------------------------|--------|
| Recipe book | 35, 79 |
| Recipes | 35 |
| Aborting | 36 |
| Action required | 36 |
| Changing | 39 |
| Copying | 39 |
| Creating own | 37 |
| Ending a step before time | 38 |
| Step duration | 38 |
| RegenerateOmatic | 49 |
| Regeneration | 21, 58 |
| Regeneration time | 49 |

S

| | |
|---------------------------------------|--------|
| Safety | 12 |
| Safety precautions | |
| Appliance-specific | 8 |
| Before using for the first time | 9 |
| Correct use | 9 |
| General | 7 |
| Saving energy | 58, 82 |
| Service & Support | 87 |
| Service desk | 64 |
| Setting the time | 59 |
| Shelf guides | 68 |
| Cleaning | 68 |
| Socket | 16 |
| Soft roasting | 44 |
| Default value | 63 |
| Positioning the food probe | 45, 46 |
| Seared | 45 |
| Starting | 47 |
| Switching off before time | 48 |
| With steam | 46 |
| Software versions | 64 |
| Spare parts | 80 |
| Special accessories | 18, 79 |
| Stainless steel tray | 17 |
| Stand-by | 83 |
| Start screen | 60 |
| Steam | 19 |
| Switching off before time | 29 |
| Symbols | 6 |

T

| | |
|---------------------------|----|
| Target temperature | 28 |
| Technical data | 81 |
| Technical enquiries | 87 |
| Temperature sensor | 16 |
| Temperature unit | 63 |
| Testing institutes | 81 |
| Time display | 61 |
| Time format | 61 |
| Timer | 30 |
| Tips and tricks | 57 |
| Touch buttons | 16 |
| Type | 2 |

U

| | |
|--------------------------------|----|
| U and E messages | 76 |
| Uneven browning | 57 |
| User settings | 59 |
| Adjusting | 59 |
| Overview | 59 |
| Using for the first time | 13 |

V

| | |
|----------------|----|
| Validity | 2 |
| Volume | 62 |

W

| | |
|----------------------|----|
| Water hardness | 62 |
| Water tank | 18 |
| Cleaning | 68 |
| Emptying | 34 |
| Filling | 24 |
| Wellness | 51 |
| Wire shelf | 18 |

17 Service & Support



The «Troubleshooting» chapter provides valuable information for dealing with minor operating faults. This saves you the time, effort and potential cost of having to call out a service technician.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your V-ZUG appliance online immediately at www.vzug.com →Service →Warranty registration. This will allow you to take advantage of the best possible support in the event of an fault in the appliance during the warranty period. You will require the serial number (FN) and appliance designation to complete the registration process. This information can be found on the identification plate for your appliance.

My appliance information:

FN: _____ **Appliance:** _____

Always have this appliance information to hand when you contact V-ZUG. Thank you.

- Open the appliance door.
 - The identification plate is located on the left-side panel.

Requesting repairs


You can find the telephone number for your nearest V-ZUG service centre at www.vzug.com →Service →Service hotline.

Technical enquiries, accessories, extended warranty

V-ZUG is happy to help with your general administrative and technical enquiries, orders for accessories and spare parts, or information relating to advanced service agreements.

Quick instructions

Here you will find an overview of key operating information.

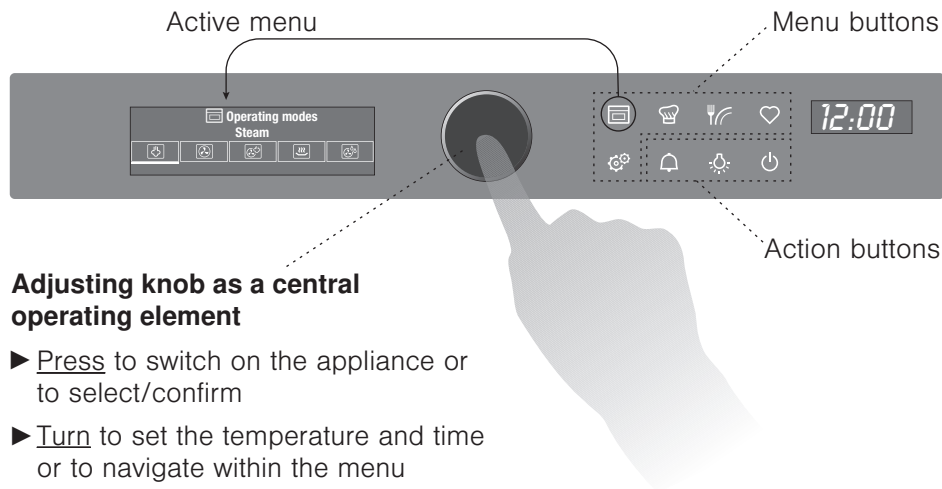

Adjusting knob as a central operating element

- Press to switch on the appliance or to select/confirm
- Turn to set the temperature and time or to navigate within the menu

Menu and action buttons

The menu buttons contain a selection of preparation options and user settings. These can be selected by pressing the relevant button. The active menu is shown in the display. You can use the adjusting knob to operate and navigate within the menu; additional submenus can also be called up.

The function buttons give you direct access to independent functions such as the timer ⌚ or switching off the appliance ⏻.



J23003352-R04

V-ZUG Ltd

Industriestrasse 66, P.O. Box 59, CH-6301 Zug
info@vzug.com, www.vzug.com

