 


**JUST LIGHT.**

## Removal instruction 993326

Instructions on how light sources and separate control gears can be removed without being permanently damaged for verification purposes by market surveillance authorities:

An Instruction on how to remove the light source from a containing product is provided for reference:



The removal may only be carried out by a professional.

Step 1: Remove the cover.



Step 2: Remove the screws from the LED-Board, the Driver and the connection and remove the cable.



Step 3: Cut off the latch from the lens.

Step 4: Remove the lens, the LED-Board and the power supply.



Step 5: An individual light source is removed out of the containing product.

Step 6: Fix a new connection wire to the light source by using electric iron. Take care of the LEDs during this step, do not touch them.

Step 7: Provide the rated current to the light source and operate the ErP testing.