

USE AND CARE GUIDE

Wireless Wall Switch Remote Control Outlet White



Questions, problems, missing parts? Before returning to the store,
 call Defiant Customer Service
 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-866-308-3976

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this motion security light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

Table of Contents

| | | | |
|--------------------------------|----------|--|-----------|
| Safety Information..... | 2 |  ar Panel..... | 3 |
| Precautions..... | 2 | Specifications | 4 |
| Warranty | 2 | Tools Required | 4 |
| 1-Year Limited Warranty | 2 | Hardware Included..... | 4 |
| What Is Covered..... | 2 | Package Contents..... | 5 |
| What Is Not Covered | 2 | Installation..... | 6 |
| Pre-Installation..... | 3 | Operation..... | 9 |
| Planning Installation | 3 | Maintenance | 13 |
| Product Description | 3 | Care And Cleaning..... | 13 |
| Initial Battery Charge..... | 3 | Troubleshooting..... | 14 |
| Light Fixture..... | 3 | | |

Safety Information

PRECAUTIONS

- ☐ Please read and understand this entire manual before attempting to assemble, install, or operate this switch fixture.
- ☐ This switch fixture should be installed indoors only
- ☐ Do not immerse components in liquid.
- ☐ Do not use any other specification battery for the remote. Doing so may result in injury or damage to the light and voids any warranty.
- ☐
- ☐

- ☐ The Max load can be connecting the receiver don't exceed 1200 W
- ☐ The maximum control range 98 ft in spacious.



WARNING: To prevent possible SERIOUS INJURY or DEATH, never allow small children near batteries. If a battery is swallowed, immediately notify a doctor.



WARNING: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

NOTICE: When replacing batteries, recycle used batteries or dispose of them in accordance with local regulations.

Warranty

1-YEAR LIMITED WARRANTY

WHAT IS COVERED

This product is guaranteed to be free of factory defective parts and workmanship for a period of 1 year from date of purchase. Purchase receipt is required for all warranty claims.

WHAT IS NOT COVERED

This guarantee does not include repair service, adjustment and calibration due to misuse, abuse or negligence. Unauthorized service or modification of the product or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, unauthorized service, or return shipping charges. This warranty is not extended to other equipment and components that a customer uses in conjunction with this product.

No service parts available for this product.

Contact the Customer Service Team at 1-866-308-3976 or visit www.HomeDepot.com.

Pre-Installation

PLANNING INSTALLATION

Before installing the switch fixture, ensure that all parts are present. Compare parts with the Hardware Included and Package Contents sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this switch fixture.

Estimated installation time: 10 minutes

PRODUCT DESCRIPTION

This wireless switch include two parts which the remote control and the receiver parts, the remote control works with the battery CR2032,the receiver parts works with the power 120V AC and it need to plug in the AC outlet.there is a AC outlet in the receiver part, it is limited connecting any electric equipment what the power more than 1200W. the remote control distance is 98 ft in spacious,the control distance will change short when the battery voltage of the CR2032 lower than 2.5V ,need to replace new battery.

MOUNTING LOCATION


There are two installing mode for the remot which any wall plane or Wall switch box,the receiver need to plug in any AC outlet which for your need.

Pre-Installation (continued)


SPECIFICATIONS

| | |
|------------------|--------------------------------|
| Range | Up to 98 ft. (30 m) (spacious) |
| Max Switch power | 1200W |
| | |
| | |
| | |
| | |


TOOLS REQUIRED




Safety goggles




Phillips screwdriver



Level




Drill Bits
(3/32 in. and
7/32 in.)

 


Drill

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

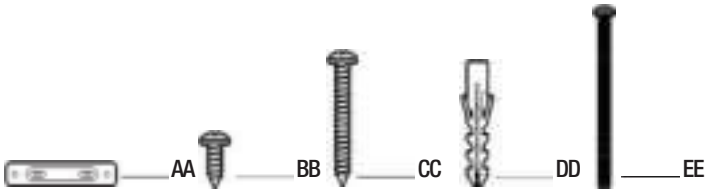

| Part | Description | Quantity |
|------|-----------------|----------|
| AA | Mounting plate | 1 |
| BB | Base screw | 1 |
| CC | Mounting screws | 6 |
| DD | Anchors | 6 |
| EE | Mounting bolts | 2 |

Pre-Installation (continued)

 PACKAGE CONTENTS

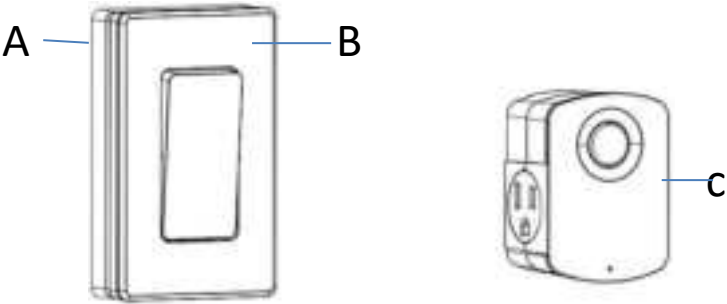

| Part | Description | Quantity |
|------|-------------|----------|
| A | Back board | 1 |
| B | remot | 1 |
| C | receiver | 1 |
| D | | |
| E | | |
| F | | |
| G | | |
| H | | |

Installation

1 Determining the mounting location

 
Determine the mounting location - wall plane or wall switch box



A



The receiver part plug in AC outlet for your need

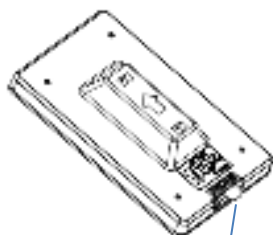

C

The insulating sheet (C) needs to be removed before use.



B

The remote (B)place to the back board (A) referring the direction of arrow



1



2



 
3

Step1:open the battery drawer
Step2:remove the insulating sheet
Step3:close the battery drawer

Operation

To operation the rocker switch, the receiver will turn ON or turn off after the teeterboard is pressed down of the rocker switch.

Refer the below picture , the receiver was turned OFF.

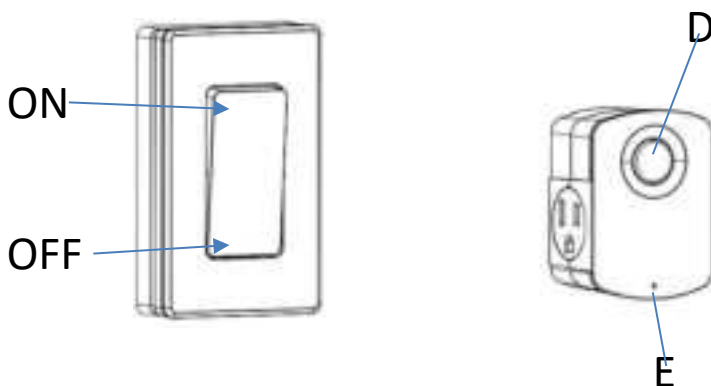


A receiver support Max 10 remotes to works. pair mode, press the key (D) three times in a row, the indication LED (E) will flash slowly, to operation the teeterboard of the rocker ,will saw the indication LED (E) stop flash ,indicate successful pairing.

Maintenance

 To need to replace the battery of the remote when find the controlling distance change short



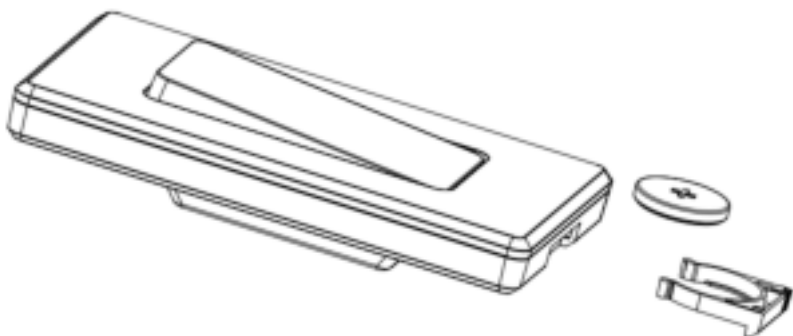

- ☐ This unit requires one , CR2032 3 V replacement batteries, which can be purchased at The Home Depot.
- ☐ Dtake down the remote from back board and place it to the plane after rolling-over
- ☐ Pull out the battery drawer.remove the battery
- ☐ Place the new battery (CR2032 3V)to the drawer
- ☐ Push the battery drawer to original position
- ☐



Care and Cleaning

- ☐ ,pull out the receiver from the AC OUTLET ,clean the switch fixture with clear water and a soft, damp cloth only.
- ☐ Do not use paints, solvents, or other chemicals on this switch fixture. They could cause a premature deterioration of the finish. This is not a defect in the finish and will not be covered by the warranty.
- ☐ Do not spray the switch fixture with a hose or power washer.
- ☐
- ☐

Troubleshooting

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| The receiver will not turn ON | The  button is in the OFF position. | remove the insulation sheet. |
| | The batteries may be depleted. This can occur if the product has been in use for more than a year. | Check the battery's voltage, iplease change the battery f it is low than 2.5v, New Nickel-metal Hydride batteries can be purchased at The Home Depot. |
| | The receiver has no be supplied AC 120V POWER | Check the AC outlet whether there is AC power |
| | |  |
| |  | |
| | |  |
| Receiver has no AC power output | The fuse was damaged | Exchange the new device |
| | | |
| | | |



DEFIANT®

Questions, problems, missing parts? Before returning to the store,
call Defiant Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-866-308-3976

HOMEDEPOT.COM

Retain this manual for future use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction