


Q08



稳拍器自拍杆  
SELFIE STICK TRIPOD  
使用说明


取出和装入自拍器

取出与装入

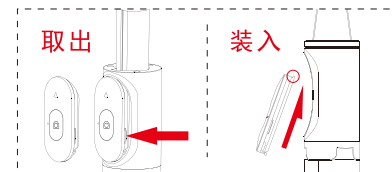

怎样更换电池

从左侧的凹槽缝抠出来即可打开遥控器盖。

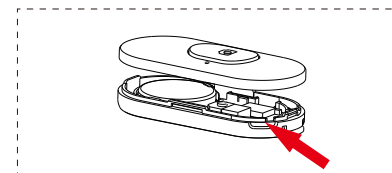


怎样使用


- 1.开机：长按拍照键3秒开机。
- 2.蓝牙配对：指示灯快闪4秒进入配对状态，配对状态蓝色指示灯闪烁，使用手机搜索“Gimbal Selfie”来匹配，配对成功后蓝色指示灯熄灭。
- 3.拍照：自拍器与手机处于连接状态时，短按拍照键，蓝灯闪烁。
- 4.无配对：开机后，在无配对连接状态下，无操作5分钟自动关机。
- 5.配对：开机后，在自拍器与手机处于连接状态时，10分钟无操作将进入休眠状态，再过10分钟无操作自动关机。
- 6.关机：开机及休眠状态下，长按拍照键3秒关机，指示灯闪烁熄灭。

怎样打开三脚架


在手柄底部位置向外打开，秒变三脚架。

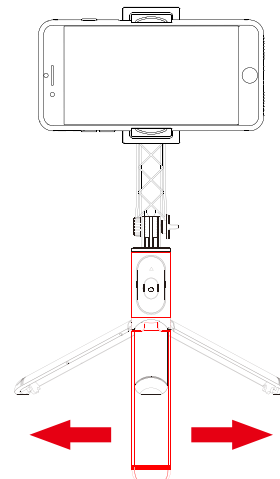

云台支架使用方法

 

夹好手机并保持自然平衡  
长按云台电源键5秒开机，  
长按3秒关机。

 


开机之后绿灯闪烁进入  
稳拍模式，左右晃动手柄，  
云台始终保持同一水平方向。




单击一下云台支架电源键  
顺时针旋转，双击逆时针旋转。  
手动向左(右)拨超过45°  
持续2秒，  
云台自动向左(右)旋转90°。

自拍杆模式

 当云台没电或者关机的时候，滑动一下解锁键，变成三脚架模式。



当云台电量低的时候，会有红灯闪烁提醒，  
此时要使用Micro USB接口充电，充电过程  
表示红灯长亮，完成充电后红灯熄灭。

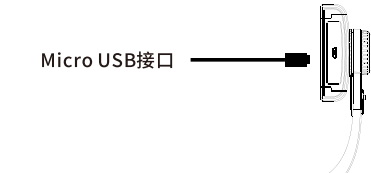

提醒

- 自拍杆兼容Android4.2.2(如果你在手机相机选项下改变了系统的“音量键功能”，一定要把它改成默认，或者“拍照”，让自拍杆正常工作)
- 手机夹住的时候必须要贴紧夹子。

- 1.稳拍模式：最佳使用在3节伸缩杆内(50cm内)
- 2.自拍杆模式：建议使用5节伸缩杆(70cm内)

(电池不得暴露在诸如日照、烘烤或类似过热环境中)

感谢您的支持！

FC CE RoHS


Q08



Selfie stick  
SELFIE STICK TRIPOD  
Instructions for use


Unload and load

Taking out and loading the Selfie

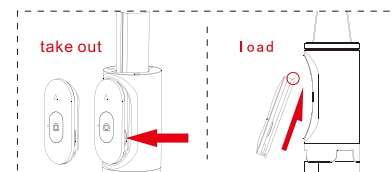

Replacement battery

Pull out from the groove on the left to open the remote control cover.

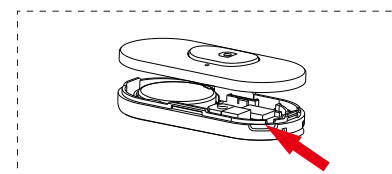


How to use


1. Turn on: Long press the camera button for 3 seconds to turn on.
2. Bluetooth pairing: the indicator light flashes for 4 seconds to enter the pairing state, the blue indicator light of the pairing state flashes, use the mobile phone to search for "Gimbal Selfie" to match, and the blue indicator light will go out after the pairing is successful.
3. Take a photo: When the Selfie is connected to the mobile phone, short press the camera button and the blue light flashes.
4. No pairing: After booting, in the state of no pairing connection, it will automatically shut down after 5 minutes of no operation.
5. Pairing: After turning on the phone, when the Selfie is connected to the phone, it will enter the dormant state if there is no operation for 10 minutes, and it will automatically shut down after another 10 minutes.
6. Power off: In power on and sleep mode, press and hold the camera button for 3 seconds to power off, the indicator light flashes and goes out.

Open the tripod


Open outwards at the bottom of the handle, Change into a tripod in seconds.

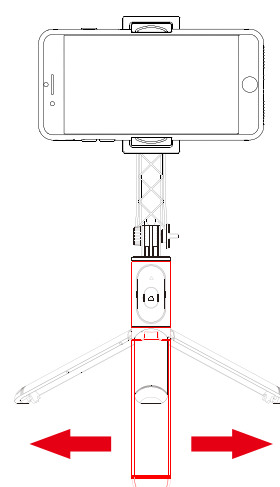

How to use PTZ

 

 Clamp the phone and maintain a natural balance  
Long press the PTZ power button for 5 seconds to turn on,  
Long press for 3 seconds to shut down.




After booting, the green light flashes to enter  
Steady shooting mode, shake the handle left and right,  
The pan/tilt always keeps the same horizontal direction.




Click the power button of the gimbal stand, Horizontal and vertical shooting Manually  
dial left (right) more than 45°  
For 2 seconds, The pan/tilt automatically rotates 90° to the left (right).

Selfie stick mode

 When the gimbal is dead or turned off, slide the unlock button to Change to tripod mode.



When the power of the gimbal is low, there will be a flashing red light to remind you that you need to use the Micro USB port to charge at this time, the red light will be on during the charging process, and the red light will go out after the charging is completed.

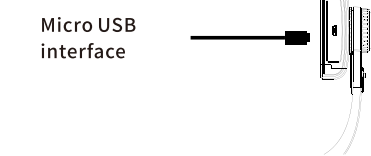

Remind

- The selfie stick is compatible with Android 4.2.2, Android devices and IOS 5.0 or above of iPhone (if you change the "volume key" function of the system under the camera option of mobile phone, you must change it to the default, or "take photos" to make the selfie stick work normally)
- When clamping the phone, it must be pressed against the phone clip.

1. Stable Mode: Best use in 3 telescopic rods (within 50cm)
2. Selfie Stick Tripod Mode: 5 telescopic rods are recommended (within 70cm)

(The battery must not be exposed to such as sunlight, fire or similar overheating environment)

Thank you for your support!

FC CE RoHS