 
 


CHARGE

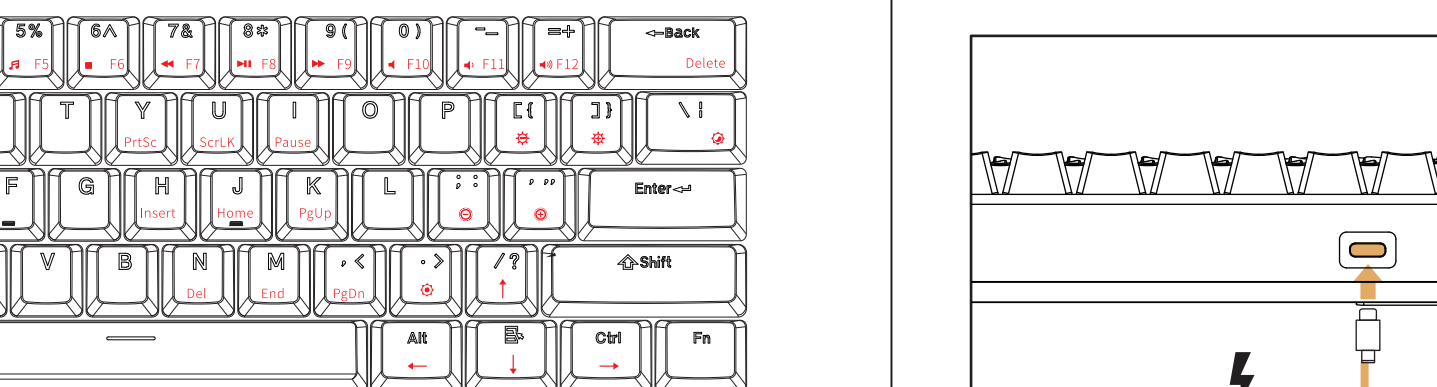

The diagram shows a white rectangular box representing the keyboard. To its right is a smaller white rectangular box representing the user manual. The manual box contains the text "Size Layoyn Backlig Switch" and a small icon of a keyboard. Below the keyboard box, the text "User Manual" is written.

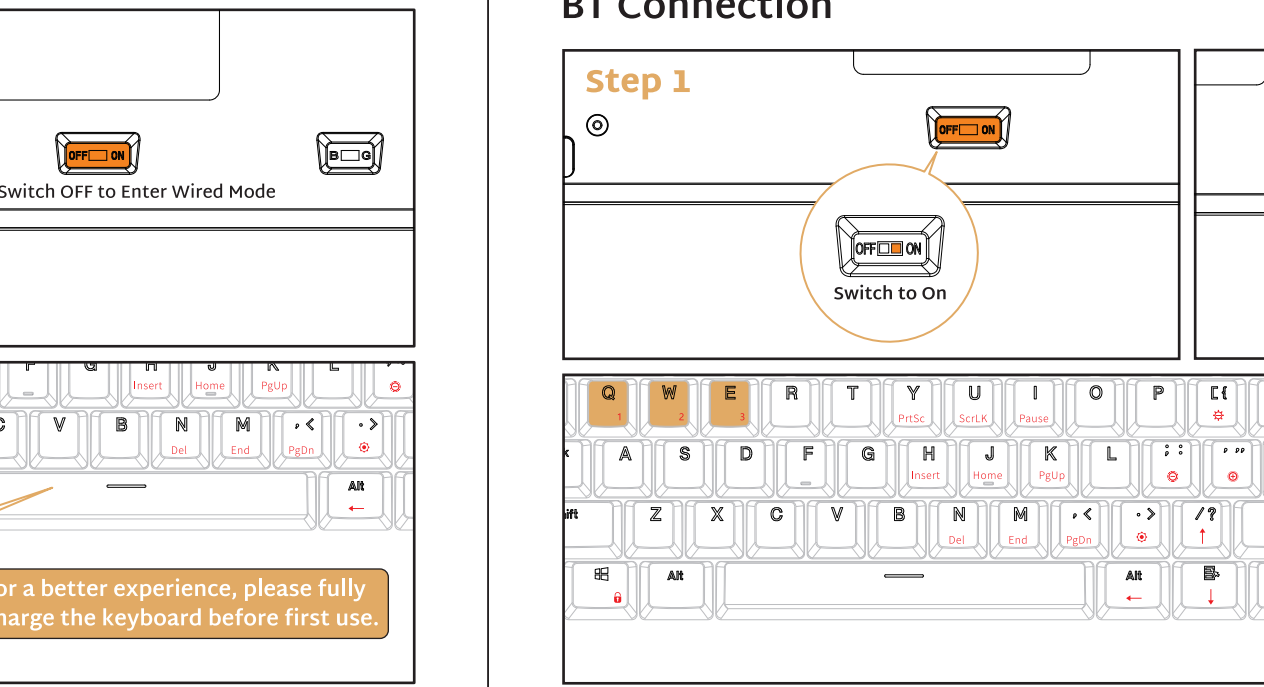

WIRELESS

ON

Switch to B

 
Step 2

1 SHORT PRESS
Fn+Q/W/E/ to Switch


2 LONG PRESS
Fn+Q/W/E/ to Enter

English

SPECA

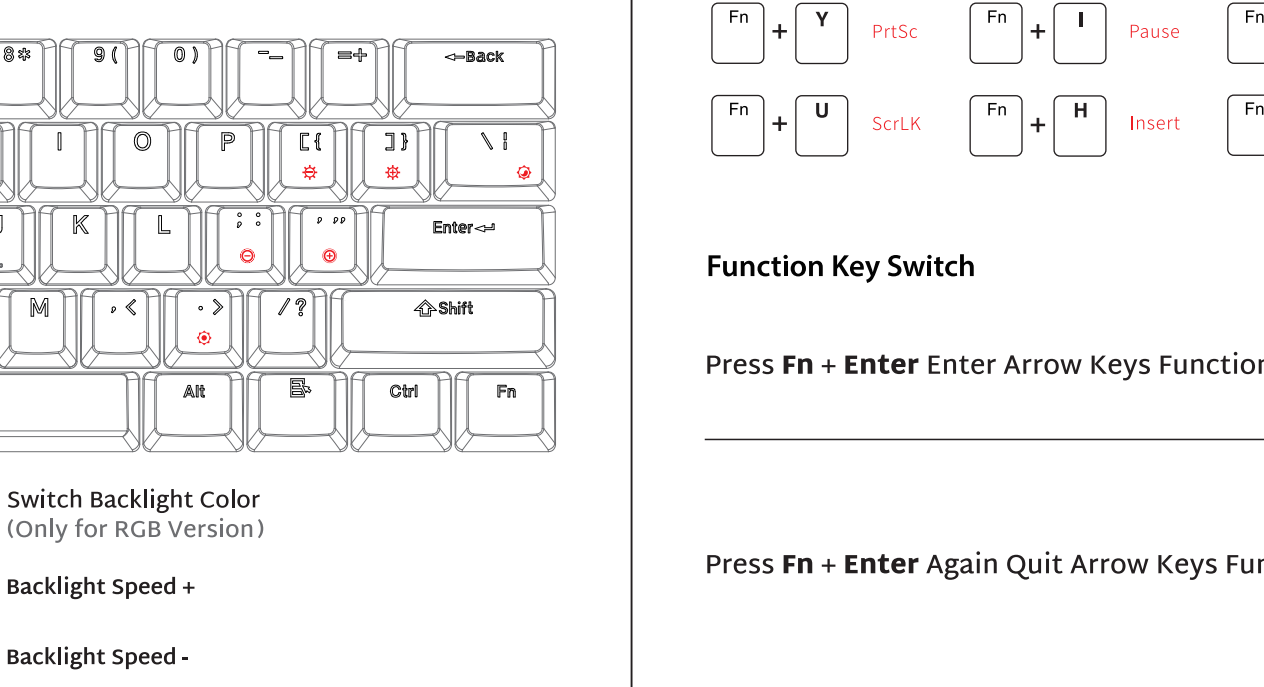

MULTI

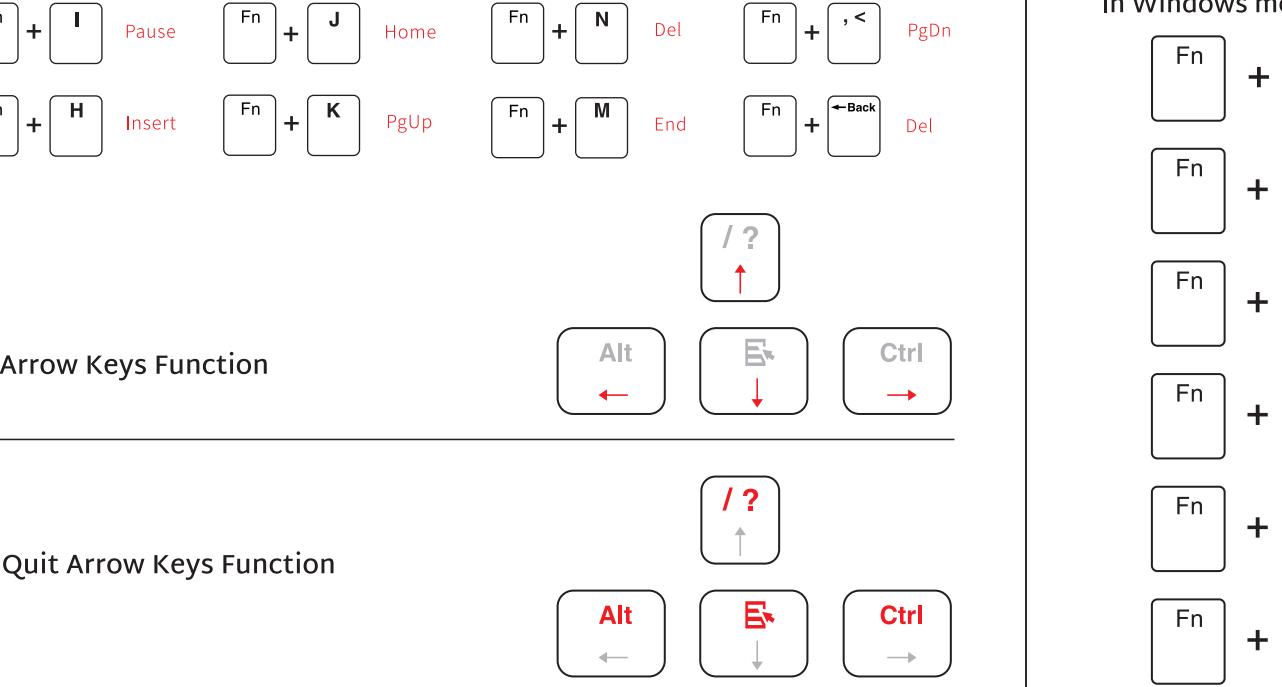 

MULTIPLE CHOICE

	Fn	+		
F1	Fn	+	7	F7
F2	Fn	+	8	F8
F3	Fn	+	9	F9
F4	Fn	+	0	F10
F5	Fn	+	-	F11
F6	Fn	+	=	F12

ULTIMATE

Function	Primary Key	Secondary Key	Icon	Description
Computer	Fn	F7	◀	Last Song
Washer	Fn	F8	⏮	Play / Pause
Mailbox	Fn	F9	▶	Next Song
Calculator	Fn	F10	🔇	Mute
Speaker	Fn	F11	🔊	Volume-
Printer	Fn	F12	🔊	Volume+

Key are interchanged)

FN + Left Ctrl (the primary key function and the second function of the composite key)

Key	Function
◀ Last Song	Fn + F7
⏸ Play / Pause	Fn + F10
▶ Next Song	Fn + F8
Mute	Fn + F11
› Volume-	Fn + F9
» Volume+	Fn + F12

BT Mode

- Device With Bluetooth 3.0 or later
- PC: Windows 7 or Later
- Mac: macOS X 10.6 Snow Leopard or Later
- iOS: All iPads/iPhone 5 or Later
- Android: 5.0 Lollipop or Later

Wired/2.4Ghz Mode

- Computer With Available USB port
- PC: Windows 7 or Later
- Mac: macOS X 10.6 Snow Leopard or Later

No operation for 5 minutes, keyboard in standby, wake-up keyboard only need to press any key.

an issue with one of our RK products?

Feel free to contact us with any product issues or questions.
We will reply as quickly as possible to ensure all your needs are handled.
Please contact the seller

