



USING THE MULTIFLEX® WAND

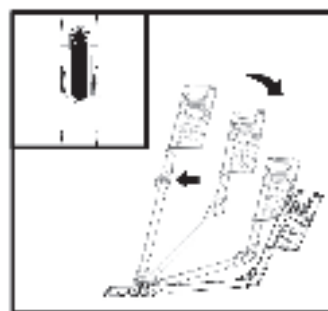


Press the unlock button on the base of the wand, then adjust the angle.

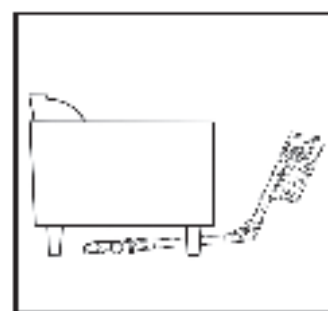


Adjust the wand to a lower angle to easily clean under furniture.

MULTIFLEX STORAGE

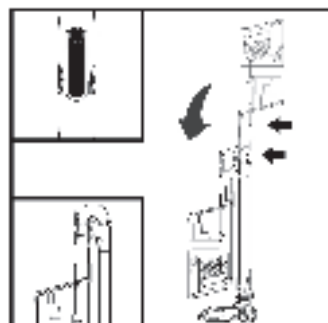


To put the vacuum in storage mode, press the unlock button on the base of the handheld vacuum forward.

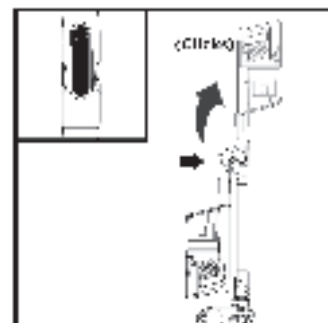

To take the vacuum out of storage mode, press the unlock button and lift up the handheld vacuum and the wand into and out of place.

MAINTAINING YOUR VACUUM

EMPTYING THE DUST CUP

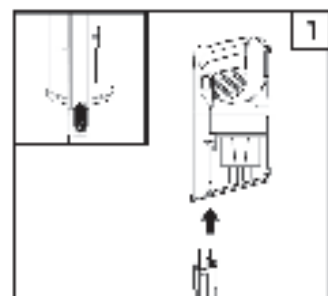


Press the dust release button to detach the handheld vacuum from the wand.




Insert the Dust Cup when it is attached to the handheld vacuum position the dust cup over a soft receptacle and click the CleanTouch® Dirt Ejector slider forward.

REMOVING AND CLEANING THE DUST CUP

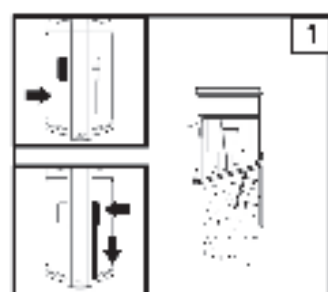

To remove the dust cup from the handheld vacuum, press the CleanTouch® Dust Cup Release button near the handheld vacuum motor. Lift the dust cup and flip it to remove. Empty dust and clean inside the dust cup over the trash, then slide the CleanTouch® Dirt Ejector slider forward.

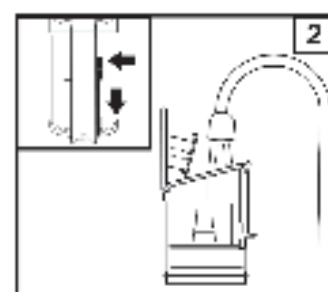


To clean the interior of the dust cup, insert a soft water brush and brush with the lid open to clean for at least 24 hours or use new brush.

MAINTAINING YOUR VACUUM - CONT.

CLEANING THE FILTERS

Regularly rinse and replace the filters to maintain your vacuum's suction power. To clean filters, rinse them with water only. Allow all filters to air dry completely for at least 24 hours before reattaching to prevent liquid from being drawn into electric parts. Clean the pre-motor filter at least once a month and the motor or HEPA filter at least once a year. Tap off loose dirt, vacuum bags or canisters needed. More frequent cleaning may become needed for heavy use.


IMPORTANT: DO NOT use soap when cleaning the filters. Use water only.

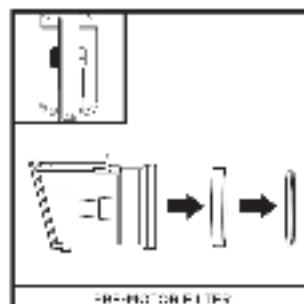

Press the dust release button and remove the dust cup. Pull the foam pre-motor filter out of the back of the unit to clean.



Pre-Motor Foam and Filter Unit (A)

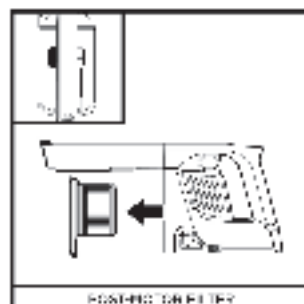

Remove the motor filter with the post motor filter out of the handheld vacuum.





Post-Motor HEPA Filter (B)

FLOOR NOZZLE


If the hair is wrapped around the motor or located inside the CleanTouch® on a very floor surface, allow the hair to pass or a small amount of hair from floor to hair, wipe it around the brush roll after continued use. Carefully remove the hair from the hair and use a brush to clean the hair. If you run over a hard floor, the brush roll may become damaged. Always vacuuming, check for blockages in debris caught in the self-cleaning brush roll or Soft Roller.

1. Turn off the vacuum.
2. Press the dust release button to detach the handheld vacuum from the wand.
3. Check for blockages.
4. Press the cover by sliding it forward, then pressing down on the top of the side. When turning, make sure the cover is closed and then click securely into place.

2. If light on floor mode is on, see Troubleshooting section for more info. (Apply for some models).

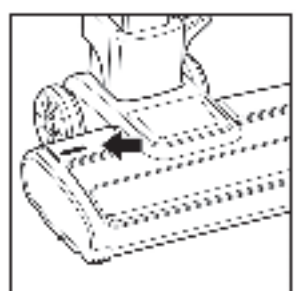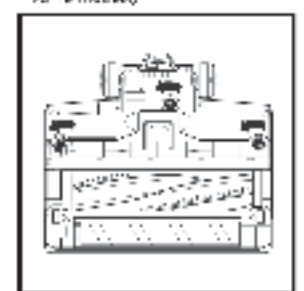

CREATING SOFT ROLLER

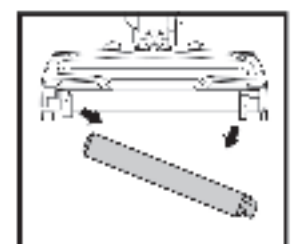


1. To remove Soft Roller from vacuum, pull the Soft Roller out of the top.
2. Tap the roller off the Soft Roller, use a dry towel to wipe the roller to be clean and to remove any debris caught in the roller with the Soft Roller.
3. Hand wash the Soft Roller as needed. Use only water and be sure to completely dry for at least 24 hours.
4. Before the Soft Roller.

CHECKING FOR BLOCKAGES



Checking for Blockages in the Handheld Vacuum

1. Turn off vacuum.
2. Remove the handheld vacuum from the wand.
3. Check all intake openings for dust cup and removing debris or blockage.

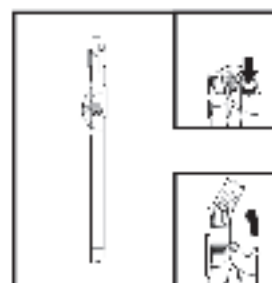


Checking for Blockages in the Wand

Standard Wand:

1. Turn off vacuum.
2. Remove the handheld vacuum and disconnect.
3. Check all intake openings for dust cup and debris.
4. Check for debris and blockages.

Multiflex Wand:

1. Turn off vacuum.
2. Remove the handheld vacuum and disconnect.
3. Check the Clog Access Hole on the Multiflex Wand on the wand as attaching the base on each side of the wand and lifting the wand out.
4. Clear any debris and blockages.

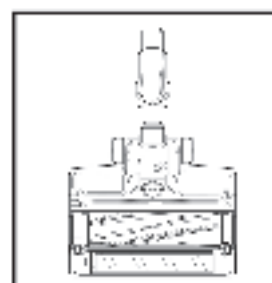

Checking for Blockages in the Floor Nozzle

1. Turn off vacuum.
2. Detach the wand.
3. Use the edge of a coin to open the three locks on the bottom of the floor nozzle.
4. Remove the cover and lift back the back of the floor nozzle.
5. Check the opening and remove any debris.
6. Press the cover by sliding it forward into the slot, then pressing down firmly and click before turning the cover clockwise to close, until they click securely into place.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn off power and remove the Lithium Ion Power Pack battery before servicing.

- Vacuum is not picking up debris, No suction or light suction, Nozzle light is red. (Refer to Checking for Blockages section for more information.)
- Check filters to see if they need cleaning. Follow instructions for rinsing and completely air-drying the filters before reinserting in the vacuum.
 - Dust cup may be full; empty dust cup.
 - Check floor nozzle for blockages; clear blockages if required.
 - Remove any string, carpet fibers, or hair that may be wrapped around the brushrolls.
 - Check connection between handheld vacuum and wand for blockages; clear blockages if required. If the issue persists, please contact a Service center.
 - Check clog access in wand for any blockages and clear any debris.
- Vacuum lifts area rugs, Vacuum is not turning on, Nozzle light is blinking red. (Apply for some models.)
- Make sure you are not engaging Boost mode. Take care when vacuuming area rugs or rugs with delicately worn edges. The vacuum has overheated and turned off to cool down. Remove all blockages and wait 60 min to allow the motor to cool down.
 - Turn off the unit to discharge the brushrolls and restart with the power/selector switch.

- Brushrolls do not spin.**
- Immediately turn off the vacuum, remove any blockages before turning the vacuum back on. Make sure the handheld vacuum is lifted back far enough for the brushrolls to engage. If the brushrolls still do not spin, please contact Customer Service.
 - If the floor nozzle has headlights and they are not illuminated, there is a connection issue between the handheld vacuum, wand, and nozzle. Try disconnecting and reattaching the pieces. If the headlights still do not illuminate, please contact a Service center.

- Vacuum turns off on its own.**
- There are several possible reasons for the vacuum turning off on its own, including blockages, battery issues, and overheating. If vacuum turns off on its own, perform the following steps:
1. Turn on the vacuum and check the battery indicator light located on the handheld vacuum. If recharging is needed, make sure the power/selector switch on the vacuum is set to the OFF position before connecting the charger.
 2. Empty dust cup and clean filters (See Emptying the Dust Cup and Cleaning the Filters sections).
 3. Check wand, accessories, and inlet openings and remove any blockages.
 4. Allow unit and battery to cool for at least 45 minutes, until they return to room temperature.
 5. Restart with power/selector switch.

NOTE: If vacuum still does not operate properly, contact a Service center.

Battery Indicator Lights on handheld vacuum are flashing.

- Bottom LED light is flashing (Fig. A): Battery needs to be charged.
- Top and bottom LED lights are flashing (Fig. B): Battery temperature is not optimal, so charging is temporarily paused. Leave battery plugged in and charging will resume soon.
- If top 2 or bottom 2 LED lights are flashing (Fig. C, Fig. D), call a service center.



NOTE:

In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.

For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir.

It is recommended to rinse the water reservoir with fresh water prior to its first use.

804106410A

PRINTED IN MEXICO Elbrd: Y.T. REV2: 07-22-2022_TAB
OBPN: IZ400_Series_IB_MP_Mv9_200803 MODEL: IZ440H_B



Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

Shark

QUICK START GUIDE

WHAT'S INSIDE

- A** Handheld Vacuum
- B** Motorized Floor Nozzle
- C** MultiFLEX® Wand
- D** Pet Multi-Tool
- E** Crevice Tool
- F** Anti-Allergen Dusting Brush
- G** Li-Ion Charger
- H** HEPA Post-Motor Filter (Pre-Installed)

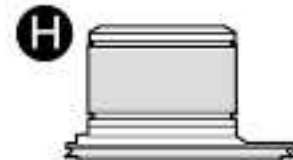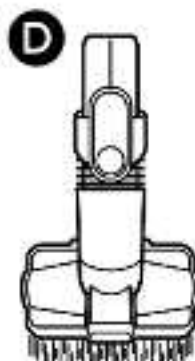

NOTE: The images shown here are for illustrative purpose only and may vary.



8 0 4 0 0 6 4 1 1

PRINTED IN MEXICO

Elbrd: Y.T.

OBPN: BxFlp

SC: 03-05-2021_.5P

MODEL: IZ462H_B