 


Zapping for a Cozier and Greener Life

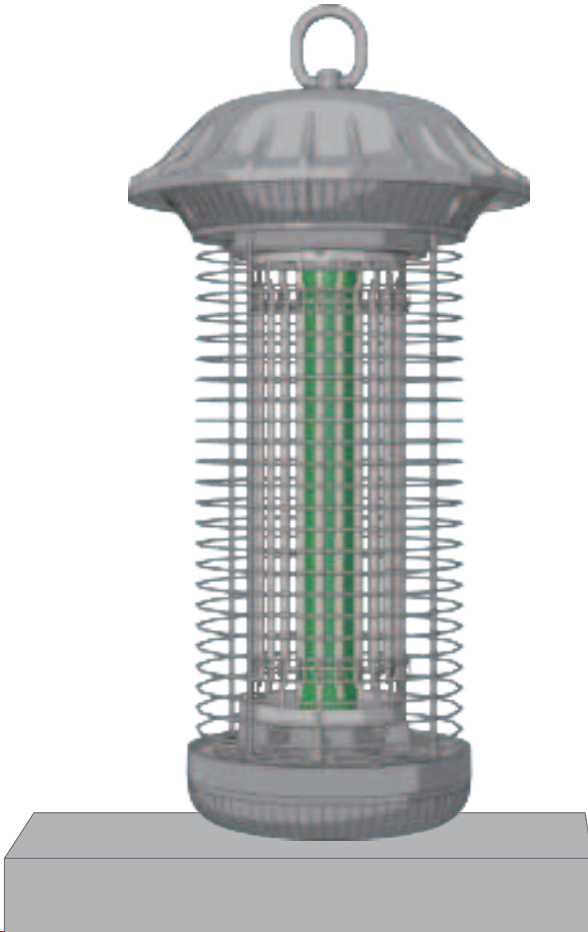 


At Buzbug we are devoted to a **greener future** as pioneers in **energy conservation** for the pest control industry. We are front-lining the technology by replacing UV bulbs with **state of the art UV-LEDs**. We are also proud to introduce solar solutions for some of our outdoor pest control products.



Buzbug Guarantees 100% Satisfaction To Every Customer

Visit **buzbug.com** to chat with a live representative, or email **support@buzbug.com** for assistance and inquiries. This product is covered in a **12-month warranty** program.

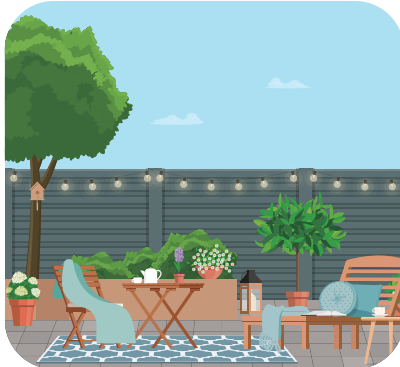

Before Using

Q.1 Does the product normally create a lot of noise when it kills mosquitoes?

The electric mosquito repellent basic principle is to electrostatically shock mosquitoes to death. It is an environmentally friendly method of mosquito elimination since there is no chemical volatilization. The drawback is that there will be an electric shock sound when mosquitoes touch the grid.

Q.2 Why do certain flies on electrical grids stop without dying?

Compared to mosquitoes, flies are bigger. Therefore, the flying postures and the point of collision on the grid determine how many flies can be killed at once. As a result, sometimes it shocks flies to death while other times it merely causes them to feel dizzy.

Q.3 Why doesn't the light come on after plugging in?

 
The light may have experienced shipment damage, or the lamp may not be in good contact, or both. Please contact us immediately so we can send you a new one.

Q.4 Is it necessary to clean my insect repellent regularly?


The buildup of dead insects can reduce the product's effectiveness and may even cause continuous discharges, leading to product failure. It's recommended to clear the collection tray, the bulb, and the device's exterior once a week.

Q.5 How do I properly clean the bug zapper and replace a lamp?


1. Power Off: Before replacing a lamp, make sure the device is unplugged. Wait at least one minute to allow residual electricity to dissipate.

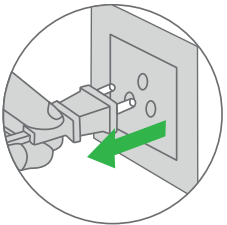

 2. Discharge the Grid: Touch the internal grid with a screwdriver with an insulated handle for 5-10 seconds to safely discharge it to eliminate any residual charge.

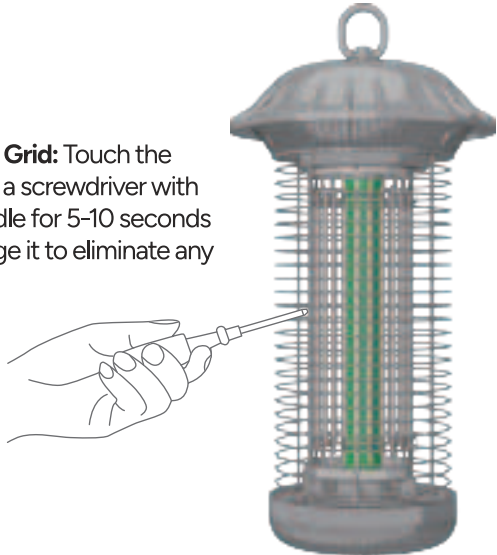


 3. Cleaning Process: Unscrew to remove and empty the garbage collection tray at the bottom. Use a dry brush or soft cloth to clear insect debris from the bulb and the device's exterior. Never immerse it in water. Do not use abrasive solvents to clean plastic.

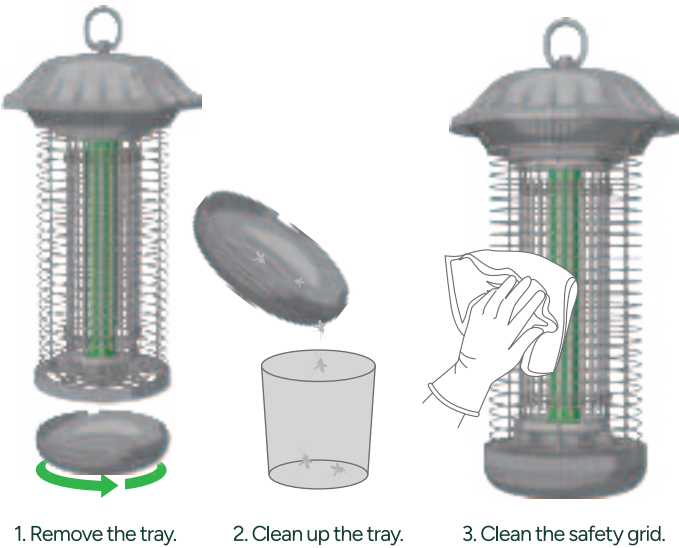


4. Lamp Replacement:

 (1) Unscrew the bottom screw with a screwdriver.

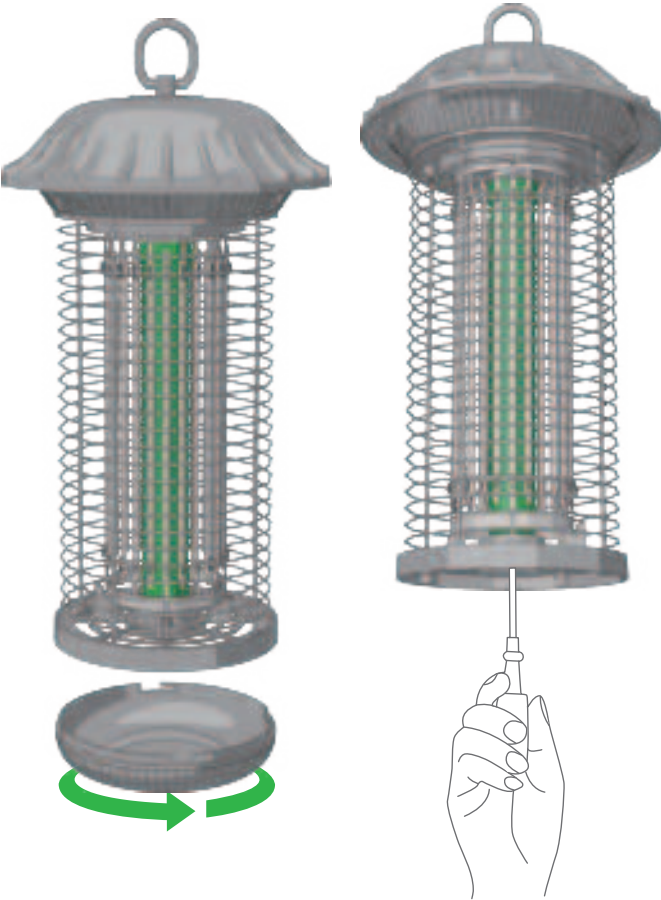

 (2) Remove the lamp cover and take out the lamp. Insert the new lamp into the socket. (Note: The tab on the lamp needs to be aligned with the tab on the socket. As shown in the figure)

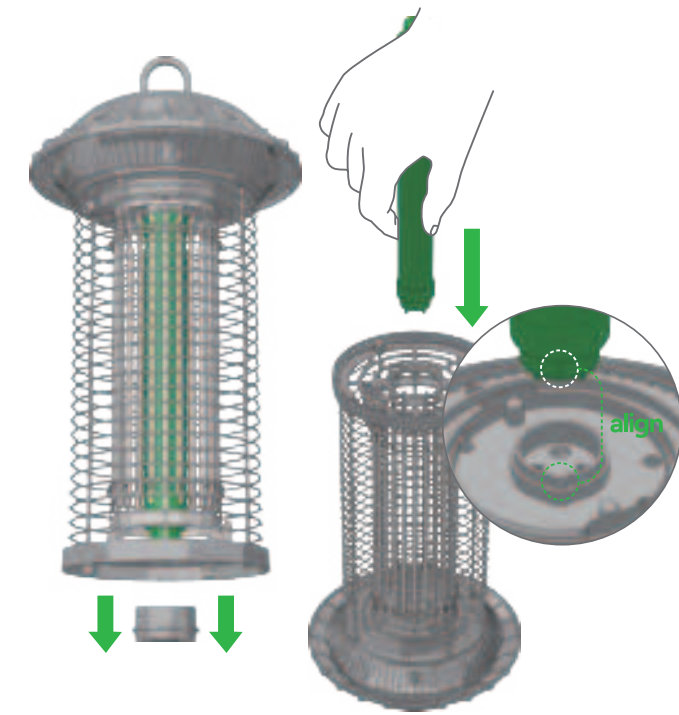

(3) Tighten the screws to complete the replacement process.

Introducing UV-LED Lamp Bead

Buzbug has upgraded the lamp tube for the bug zapper, using a lamp tube of 64 innovative UV-LED mosquito lamp beads. The surface of the tube might imitate the body's temperature if the temperature is kept between 36 and 37 degrees. UV-LED lamp beads can be used to efficiently release the mosquito's preferred wavelength. Only a mild blue light, which is not only safe for human health but also effective in lowering light pollution and conserving energy, is emitted by the lamp beads. It's crucial to keep in mind that **mosquitoes are drawn to ultraviolet light rather than visible light**. Therefore, increasing the brightness of the mosquito lamp is not recommended.

Manufacturer: Foshan OSA Electrical Co., Ltd.
Address: Jiangcun Bridge Side, Longzhou Rd, Leliu Town, Shunde, Foshan City, Guangdong, 528322, China

EC	REP	UAB Qixiang Europe Pranciškonų g. 6-46, LT-01133 Vilnius, Lithuania Technical Information Center Geschwister-Scholl-Str. 73, 60488 Frankfurt, Germany Email: qixiang.europe@gmail.com Phone: +49 6976 895074
----	-----	--

UK	REP	CET Product Service Ltd. Beacon House Stokenchurch Business Park, Ibstone Rd, Stokenchurch High Wycombe HP14 3FE UK Email: info.cetservice@gmail.com Phone: +44 741 932 5266
----	-----	---



 
ELECTRIC
BUG ZAPPER
5W

Elektrischer Insektenvernichter 5W
Éliminateur d'insectes électrique 5W
Exterminador eléctrico de insectos 5W
Zapper elettrico 5W
Elektrische Insectenverdelger 5W


MO-008C

User Manual

English / Deutsch / Français /
Español / Italiano / Nederlands

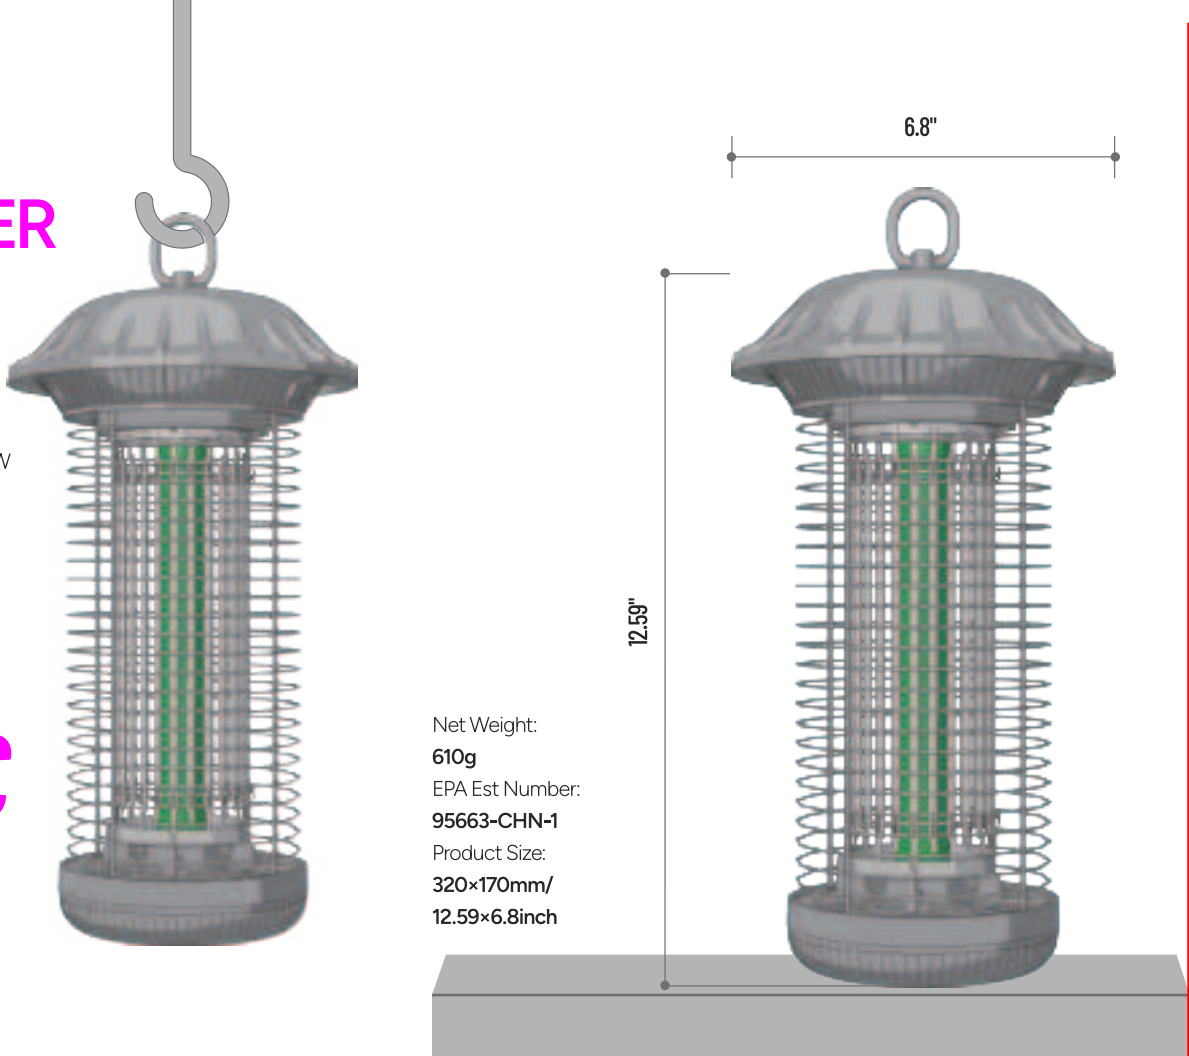

 Net Weight:
610g
EPA Est Number:
95663-CHN-1
Product Size:
**320×170mm/
12.59×6.8inch**

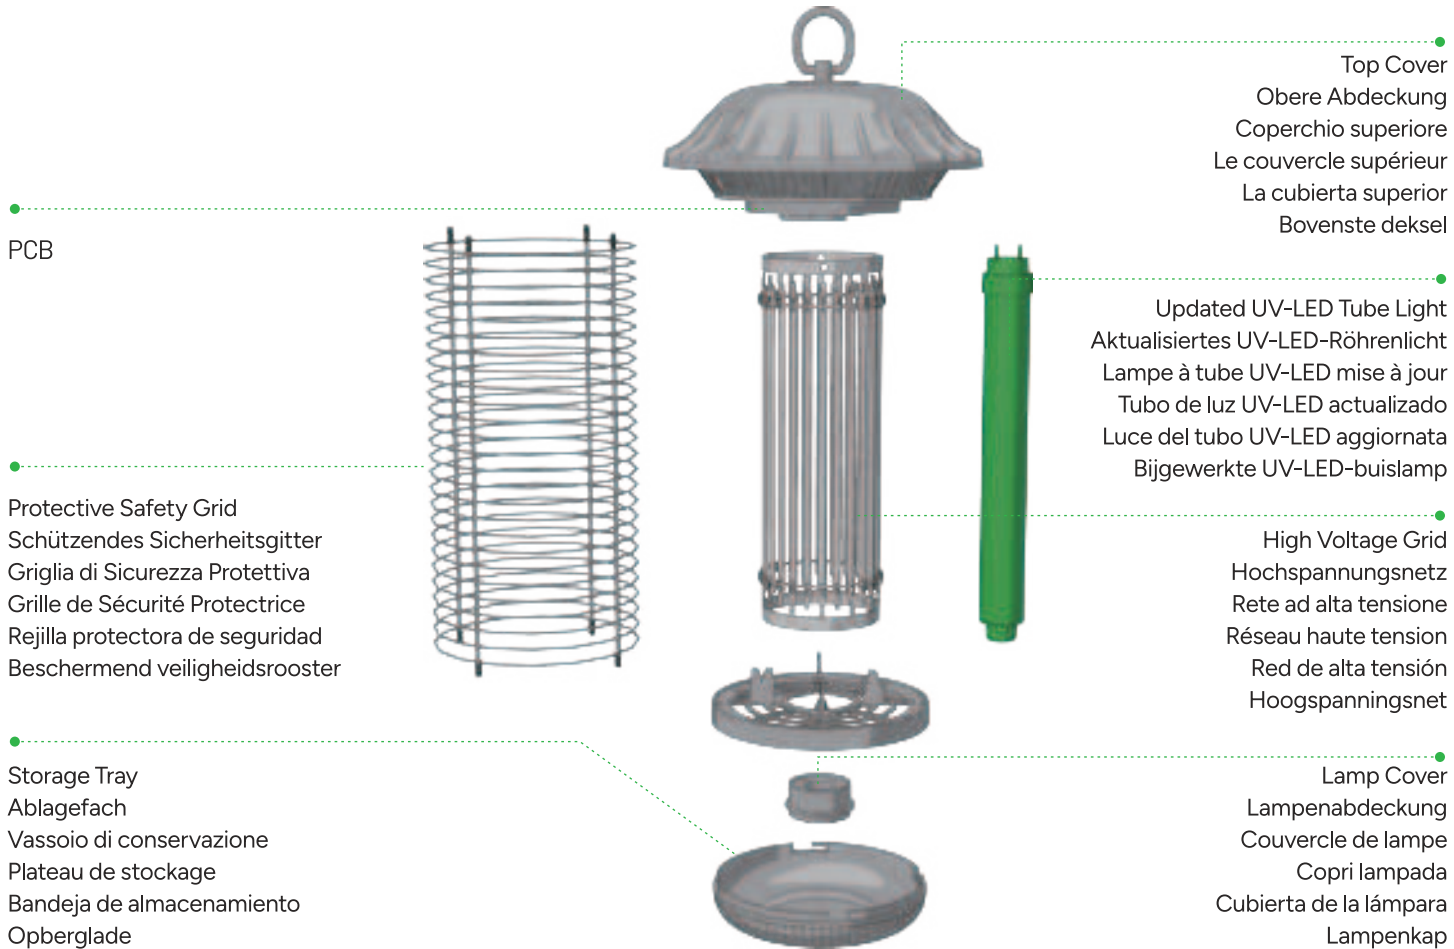

FCC STATEMENT:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment)
This marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

EN ►

Important Notes:

1. It is advised to hang the bug zapper against the wall at a height of between 1.2 and 0.3 meters.
2. Make sure the device is out of reach of children and away from light sources.
3. An extension cord may be required for hanging use.
4. You should keep it away from any flammable materials.
5. To ensure your mosquito killer lamp functions at its best, clean it once a week. This prevents the accumulation of dead insects, which can impair the product's performance or cause continuous electrical discharges that might lead to malfunction.

▼ Warning!

1. DANGEROUS HIGH VOLTAGE. Do not put any object inside or attempt to touch any internal components. Ensure that children do not play with the appliance or try to stick their fingers or other objects through the outer safety grill.
2. Never place any metal object through the safety screen, even if the appliance is disconnected from the main supply.
3. Disconnect the unit from the main power by unplugging it and wait 1 minute before any clean maintenance.

DE ►

Wichtige Notizen:

1. Es wird empfohlen, den Insektenvernichter in einer Höhe von etwa 1,2 m und 0,3 m an der Wand aufzuhängen.
2. Stellen Sie sicher, dass das Gerät von Lichtquellen und der Reichweite von Kindern ferngehalten wird
3. Für hängende Verwendung ist möglicherweise ein Verlängerungskabel erforderlich.
4. Halten Sie es von Materialien fern, die leicht Feuer fangen können.
5. Eine regelmäßige Reinigung der Mückenvernichtungslampe einmal pro Woche ist erforderlich, um die Ansammlung toter Insekten zu vermeiden, die die Leistung des Produkts beeinträchtigen oder eine kontinuierliche Entladung und einen Produktausfall verursachen könnten.

▼ Warnung!

1. GEFÄHRLICHE HOCHSPANNUNG. Legen Sie keine Gegenstände hinein und versuchen Sie nicht, interne Komponenten zu berühren. Stellen Sie sicher, dass Kinder nicht mit dem Gerät spielen oder versuchen, ihre Finger oder andere Gegenstände durch das äußere Sicherheitsgitter zu stecken.
2. Stecken Sie niemals Metallgegenstände durch das Schutzgitter, selbst wenn das Gerät vom Stromnetz getrennt ist.
3. Trennen Sie das Gerät vom Stromnetz, indem Sie es ausstecken und warten Sie 1 Minute, bevor Sie es reinigen.

FR ►

Notes Importantes:

1. Il est suggéré d'accrocher le destructeur d'insectes à une hauteur d'environ 1,2 mètre et 0,3 m contre le mur.
2. Assurez-vous de garder l'appareil éloigné des sources lumineuses et de la portée des enfants
3. Pour une utilisation suspendue, une rallonge peut être nécessaire.
4. Tenez-le à l'écart de tout matériau qui s'enflamme facilement.
5. Un nettoyage régulier de la lampe anti-moustique une fois par semaine est nécessaire pour éviter l'accumulation d'insectes morts qui affecteraient les performances du produit ou provoqueraient une décharge continue et provoqueraient une défaillance du produit.

▼ Avertissement!

1. HAUTE TENSION DANGEREUSE. Ne placez aucun objet à l'intérieur et n'essayez pas de toucher les composants internes. Assurez-vous que les enfants ne jouent pas avec l'appareil ou n'essayent pas de passer leurs doigts ou d'autres objets à travers la grille de sécurité extérieure.
2. Ne placez jamais d'objet métallique à travers l'écran de sécurité, même si l'appareil est débranché de l'alimentation principale.
3. Déconnectez l'appareil de l'alimentation principale en le débranchant et attendez 1 minute avant toute opération de maintenance.

ES ►

Notas Importantes:

1. Se recomienda colgar el matamosquitos contra la pared a una altura de entre 1,2 y 0,3 metros.
2. Asegúrese de mantener el dispositivo alejado de fuentes de luz y del alcance de los niños.
3. Para colgar, puede ser necesario un cable de extensión.
4. Manténgalo alejado de cualquier material que sea fácil de incendiar.
5. Es necesaria una limpieza regular de la lámpara antimosquitos una vez a la semana para evitar la acumulación de insectos muertos que afectarán el rendimiento del producto o provocarán una descarga continua y provocarán fallas en el producto.

▼ Advertencia!

1. ALTO VOLTAJE PELIGROSO. No coloque ningún objeto dentro ni intente tocar ningún componente interno. Asegúrese de que los niños no jueguen con el aparato ni intenten meter los dedos u otros objetos a través de la rejilla de seguridad exterior.
2. Nunca coloque ningún objeto metálico a través de la pantalla de seguridad, incluso si el aparato está desconectado de la fuente principal.
3. Desconecte la unidad de la alimentación principal desenchufándola y espere 1 minuto antes de cualquier mantenimiento limpio.

IT ►

Note importanti:

1. Si consiglia di appendere la lampada elettrica antizanzare al muro a un'altezza compresa tra 1,2 e 0,3 metri.
2. Assicurarsi che il dispositivo sia tenuto lontano da fonti di luce e dalla portata dei bambini.
3. Potrebbe essere necessaria una prolunga per l'uso sospeso.
4. Tenerlo lontano da materiali facilmente incendiabili.
5. È necessaria una pulizia regolare della lampada antizanzare una volta alla settimana per evitare l'accumulo di insetti morti che potrebbero compromettere le prestazioni del prodotto o causare scariche continue e causare guasti al prodotto.

▼ Avvertimento!

1. ALTA TENSIONE PERICOLOSA. Non inserire alcun oggetto all'interno o tentare di toccare i componenti interni. Assicurarsi che i bambini non giochino con l'apparecchio o cerchino di infilare le dita o altri oggetti attraverso la griglia di sicurezza esterna.
2. Non inserire mai oggetti metallici attraverso lo schermo di protezione, anche se l'apparecchio è scollegato dalla rete elettrica.
3. Scollegare l'unità dall'alimentazione principale scollegandola e attendendo 1 minuto prima di qualsiasi manutenzione pulita.

NL ►

Belangrijke opmerkingen:

1. Het is raadzaam om de elektrische insectenverdelger op een hoogte van 1,2 tot 0,3 meter aan de muur te hangen.
2. Zorg ervoor dat het apparaat buiten bereik van kinderen en uit de buurt van lichtbronnen is.
3. Voor hangend gebruik is mogelijk een verlengsnoer vereist.
4. Houd het apparaat uit de buurt van brandbare materialen.
5. Om ervoor te zorgen dat uw muggenlamp optimaal functioneert, moet u deze eenmaal per week schoonmaken. Dit voorkomt de ophoping van dode insecten, wat de prestaties van het product kan aantasten of voortdurende elektrische ontladingen kan veroorzaken die tot storingen kunnen leiden.

▼ Waarschuwing!

1. GEVAARLIJKE HOGE SPANNING. Plaats geen voorwerpen in het apparaat en probeer geen interne componenten aan te raken. Zorg ervoor dat kinderen niet met het apparaat spelen of proberen hun vingers of andere voorwerpen door het buitenste veiligheidsrooster te steken.
2. Steek nooit metalen voorwerpen door het veiligheidsscherm, zelfs niet als het apparaat is losgekoppeld van de netvoeding.
3. Koppel het apparaat los van de netstroom door de stekker uit het stopcontact te halen en wacht 1 minuut voordat u onderhoudswerkzaamheden uitvoert.