 


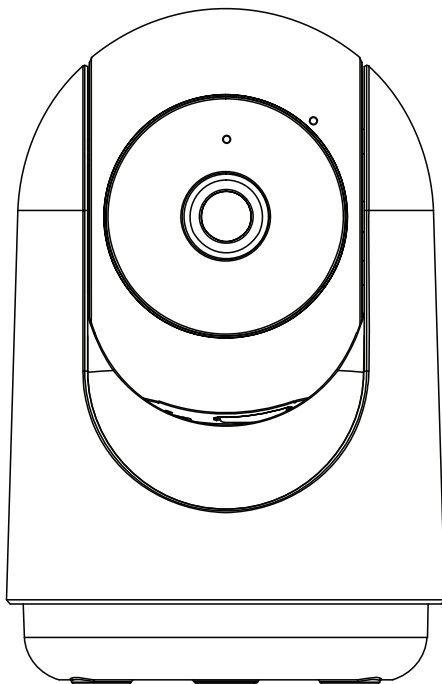

Thank you for your purchase. Questions, comments or feedback? We'd love to hear from you.  
Visit [feit.com/help](https://feit.com/help) for support.

## SMART INDOOR CAMERA

### IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE



Works with  
Feit Electric App



Only supports  
2.4GHz Wi-Fi  
Networks

**READ BEFORE INSTALLATION.  
SAVE THESE INSTRUCTIONS.**

Questions, problems, missing parts? Before returning to the store,  
contact Feit Electric Customer Service  
8 a.m. - 5 p.m., PST, Monday - Friday

**FEIT.COM**

We appreciate the trust and confidence you have placed in Feit Electric through the purchase of this product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Feit Electric.

# Table of Contents

Safety Information . . . . .

FCC Statement . . . . .

Warranty . . . . .

Pre-Assembly . . . . .

Description . . . . .

Bracket Installation . . . . .

Tripod Installation . . . . .

Adhesive Installation . . . . .

APP Setup . . . . .

Need Help? . . . . .

Troubleshooting . . . . .

2

2

2

3

4

5

6

6

7

7

8

## Safety Information

### IMPORTANT SAFEGUARDS:

ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT.

#### Supplier's Declaration of Conformity:

47 CFR § 2.1077 Compliance Information

**Responsible Party:** Feit Electric Company  
4901 Gregg Road, Pico Rivera, CA 90660, USA  
[www.feit.com](http://www.feit.com)

**Unique Identifier:** CAM/PAN/WIFI/G2

## SAVE THESE INSTRUCTIONS



**CAUTION:** Please read all information carefully before installation.



**CAUTION:** Intended for indoor use. ONLY FOR DRY LOCATIONS.



**CAUTION:** Only use 5VDC 1A adapter (included). This product is not user-serviceable. Do not attempt to open the product enclosure for any reason. Reliable operating temperature is -4°F to 122°F (-20°C to 50°C).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. CAN ICES-005 (B).

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

The device can be used in mobile (min 7.87 in.) exposure condition without restriction.

 
#### Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

## Limited Warranty


This product is warranted to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please visit [feit.com/help](http://feit.com/help) for instructions on replacement/refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

TOOLS REQUIRED TO MOUNT CAMERA

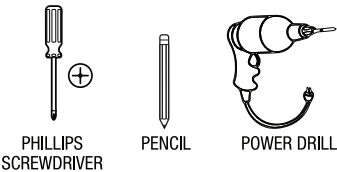


**NOTE:** Hardware not shown to actual size.

 HARDWARE INCLUDED

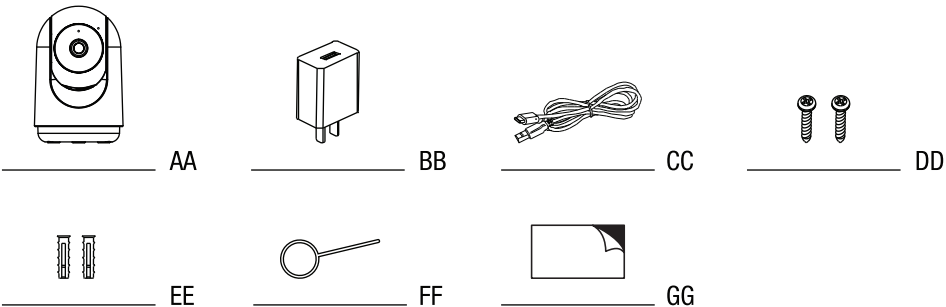

| Part | Description           | Quantity |
|------|-----------------------|----------|
| AA   | Smart Indoor Camera   | 1        |
| BB   | Power Adapter         | 1        |
| CC   | USB Type C Cable      | 1        |
| DD   | Mounting Screws       | 2        |
| EE   | Mounting Anchors      | 2        |
| FF   | Reset Pin             | 1        |
| GG   | Double Sided Adhesive | 1        |

 
Description

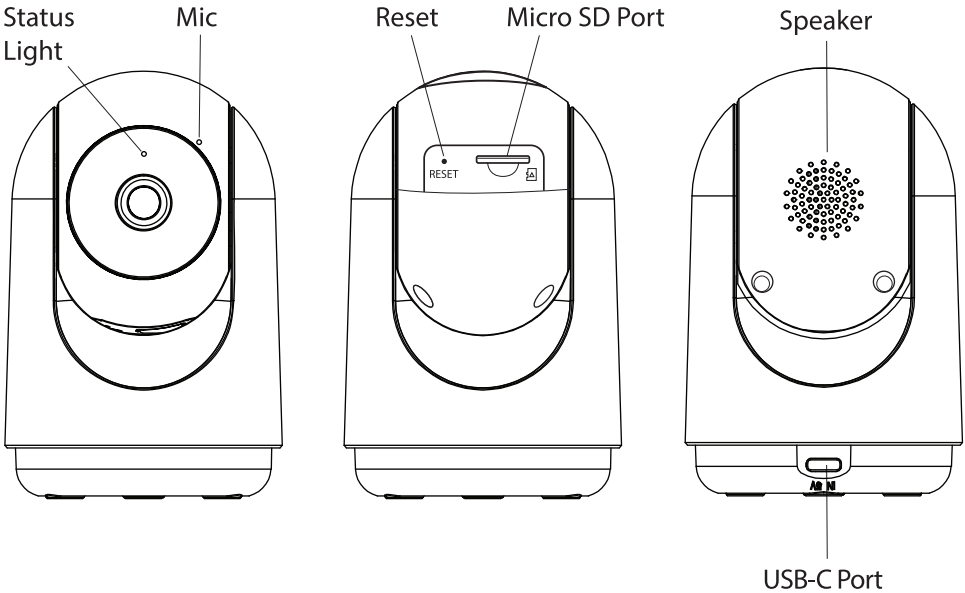

| Input Power (USB Type C Cable): 5VDC, Max. 1A |                                                                                                                                          |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Status Light                                  | Blinking RED = Pairing Mode<br>Solid RED = No Wi-Fi Connection<br>Blinking BLUE = Connecting to Wi-Fi<br>Solid BLUE = Connected to Wi-Fi |
| SD Card Slot                                  | Add 128GB or less microSD card to enable recording (not included). Only supports microSD card with FAT32 format.                         |
| Reset                                         | Press and hold for 5 seconds with the Reset Pin (HH) to reset the camera.                                                                |


1 Install with Bracket

 Mark the screw positions 1 5/8 inches apart. Drill holes at the marked points if installing on surface such as concrete, brick, or drywall. Insert Mounting Anchors (EE) into holes. You can skip this step if installing on wood or siding. Once holes are drilled leave about a 4mm gap to securely mount the camera. Tighten or loosen screws as needed.

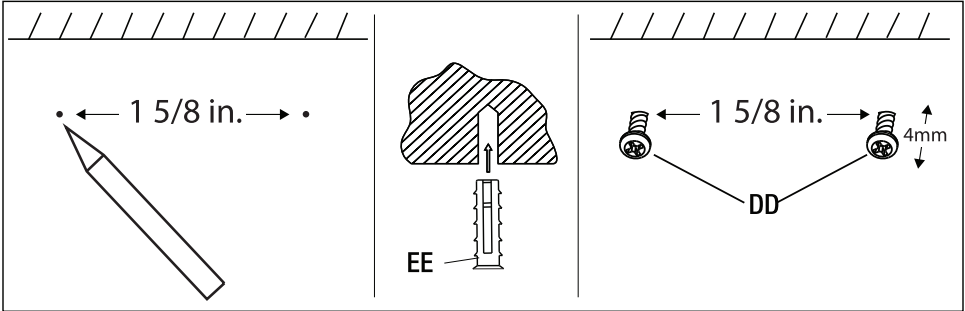


2 Lock Smart Indoor Camera in place

 Plug in your Smart Indoor Camera (AA) with the provided USB Type C Cable (CC). Attach the Smart Indoor Camera (AA) to where the screws have been mounted and slide to lock into place. Ensure outlet is within reach to power device. Connect the USB-C cable (CC) to the power adapter (BB) provided.

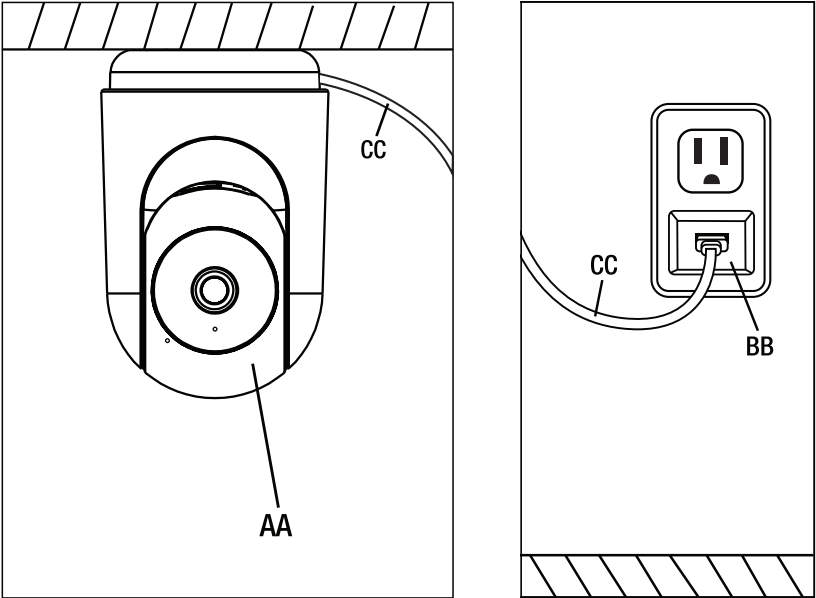

### 1 Attaching the Camera to a Tripod

 The bottom of the camera has 1/4-20 UNC (Standard camera mount).  
To mount the Smart Indoor Camera (AA) place on mount and turn clockwise until locked in place. Tripod is not included.

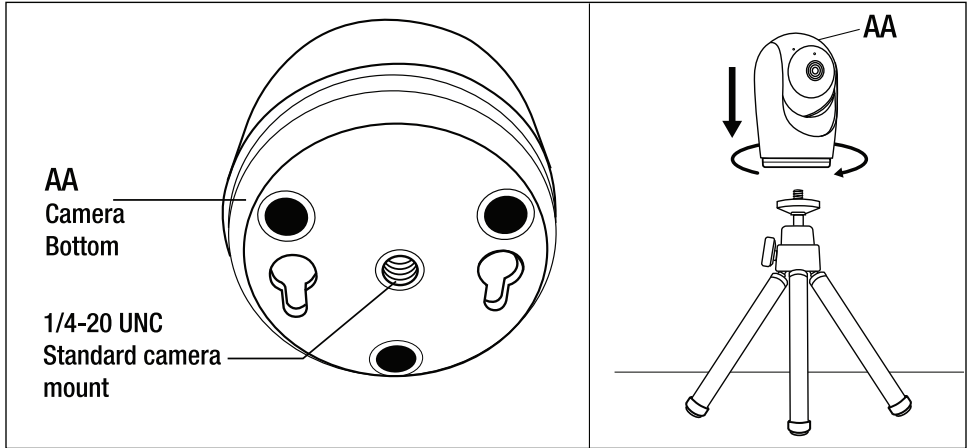


## Adhesive Installation

### 1 Cleaning the Surface

Find a flat location and thoroughly clean the surface for proper installation.


### 2 Attaching the Adhesive to the Camera

 Peel one side of the double-sided adhesive (GG) and firmly attach to the bottom of the camera (AA).

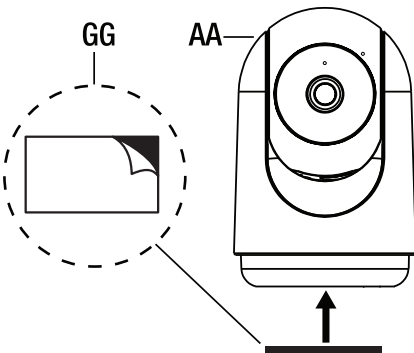

### 3 Attaching the Camera to the Surface

 Peel the other side of the double-sided adhesive (GG) and firmly press on to the mounting surface to stabilize the camera (AA).

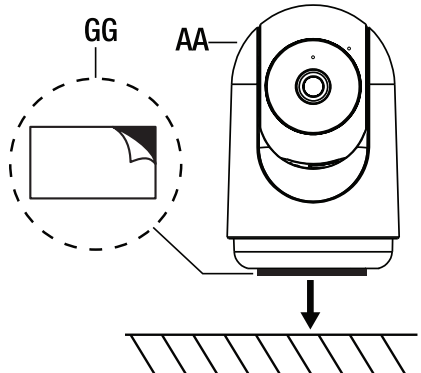


Download and install the Feit Electric app

- Search for the Feit Electric app in the App Store or Google Play Store.
- Download and install the Feit Electric app on your smart device.



Set up the smart indoor camera using the Feit Electric app

 - Check to be sure the camera is in pairing mode. The RED indicator light must be blinking rapidly to connect. If not already blinking, press and hold the Reset Button until you hear an audible tone. Use the Feit Electric app to complete the set up.
- Tap Add Device or the + sign, then select Camera and confirm. You will be prompted to enter your Wi-Fi network and password.
- Follow the directixons in the app to pair your device using the QR code. It may take 2-3 attempts.
- You can find more pairing methods in the dropdown menu on the device set-up page.

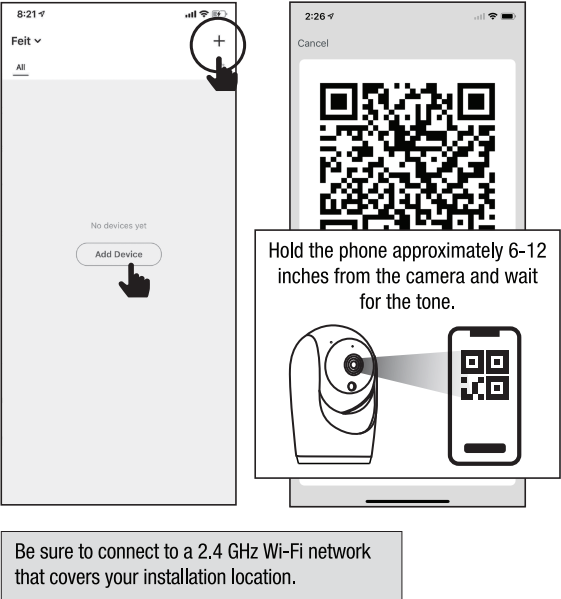

Need Help?

Thank you for your purchase.  
Questions, comments or feedback?  
We'd love to hear from you.  
Visit **feit.com/help** for support  
or connect with us:



| PROBLEM                                                                       | CORRECTIVE ACTION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Camera will not connect to my Wi-Fi network                                   | <ul style="list-style-type: none"><li>• Make sure the LED is blinking red. If the LED is not blinking red, you will need to press and hold Reset Button located at the front of the camera (see the Description section).</li><li>• Make sure the Wi-Fi network is a 2.4GHz network, device will not connect to a 5GHz network.</li><li>• Test your Wi-Fi network with other devices such as your phone or computer to make sure it is operating properly.</li><li>• The Wi-Fi connection may be out of range during pairing. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection.</li><li>• Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.</li></ul> |
| The camera is offline                                                         | <ul style="list-style-type: none"><li>• There could be a temporary issue with your internet connection (e.g., service disruption). Please try again in a few minutes.</li><li>• Make sure your Wi-Fi router is turned On.</li><li>• The camera may not have power to it, make sure the wall switch and breaker is in the On position.</li><li>• Make sure the camera is getting a good signal from your Wi-Fi router. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection.</li><li>• The camera may have been disconnected from your Wi-Fi network, press and hold Reset Button (see the Description section) until you see a blinking red LED and hear an audible tone.</li></ul>             |
| What do the blinking LEDs mean?                                               | <ul style="list-style-type: none"><li>• Blinking RED = Pairing Mode</li><li>• Solid RED = No Wi-Fi Connection</li><li>• Blinking BLUE = Connecting to Wi-Fi</li><li>• Solid BLUE = Connected to Wi-Fi</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Live video stream is slow to load                                             | <p>Camera streaming issues may be caused by any of the following:</p> <ul style="list-style-type: none"><li>• Your phone's cellular connection, which relies on mobile coverage.</li><li>• Limited internet bandwidth at home. For example, other video streaming services running at the same time on your network can cause congestion slowing down the internet upload and download speeds.</li><li>• Wi-Fi reception may not be stable or work reliably if the camera's Wi-Fi signal strength is less than 2 signal bars. You may need to install a Wi-Fi repeater or extender to boost the Wi-Fi signal.</li></ul>                                                                                                                                  |
| How do I reset the camera to reenter pairing mode?                            | <ul style="list-style-type: none"><li>• Press and hold reset button located at the back of the camera (see the Description section) until you see a blinking red LED and hear an audible tone.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| The camera is not recording                                                   | <ul style="list-style-type: none"><li>• Make sure Record Button is turned On in app, under SD Card Settings. This is located in the upper right corner in the control panel.</li><li>• Make sure that the microSD card is installed correctly. To confirm the camera is recognizing the microSD card, go to the SD Card Settings in the Settings menu and make sure microSD Card Capacity menu shows Total Capacity, Used and Free Space. If this does not appear you may consider reformatting the microSD card.</li></ul> <p>WARNING: Reformatting microSD card will delete all videos stored on card. Please go through the troubleshooting section before doing so or contact our Customer Support Team.</p>                                         |
| How do I set the camera to Event or Continuous Recording?                     | <ul style="list-style-type: none"><li>• In the Settings menu under SD Card Settings make sure Record Button is turned On and then select Event Recording or Continuous Recording.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| How can I check the available space on the SD Card?                           | <ul style="list-style-type: none"><li>• In the Settings menu under SD Card Settings, you will see Used Space and Free Space. Note: Camera only supports 128GB or less microSD cards with FAT32 format.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| What happens when the microSD card reaches full capacity?                     | <ul style="list-style-type: none"><li>• Once the microSD card reaches full capacity, new videos will start rewriting (deleting) over the oldest videos.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Can I use a new microSD card if I do not want to record over existing videos? | <ul style="list-style-type: none"><li>• Yes, you can use a new microSD card if you do not want to record over existing videos by using the app to tilt the camera to reveal the microSD card slot and replacing the existing microSD card with a new one as long as it does not exceed 128GB. Once this is completed you will need to format the microSD card by going to the SD Card Settings in the Settings menu and pressing Format SD Card then Confirm. WARNING: Reformatting microSD card will delete all content stored on card.</li></ul>                                                                                                                                                                                                       |

SD™, microSD™, and SDHC™ are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries, or both.