

Motorized change-over switches OTM_F_C_

Installation instruction


34OTM_F_C_ / 1SCC303009M0202




ABB

Contents

Mounting and dimensional drawings	4
Mounting positions.....	5
Control circuit	5
Manual operation: Local.....	6
Electrical operation: Remote	6
Automatic operation.....	7
Impulse control.....	8
Continuous control.....	8
Locking.....	9
Locking state information.....	9
Technical data	10
Terminal clamp sets: OZX.....	11
Bridging bars: OMZC.....	11
Terminal shrouds: OTS_	12
Auxiliary contact blocks: OA_	13
Handle storage: OTVS0.....	13
Fourth pole: OTP_	14

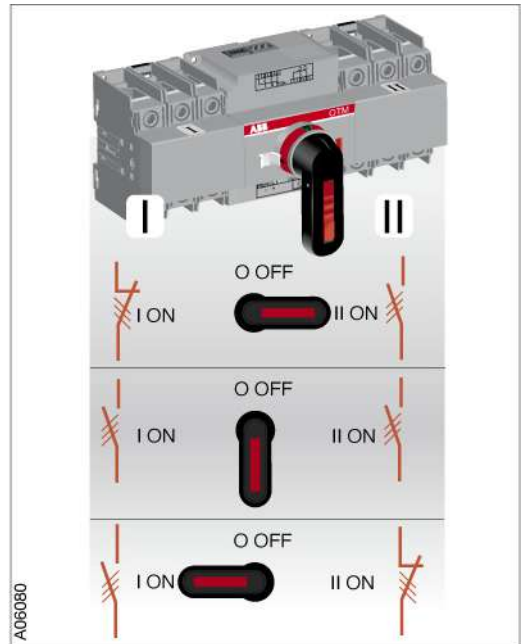





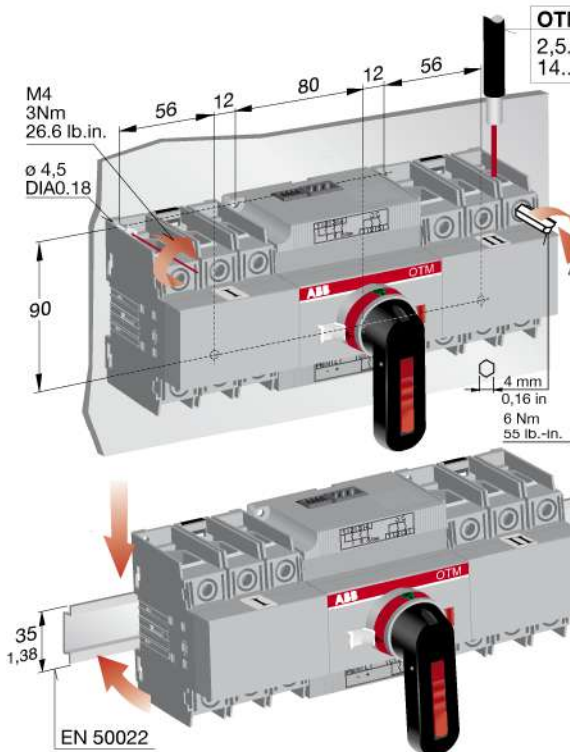
**OTM40**

2,5...25mm² / 2 x 2,5 - 16mm²
14...4 AWG / 2 x 14 - 6 AWG

OTM63-125


10...70mm²
8...2/0 AWG

Note:
Use protection against direct contact.
For example:

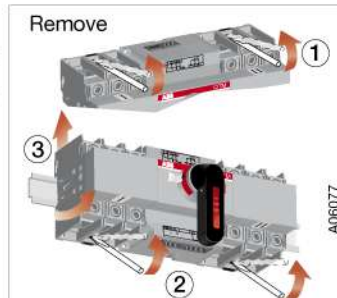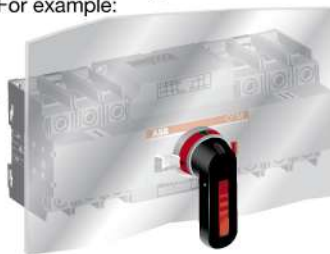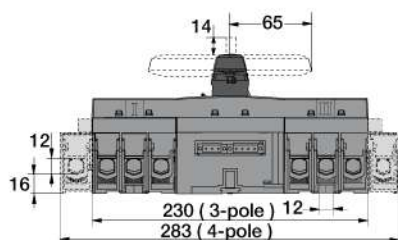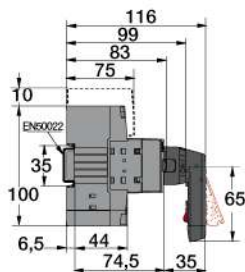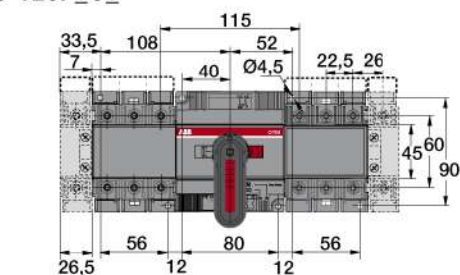**OTM30-125F_C_**

M00352/OTM30-125F_C_M_A

Mounting positions

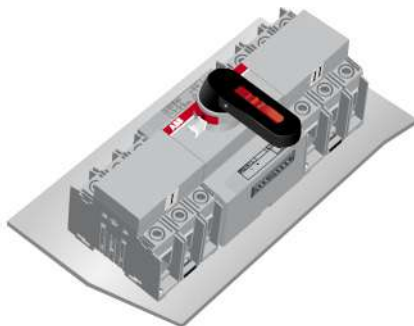


A06076


Control Circuit



Only an authorised electrician may perform the electrical installation and maintenance of motorized switch. Do not attempt any installation or maintenance actions when a motorized switch is connected to the electrical mains. Before starting work, make sure that the switch is de-energised.

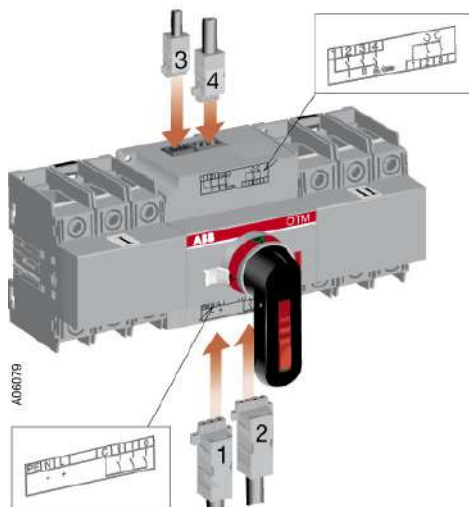

A06079

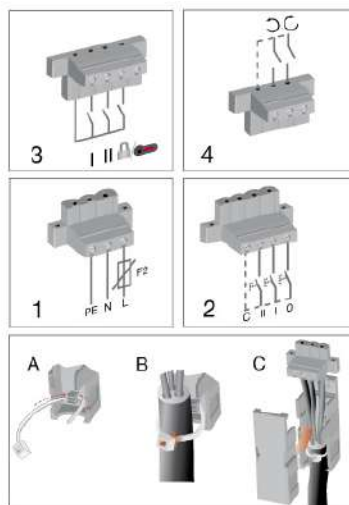


1. Terminal for motor operator voltage supply
2. Control terminal for push buttons
3. Terminal for state information (also used with the automatic control unit)
4. Control terminal for automatic control unit (If used OMD controller)



Do not couple power for the control terminal. See the correct terminal for the power supply.

Manual operation: Local

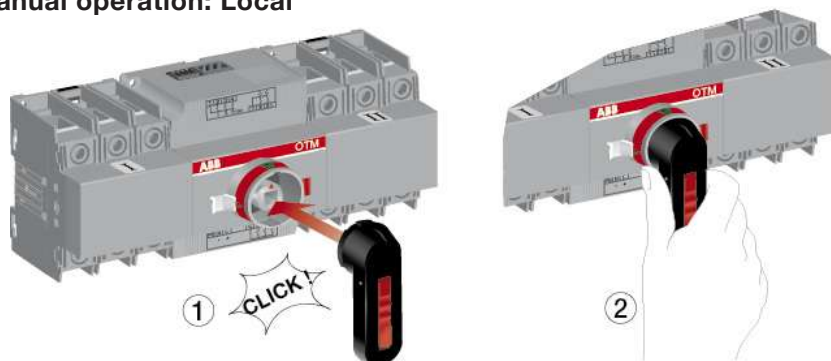

A05081



Electrical operation is prevented when the handle is attached to the switch panel.

Electrical operation: Remote




Never open any covers on the product. There may be dangerous external control voltages inside the motorized switch even if the voltage is turned off.




Never handle control cables when the voltage of the motorized switch or external control circuits are connected.



Exercise sufficient caution when handling the unit.

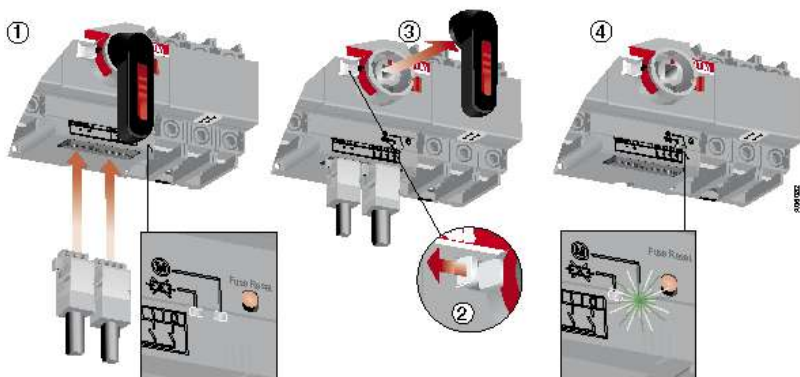


Automatic operation

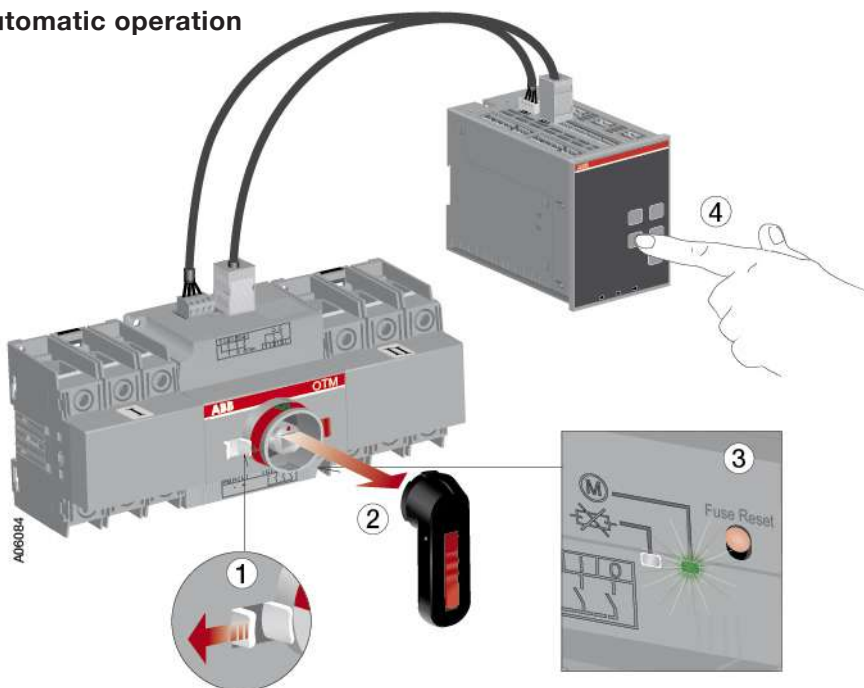


See detailed installation instructions for OMD controllers from OMD user manuals.


Resetting Fuse

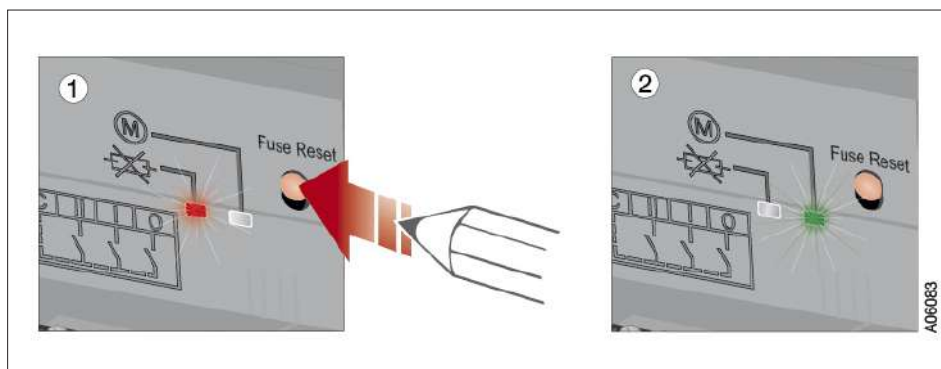

Impulse control

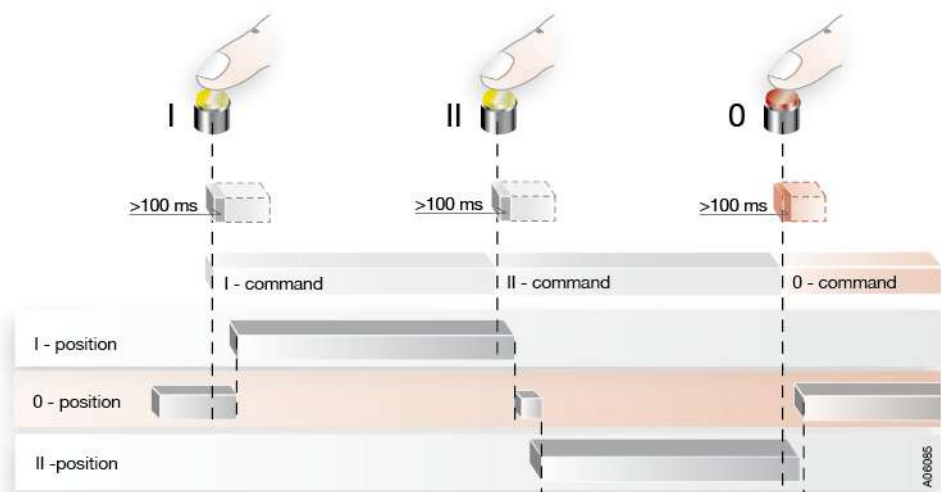

Continuous control

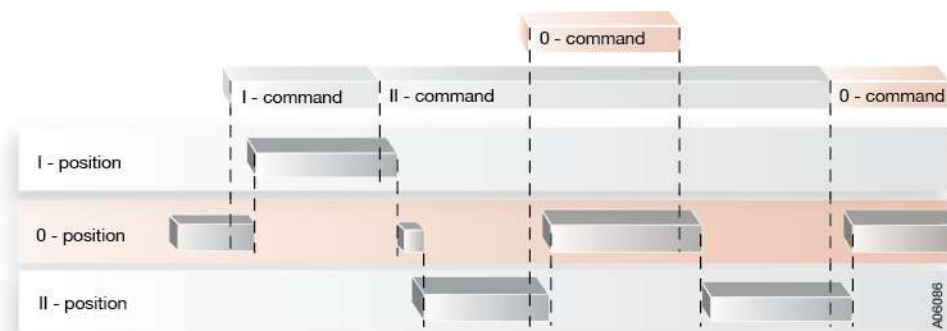


If a new command is given before the switch has reached the position of the previous command, the internal protection may operate.

Locking

Prevent manual and electrical operation.



Locking possible at any position. Check position before locking.

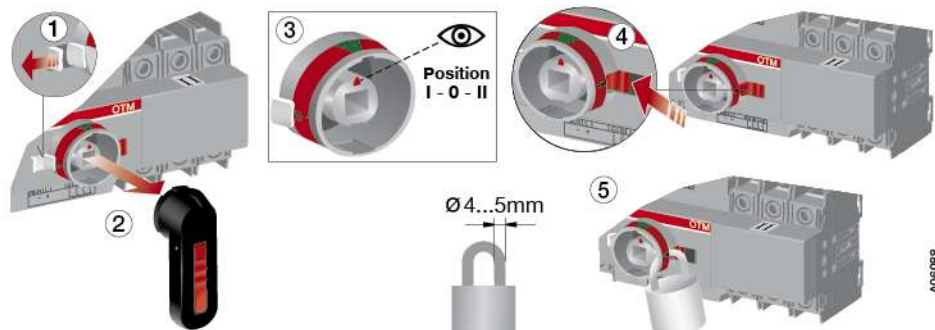

A00068

State information

A00095

Technical data

 
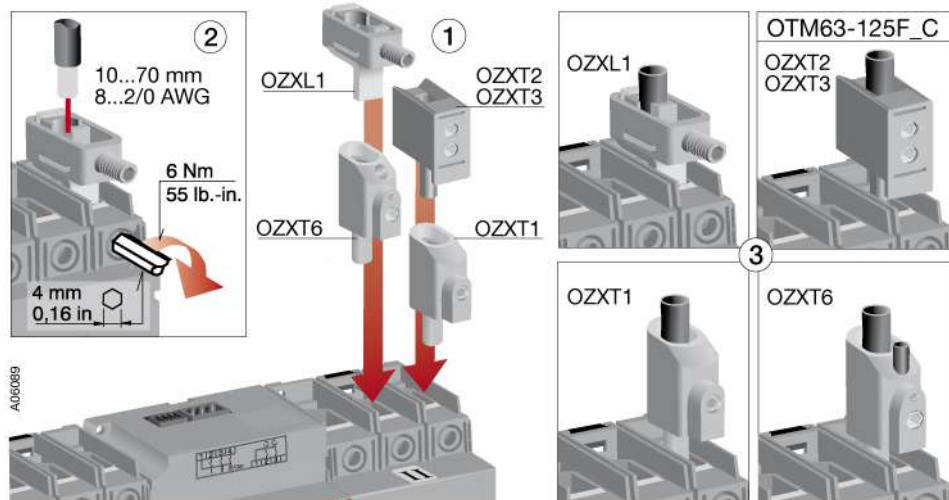
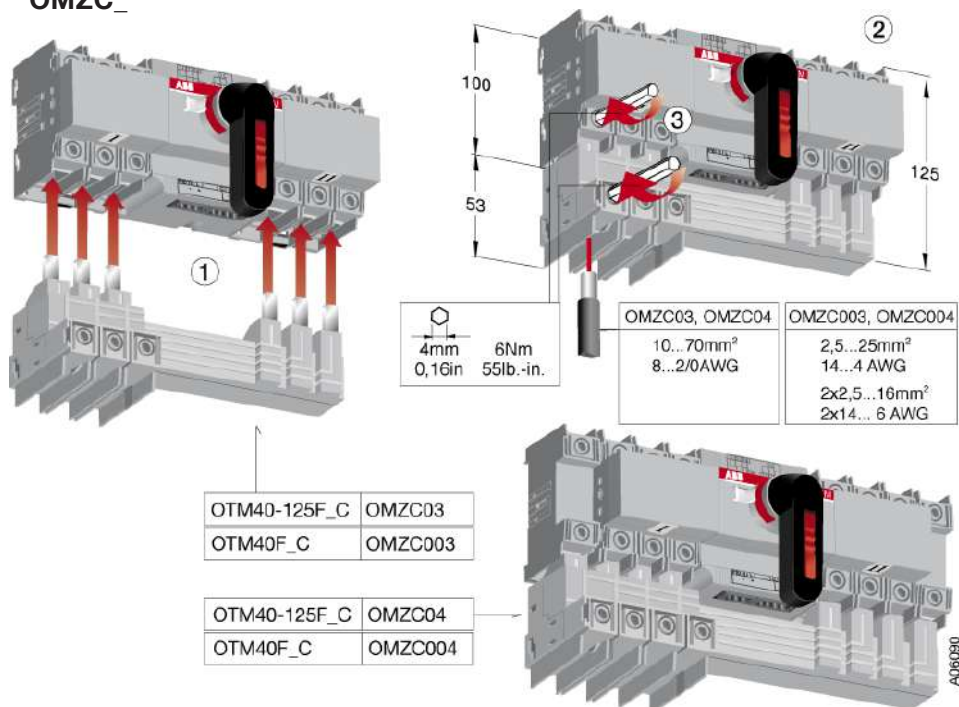
Motor operator, control circuit	Value	Cabling/Rating
Rated operational voltage U [V]	110-240 Vac/dc 50-60Hz	
	24 Vdc	
Operating voltage range	0.85... 1.1 x U	
Operating angle	90° 0-I, I-0, 0-II, II-0; 180° I-0-II	
Operating time	See Table 2	
Protection degree	IP 20, front panel	
Rated impulse withstand voltage Uimp	4 kV	
Voltage supply	PEN L	1,5 -2,5mm ²
F2	Max. MCB 16A	
Control terminal for the push-buttons	C II I 0	1,5 -2,5mm ²
Maximum cable length	100 m	
Terminal for state information Also used with the automatic control unit		1,5mm ² 3A AC-1/250V
Common, voltage supply	1	
Position of change-over switch I	2	
Position of change-over switch II	3	
Handle attached or motor operator locked	4	
SCPD	Max. MCB C2A	
Control terminal for automatic control unit If used OMD_ controller		1,5-2,5mm ²
Common, voltage supply from motor operator	1	24VDC
Close switch I or open switch II	2	24VDC 500mW
Close switch II or open switch I	3	24VDC 500mW
Operating temperature	-25... +55 °C	
Transportation and storage temperature	-40... +70 °C	
Altitude	Max. 2000m	

Table 1 General technical data of motor operators





Type	Voltage U _e [V]	Nominal current ^{a)} I _n [A]	Current Inrush ^{a)} [A]	Operating time ^{a)} I-0, 0-I, 0-II, II-0 [s]	Operating transfer time ^{a)} I-II or II-I [s]	OFF-time when operating ^{a)} I-II or II-I [s]
OTM40...125_C	110-240 Vac/dc	0,2 - 0,5	1,5 - 3,0	0,5 - 1,0	1,2 - 1,5	0,4 - 0,8
	24 Vdc	0,6	3,6	0,6 - 1,3	1,4 - 2,1	0,6 - 1,0

a) Under nominal conditions


Table 2 Specified technical data of motor operators

OZX_**OMZC_**

OTS_

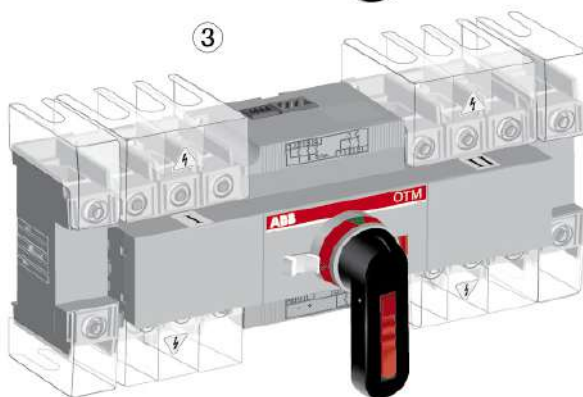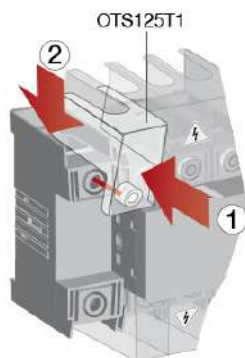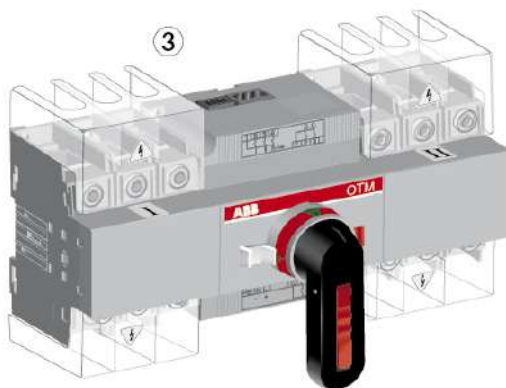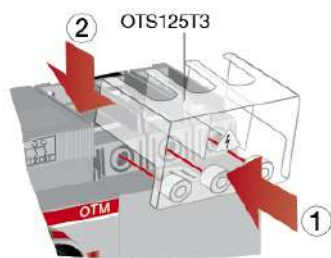

OMZC03, OMZC003
OTS125T3
OMZC04, OMZC004
OTS125T3 + OTS125T1

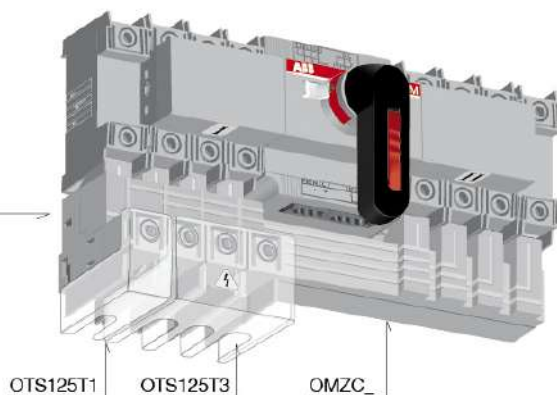


OTS125T1

OTS125T3


OMZC_

AO6031

OA_

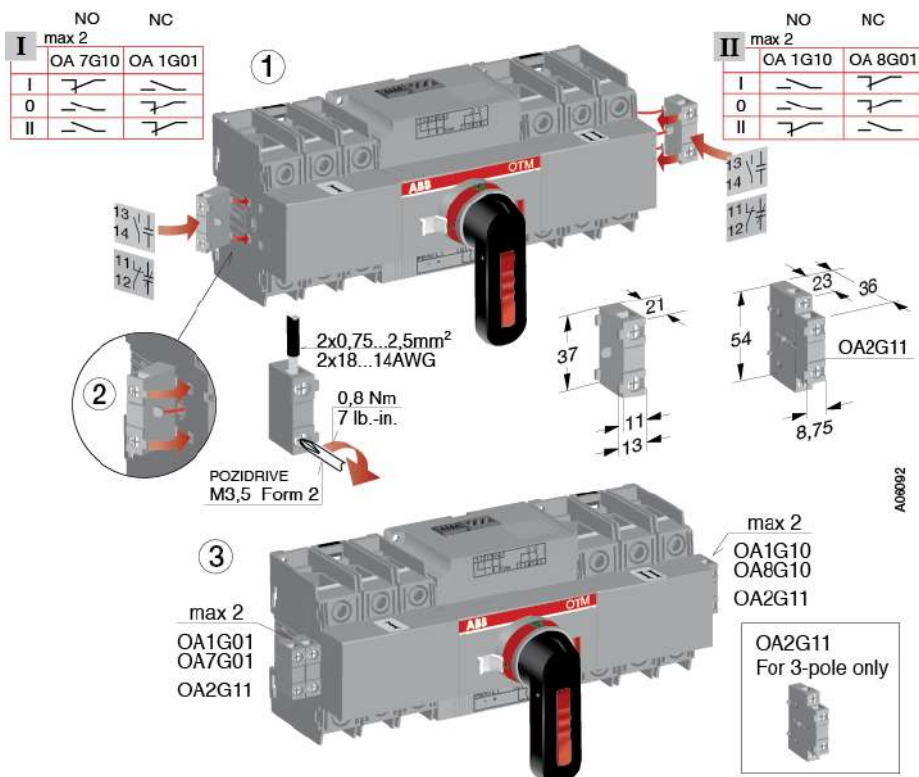

OTVS0

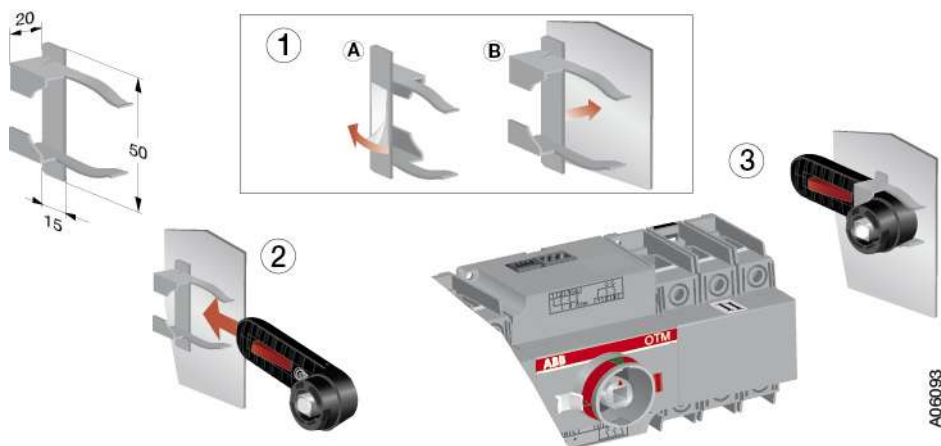

OTP_



OTM40	OTPS60FP	OTPL60FP	OTPN60FP	OTPE60FP
OTM63-125	OTPS125FP	OTPL125FP	OTPN125FP	OTPE125FP
	(N)7 L4 — (N)8 T4	N — N	N — N	PE — PE

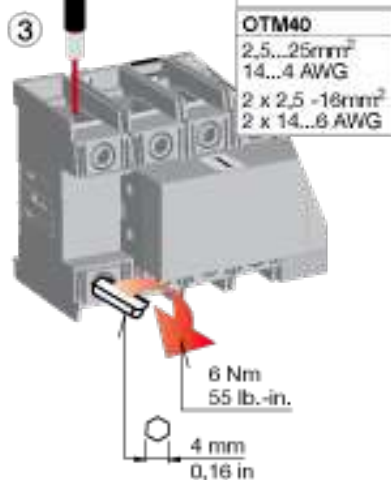
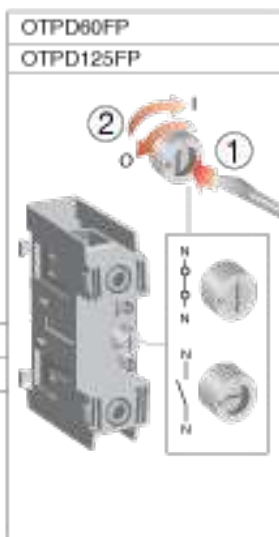




ABB Oy

Low Voltage Switches

P.O Box 622

FI-65101 VAASA, Finland

Telephone +358 10 22 11

Telefax +358 10 22 45708

www.abb.com

The technical data and dimensions are valid
at the time of printing. We reserve the right to
subsequent alterations.