

## seca mBCA Alpha (545) seca TRU Alpha (452)

LAN-Configuration

Configure your LAN connection in just a few steps






## LAN-Configuration

- 1. Please make sure that port 22020 is enabled for inbound and outbound connections within your firewall.
- 2. Please make sure that the unit is powered by the original power supply provided.
- 3. Connect the device to the network via LAN cable.
- 4. A LAN symbol appears at the top right in the display as soon as the device has connected to the network.



- 5. To connect the device to the seca analytics 125, enter the server address as shown below.
- 6. Enter the server address **gpx.secacloud.com** (**gpx.us.secscloud.com** for the US) and press the confirm button at the bottom right

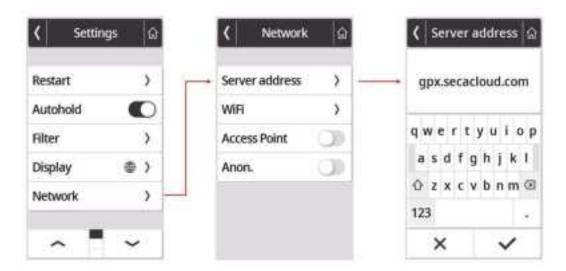

7. This step completes the network settings on the device.