


Operation steps




1 Open the box on the motor

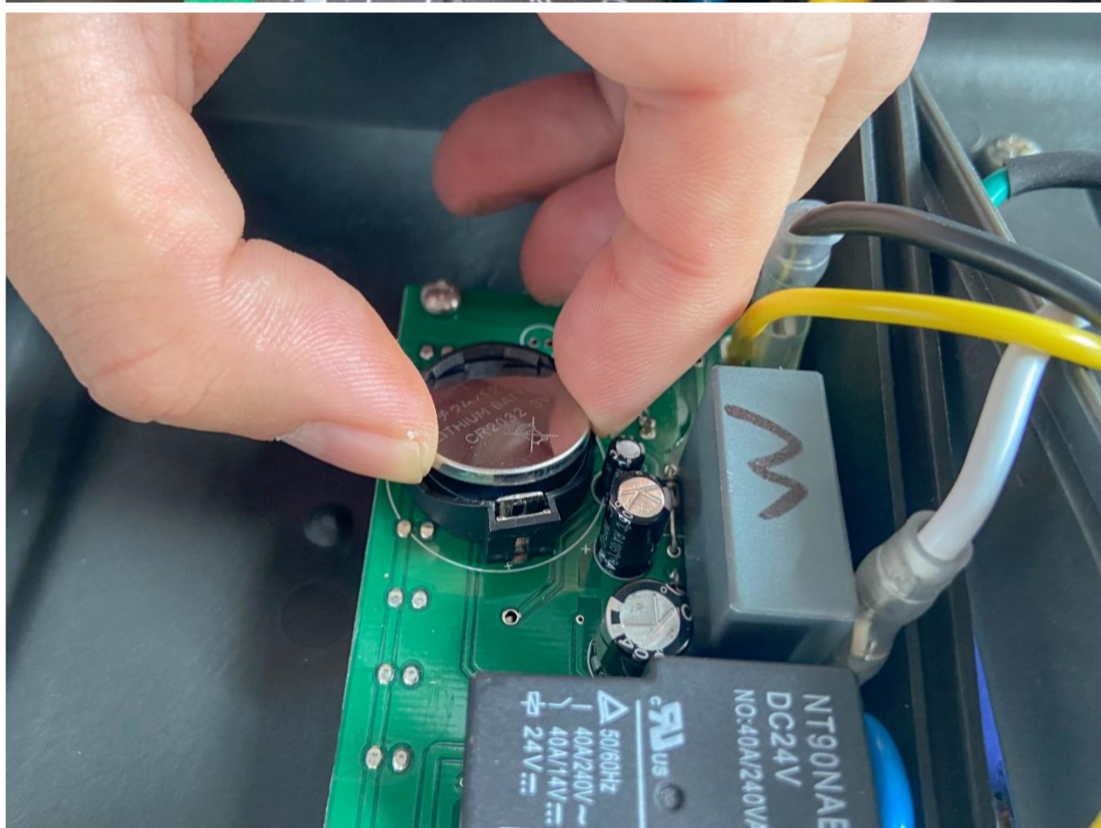

2 Take out the button battery



3 Take out the plastic piece under the battery

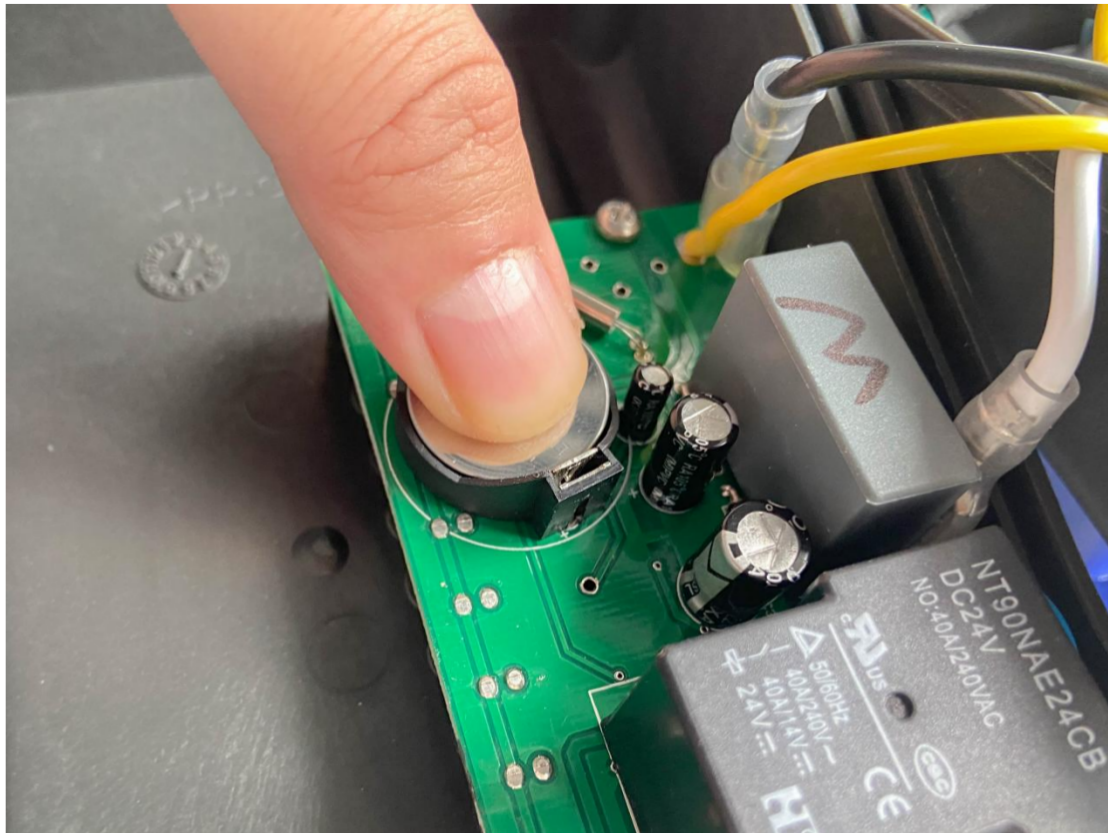

4 Install back the battery and the cover