



Assembly Manual **Height Adjustable Legs**



Contents of the box

Please inspect the contents of your package upon reception to ensure you have received everything that is listed below:

- 4 x Legs
- 4 x Screw M8x55
- 4 x Self-locking Nuts M8
- 1 x Wrench
- 1 x Hex key



Warning

To change the height of the top shelf, you always need to remove the shelf and adjust it to the selected height. Alternatively, with the assistance of another person, you can change the height by unscrewing the screws securing the shelf and adjusting the height of all legs at the same time.

Step 1

Place your legs flat on the bottom cover.



Step 2

Unscrew the nut using the provided tools.




Step 3

Remove the screw securing the leg.



Step 4

Take out the leg from the leg holder.

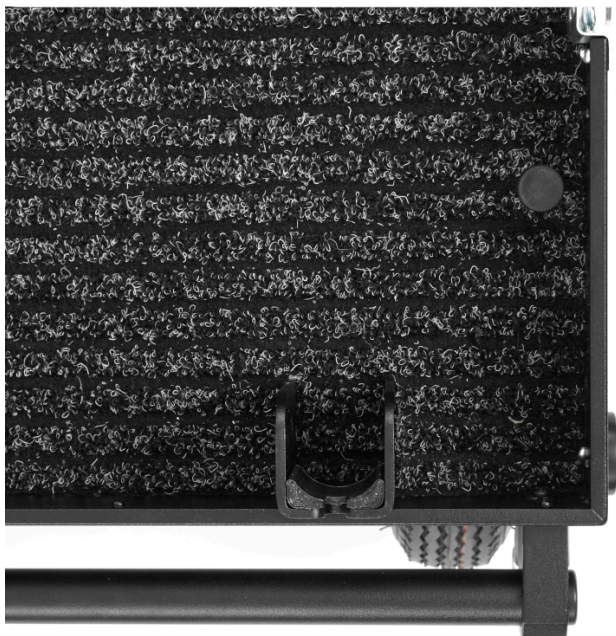

Step 5

Insert the leg with height adjustment into the holder. It may fit tightly, so use some force to insert it.



Step 6

Insert the screw and tighten it with the nut using the provided tools.

Note. Repeat the same steps with the remaining legs.



**After replacing all four legs,
your cart is upgraded.**

The set of legs with adjustable height allows you to change the level of the top shelf on your cart within a range of 25cm. You can adjust it by lifting it upwards one level (5cm) or lowering it by three levels (15cm) from the regular leg length.

Top Shelf height varies between

Model type	8" Pneumatic Wheels	9" Pneumatic Wheels	10" Pneumatic Wheels	9" Aluminum Premium Wheels	10" Aluminum Premium Wheels
	Height				
adicam MINI	855mm to 1055mm	875mm to 1075mm	905mm to 1105mm	895mm to 1095mm	925mm to 1125mm
adicam STANDARD adicam MAX	855mm to 1055mm	875mm to 1075mm	905mm to 1105mm	895mm to 1095mm	925mm to 1125mm
adicam MINI+ adicam STANDARD+ adicam MAX+	855mm to 1055mm	875mm to 1075mm	905mm to 1105mm	895mm to 1095mm	925mm to 1125mm



Basic safety rules - safety first!

When using additional accessories to hang heavy equipment that remains outside of the cart, ensure appropriate cart balance to prevent it from falling over. When balancing the cart, place the load on the lower platform (to lower the centre of the mass as much as possible) so that the centre of the mass is in the centre of the cart. Therefore, if the additional equipment is hanging outside one of the cart's sides, the additional load should be placed close to the opposite side on the lower platform. When preparing the cart, after all accessories have been installed, it is recommended to give the cart a tilt (while standing by to protect it from falling over) to ensure that it is properly balanced.

Warranty

As a manufacturer we provide a one year warranty period for this product from the date of its purchase. The warranty covers only defects regarding the used materials or product's performance that were present at the time of its purchase. The product will be repaired or replaced free of charge during the warranty period if it is recognized as faulty due to these defects. Proof of purchase must be presented (bill or invoice). The warranty does not cover any damage caused by wear and tear, overstrain, improper use or use of inappropriate accessories.

adicam®

ADI TRADE Adrian Wyszynski
ul. Gdyńska 61A, 05-200 Wołomin
office@adicam.pl www.adicam.pl