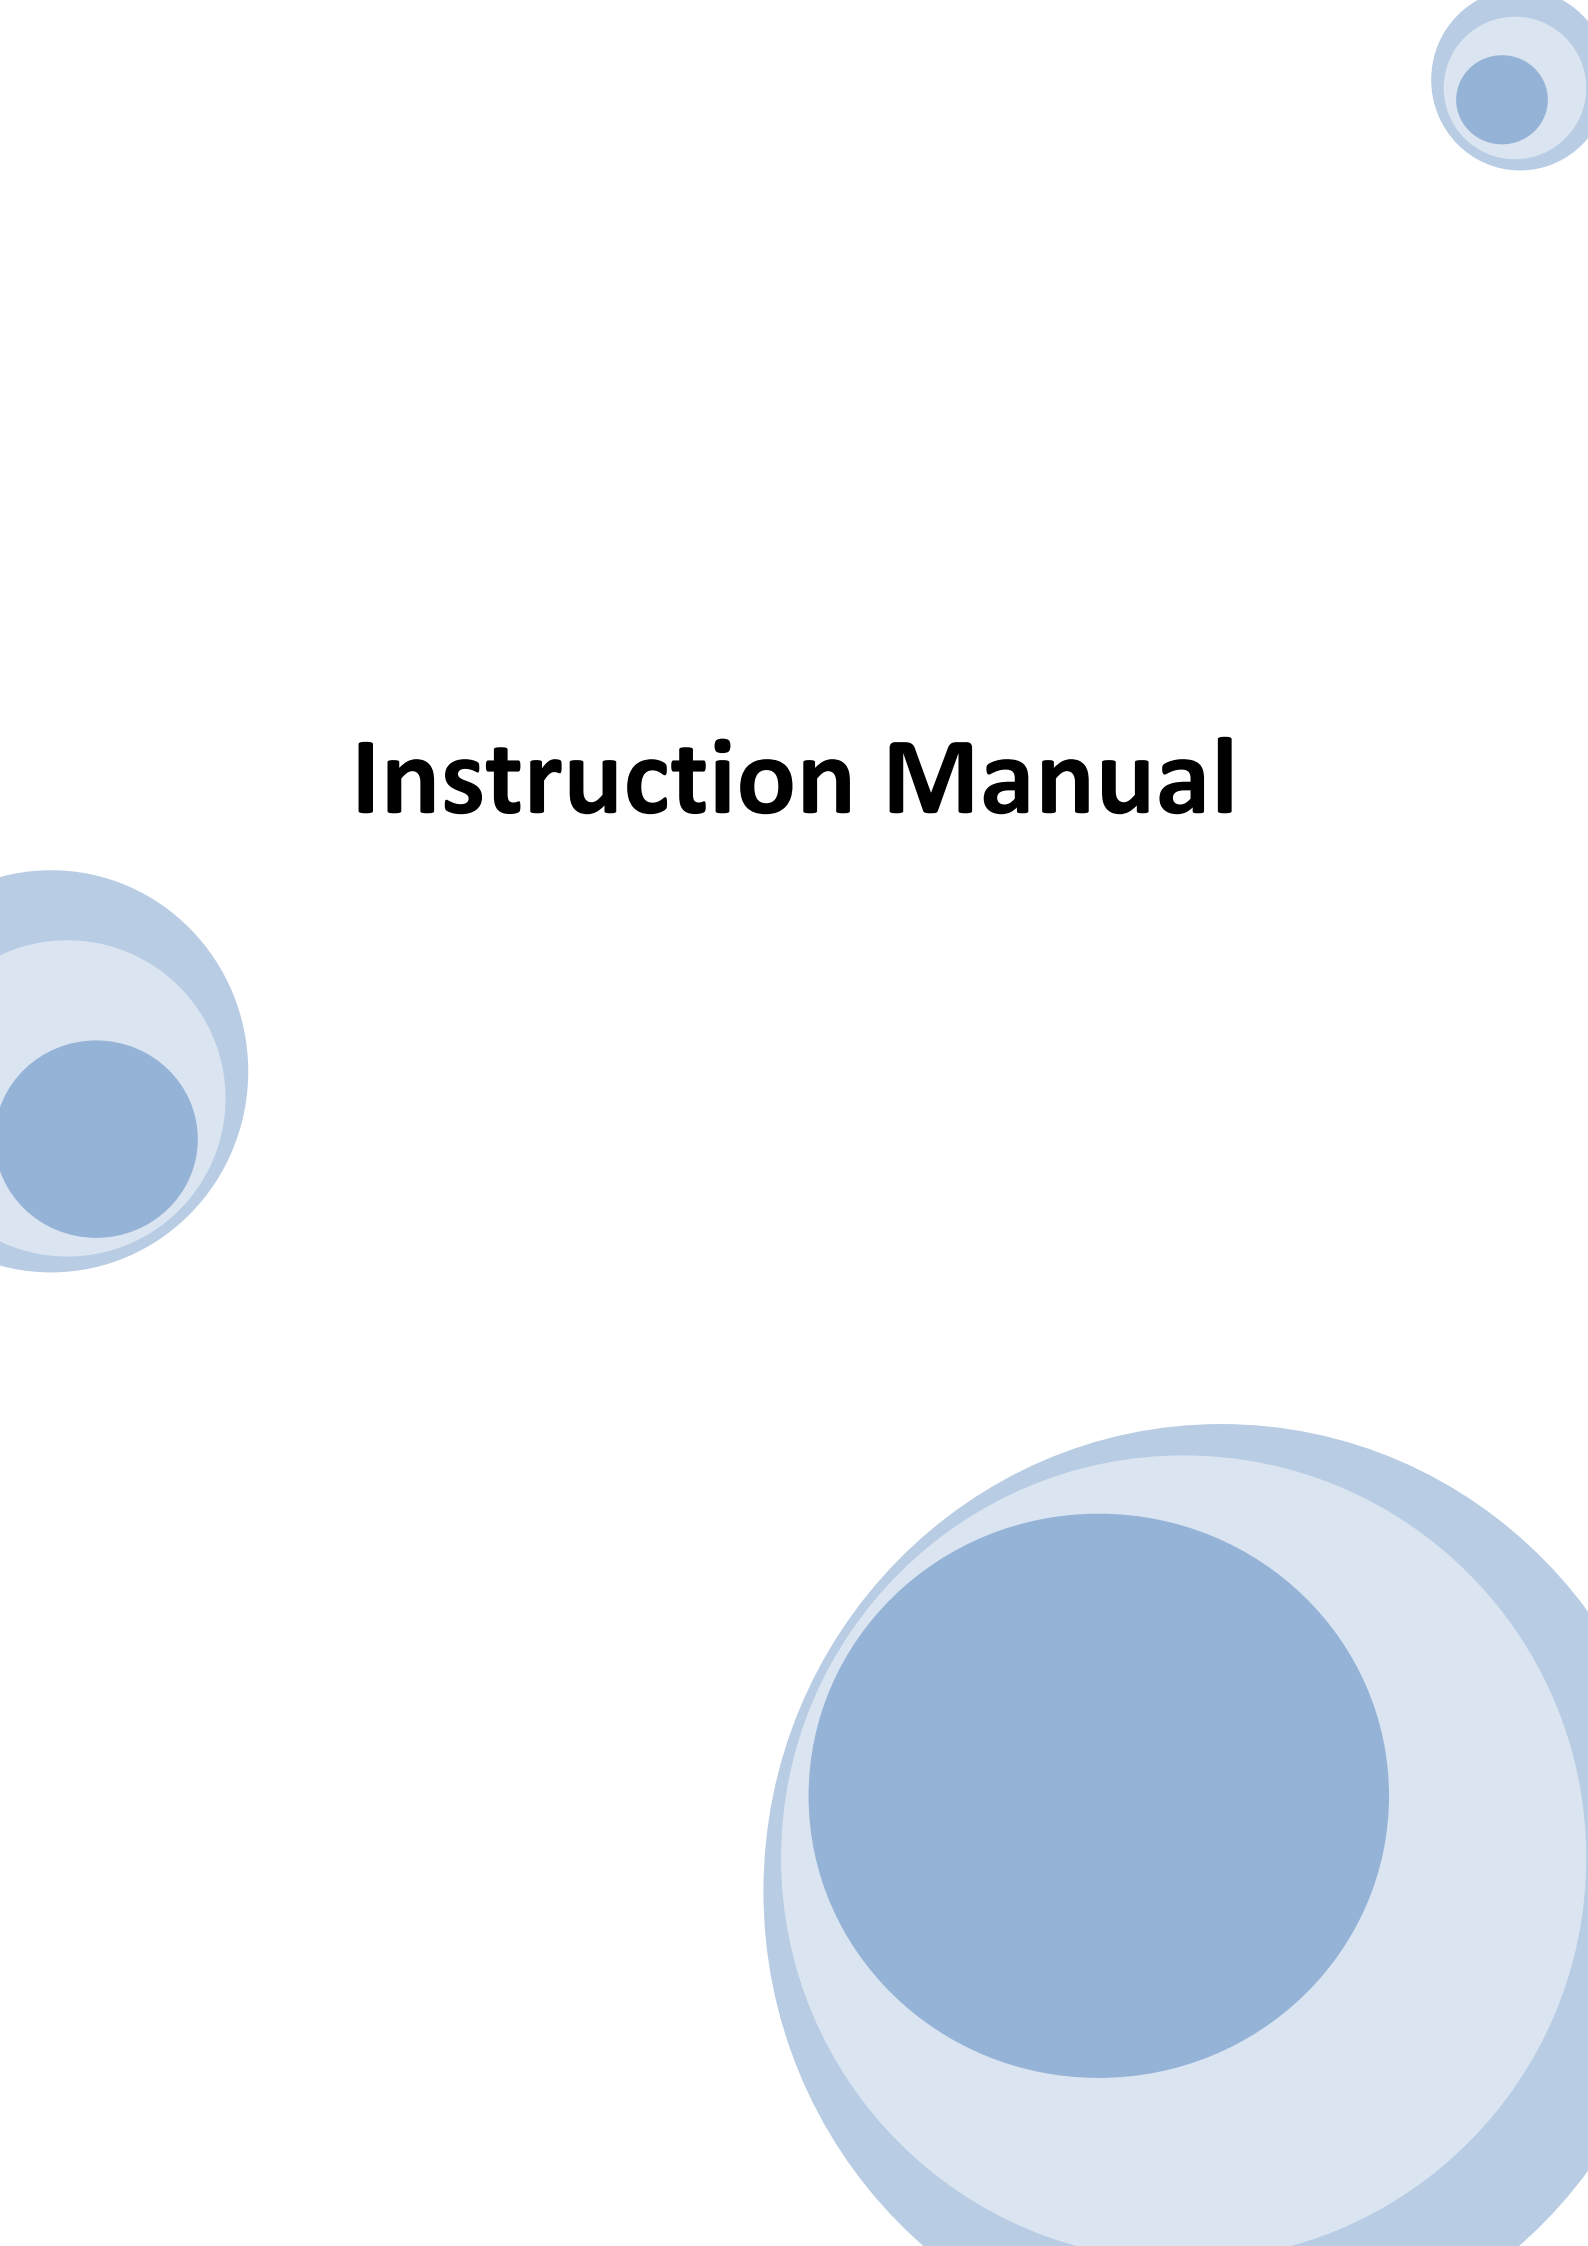 


The page features three decorative elements consisting of concentric circles in two shades of blue. One is in the top right corner, one is on the left side, and a larger one is in the bottom right corner.

Instruction Manual


Table of Content


Product and accessories.....	1
Start to use.....	1
Hardware installation.....	2
Mobile phone App installation and use	3
Camera installation.....	6
Wi-Fi network settings.....	11
P2P mode.....	13
FAQ.....	14

Product and accessories

1. Camera
2. Power adapter
3. Mounting bracket
4. Quick start guide
5. Disc

  Start to use

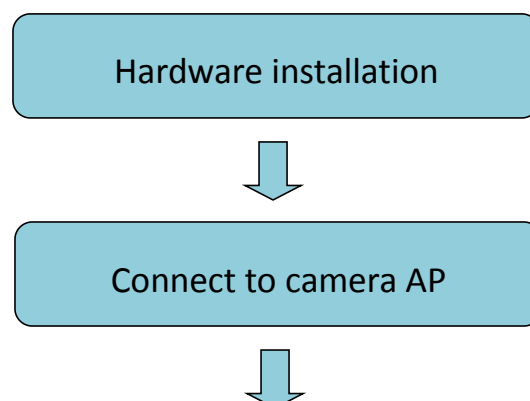

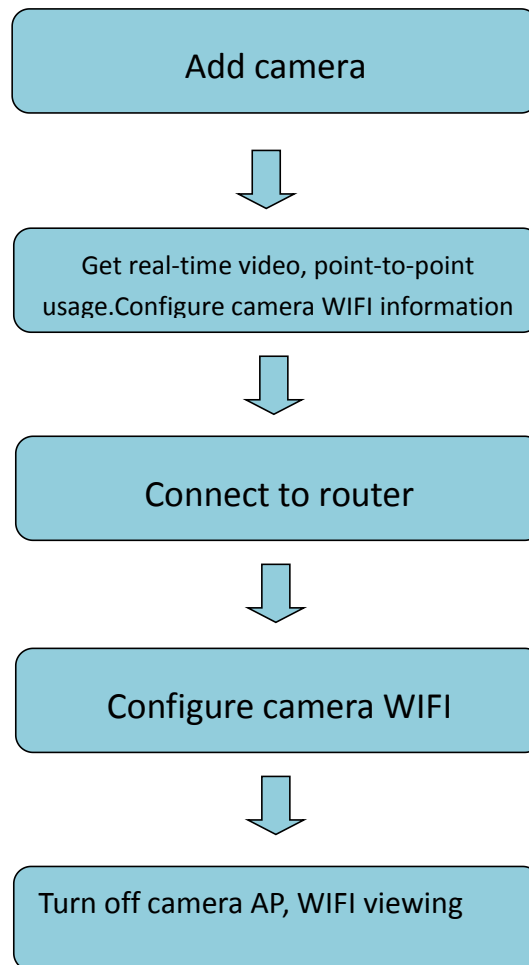


Mobile phone App installation

1. Download and install HDWifiCamPro from Apple Store for IOS, and search on GooglePlay for Android. For easy installation, please scan the below QR code to download and install HDWifiCamPro. If your device fails to connect to GooglePlay, please scan the below APK QR code for download and installation. **Note: It is recommended to use the QR code scanning software that comes with your browser or a third party to scan and download App. Direct download and installation of App files is not supported by WeChat scan.**




2. Click "+" to add a new camera. Click and add the connected camera, enter the page for adding the camera, fill in the UID or password to add the camera. **Note: when using the camera for the**

 first time, please refer to "set up the camera to connect to the WIFI network" section on the instruction to set up the camera to connect to your router before adding the camera.

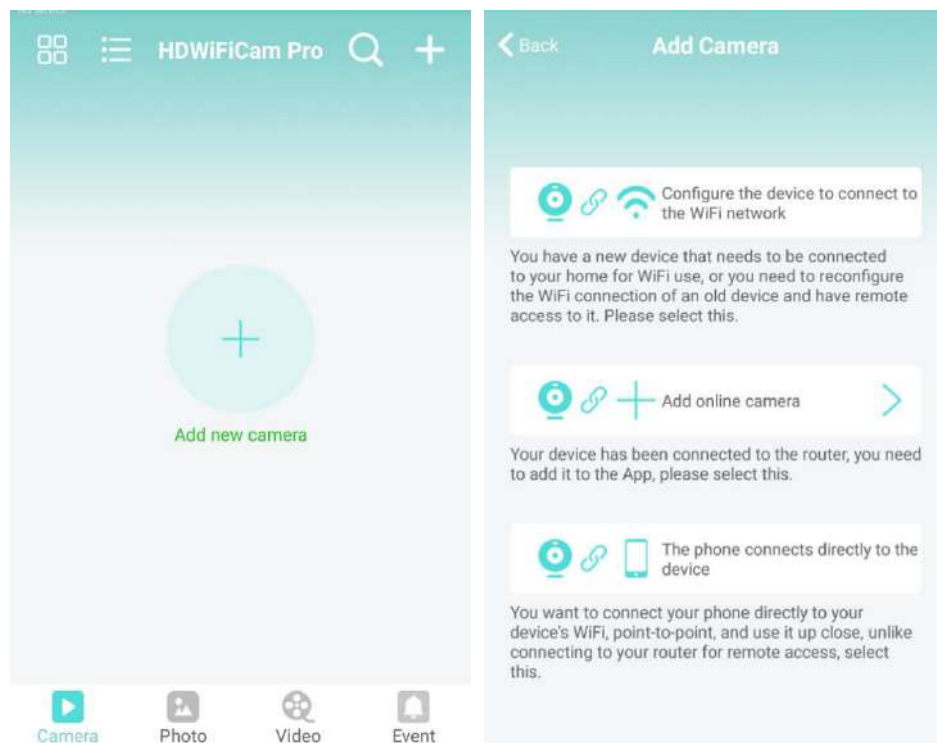

 3. There are two ways to quickly enter the camera UID: A. Scan the QR code on the camera; B. Search the camera through the local network.

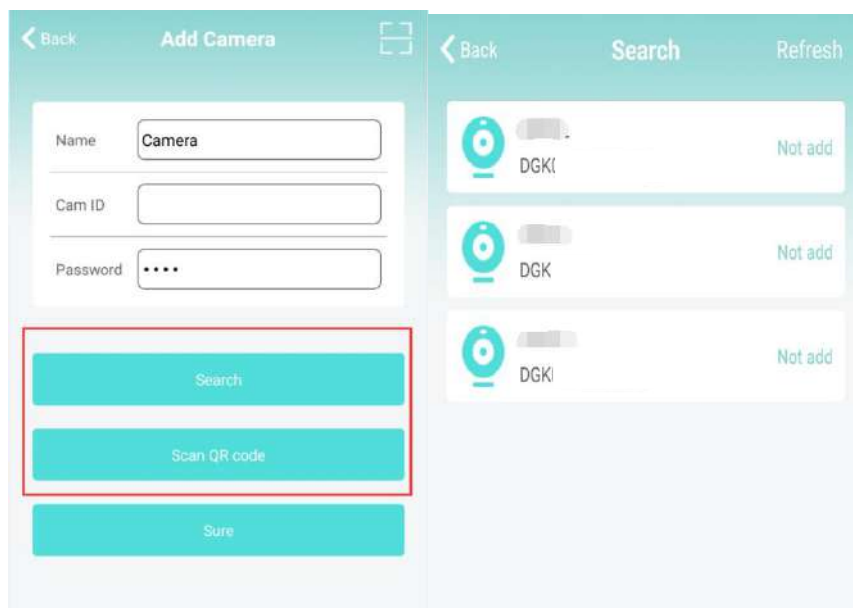


4. Fill in the camera name and the P2P password. The default P2P password is 6666. Confirm and


click Ok. Camera is added successfully. It is recommended to modify the P2P access password after setting up the camera.

The screenshot displays the HDWiFiCam Pro application interface, split into two panels. The left panel, titled 'Add Camera', features a teal header with a back arrow, the title, and a window icon. It contains three input fields: 'Name' with the value 'Camera', 'Cam ID' with the value 'DGKI', and 'Password' with four dots. Below these fields are three teal buttons labeled 'Search', 'Scan QR code', and 'Sure'. The right panel, titled 'HDWiFiCam Pro', has a teal header with icons for a grid, list, search, and add. It shows a camera card for 'Camera' with ID 'DGKI' and status 'Online' (in green). The card includes a camera preview image and a settings gear icon.

 5. After the camera is showed online, then click the camera you just added to watch the real-time video. You can control the device in the video interface.

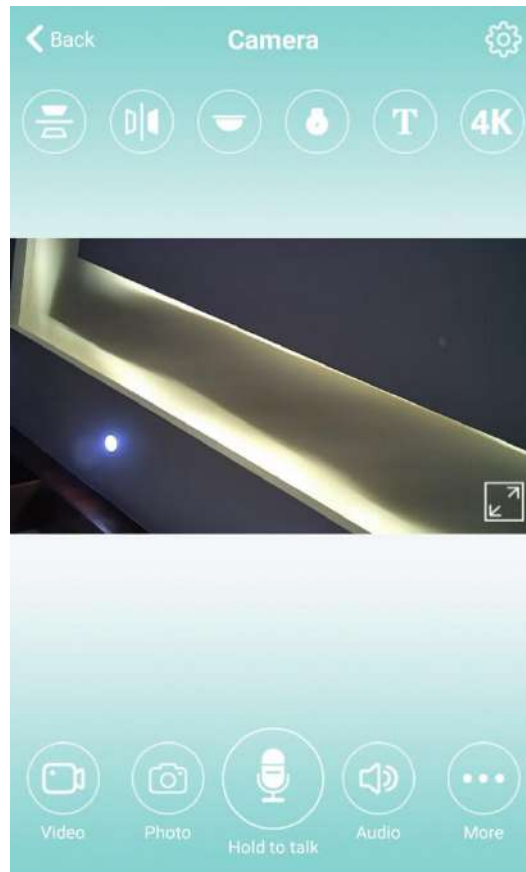

 6. Icons and buttons for video pages

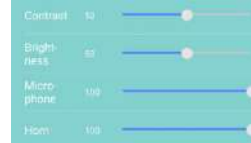Camera platform control	By PAN/TILT with your fingers on the video page, you can control the rotation of the camera platform, which depends on the sliding distance of your finger (need to purchase camera for support).
  Hold to talk Audio	Users can hear the camera sound and have two-way voice intercom (need to purchase camera for support).
  Video Photo	Take snapshots and record video files
 	Flip images vertically and horizontally
	Adjust brightness and contrast, tune intercom sound


 Playback	Watch videos in the SD card
--	-----------------------------

1. Other features of the page


 Camera	Watch the current real-time video
 Photo	View screenshots taken by the camera
 Video	View video files for your mobile device
 Event	View camera alarm event record

Camera setting

 
1. Click the gear button at the back to open the advanced configuration page of the camera.

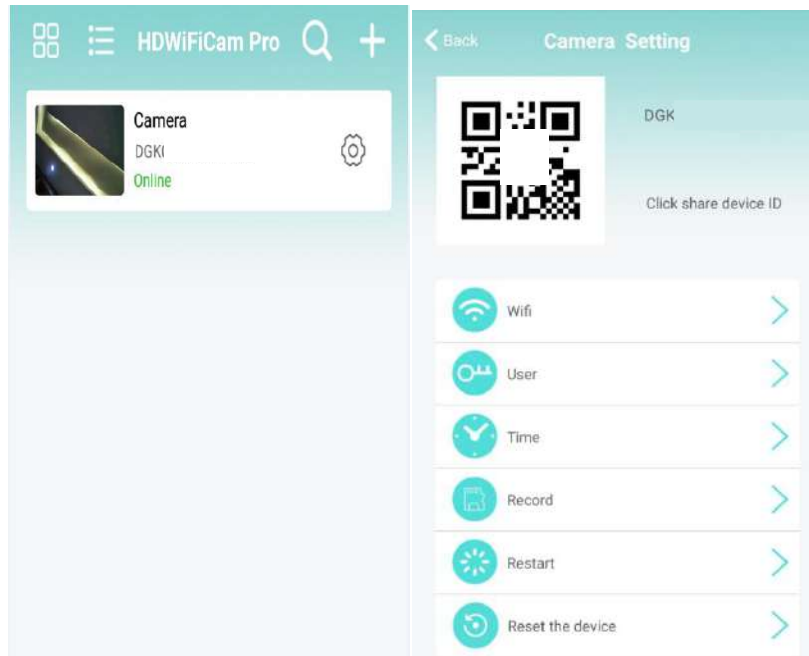

 2. Modify the WIFI connection. Select WIFI Settings and the camera will show the available Wi-Fi hotspots. Select your Wi-Fi network name (SSID), enter the Wi-Fi password and press the finish key to connect. **Note: After saving, if the camera is connected to WIFI, the camera will disconnect the current connection to try a new WIFI network, which will cause the camera in the App to be temporarily offline for about 1 minute.**

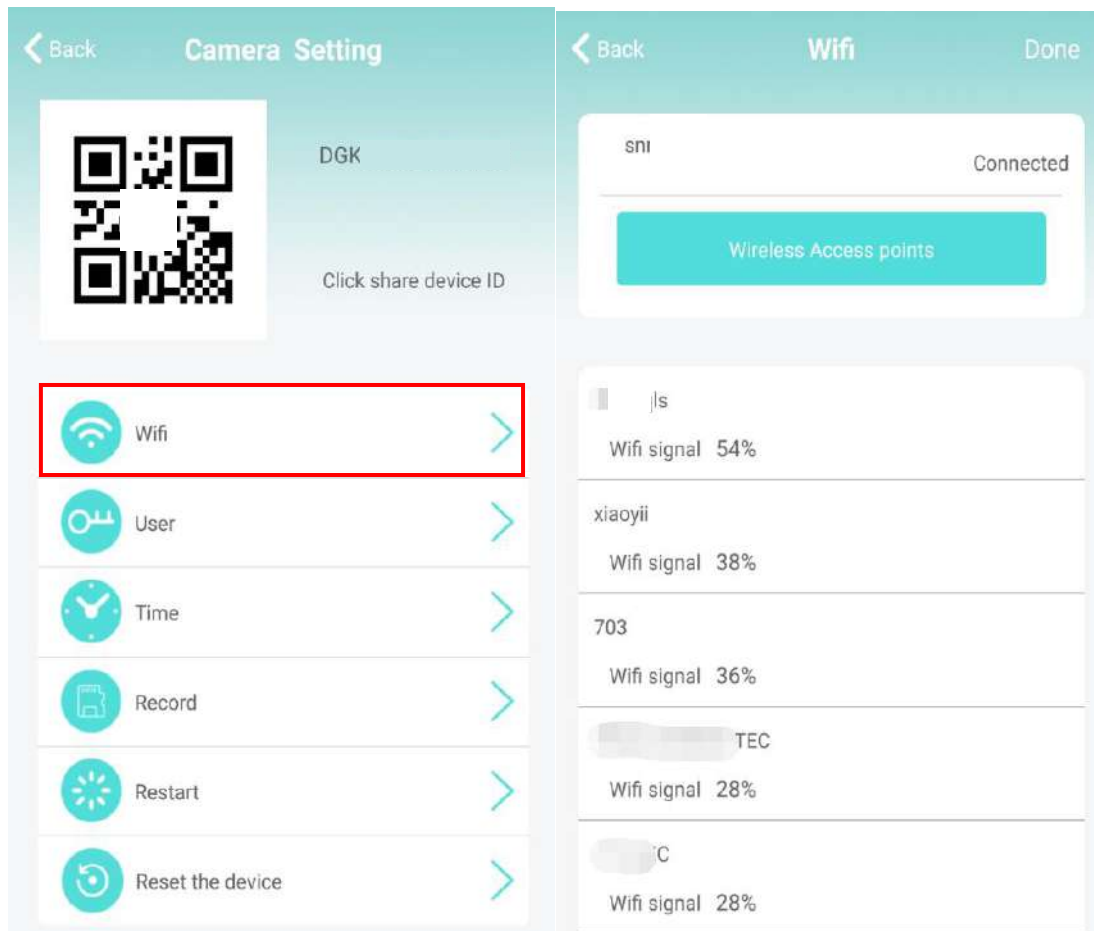

 
4. SD card video recording setting: Set the mode and the screen size of SD card video recording.

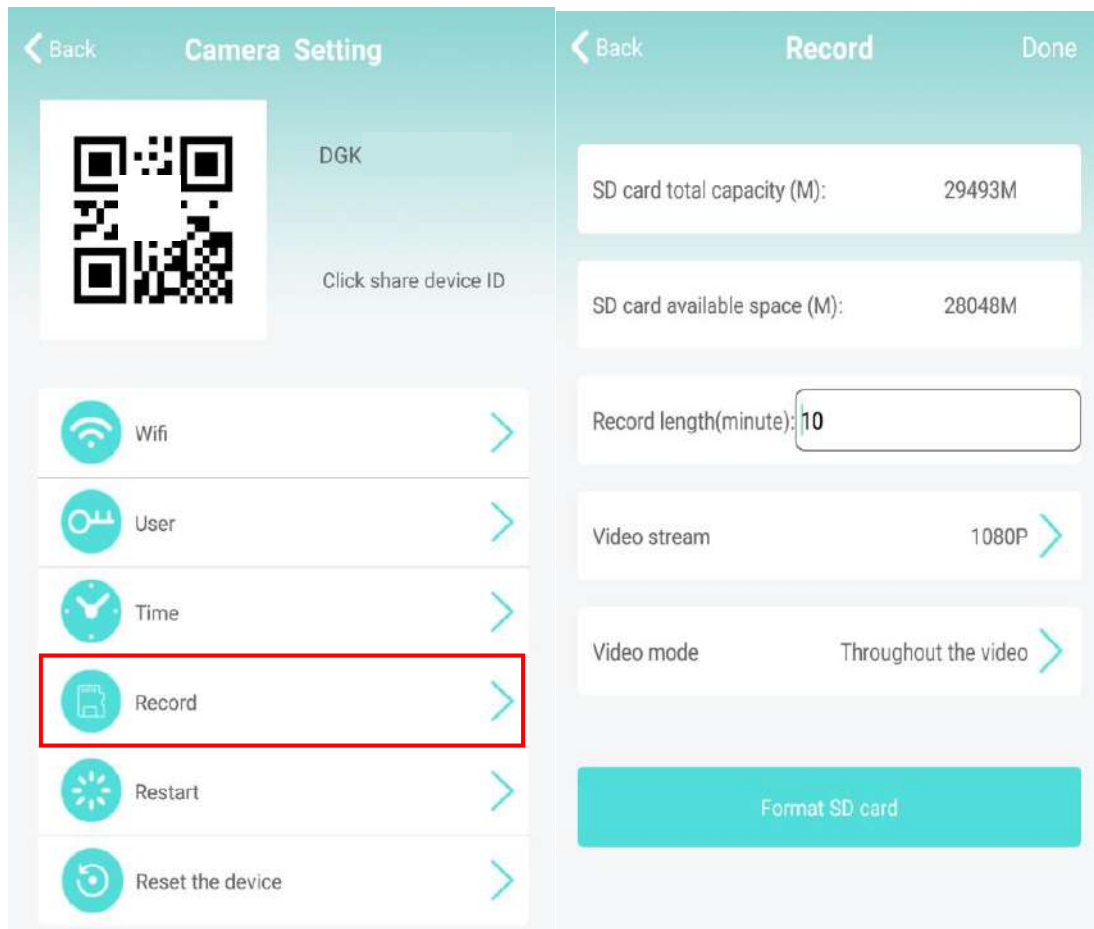


Connect the camera to the Wi-Fi wireless network

For a new camera or the camera you install to a new location, please reset the camera to default settings (press and hold the camera reset button for more than 5 seconds after the camera starts), and turn on AP mode after the camera restarts. The WIFI indicator light flashes slowly (once every 3 seconds). Then turn on the phone settings, connect the phone to the camera's AP hotspot (the WIFI network is named after the camera UID), and wait for the phone to switch to the camera's WIFI network before starting App.

 1. **Connect the phone to the camera's AP hotspot (the WIFI network is named after the camera UID), and wait for the phone to switch to the camera's WIFI network before starting App.**
2. Select to add camera "+" in App
3. Select to connect the camera to the WIFI network

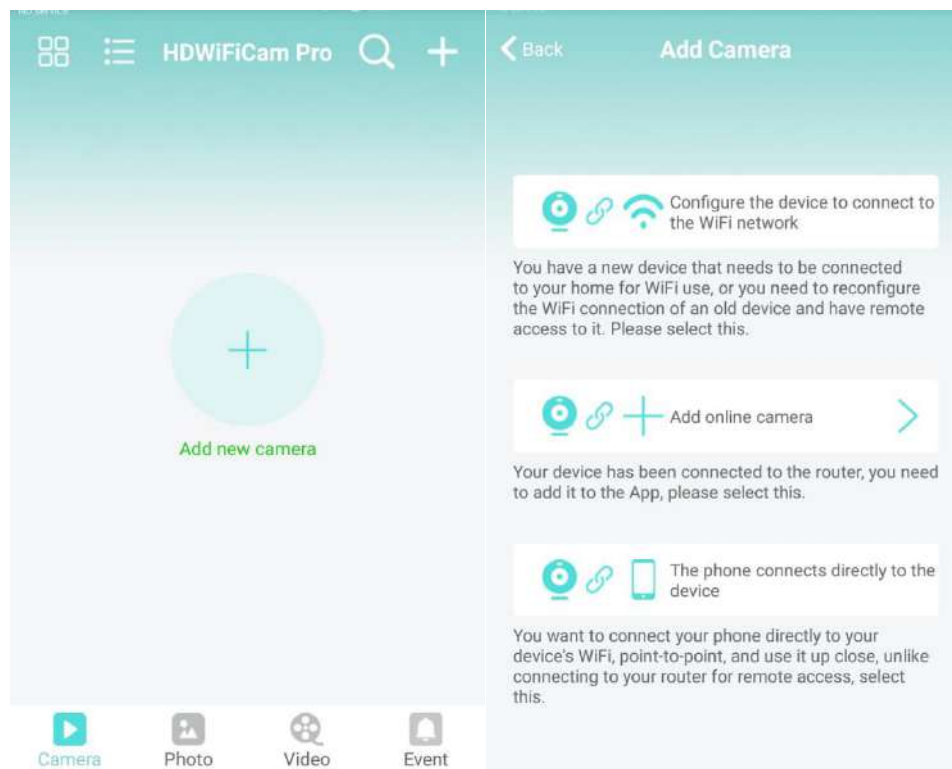

 4. Click the WIFI configuration, and then verify that the displayed WIFI network name is the same as the UID number of the device. Then return to APP, the device will be added automatically.

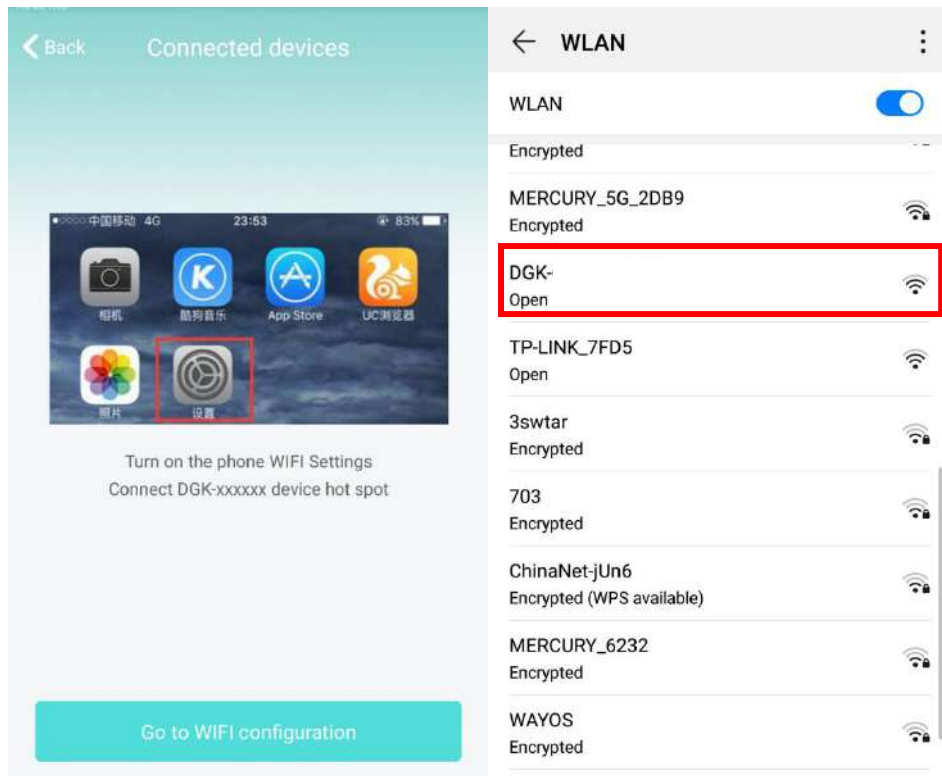

5. Then click the camera configuration page and click Wi-Fi Settings, select the router hotspot to be configured and enter the correct WIFI password, waiting for the camera to get online.

Note: if the App always fails, try to check the following:

 
- A. Camera indicator light does not flash slowly and AP is not turned on before you start configuring Wifi**
- B. If the phone fails to connect to camera AP, you need to configure the phone to connect to the AP hotspot of the camera.**
- C. Support ordinary routers. But public routers requiring login page authentication are not supported.**
- D. Make sure there are no errors in network name, network password and UID when configuring.**
- E. Wifi names and passwords in Chinese are not supported at this moment.**
- F. 5G Wifi signal is not supported.**
- G. Check whether the Wifi indicator light is always on, if yes, it means that the camera networking is successful, please add an online camera directly, App may not detect a successful camera configuration due to network shielding.**
- H. If WiFi is WEP encryption mode, change to WPA mode.**

P2P mode viewing


You can view videos directly and operate on the camera without a Wifi router.

Steps:

1. Reset the camera and wait for the camera to restart and turn on AP mode.
2. After the camera is started, you can find the same Wifi network as the camera UID on the Wifi setting page of the phone, without encryption.
3. Connect your phone to the Wifi network and wait for the icon of successful Wifi signal connection.
4. Same as router mode, add an online camera directly and you can turn it on for normal use. If you have already added a camera, then you can connect directly.

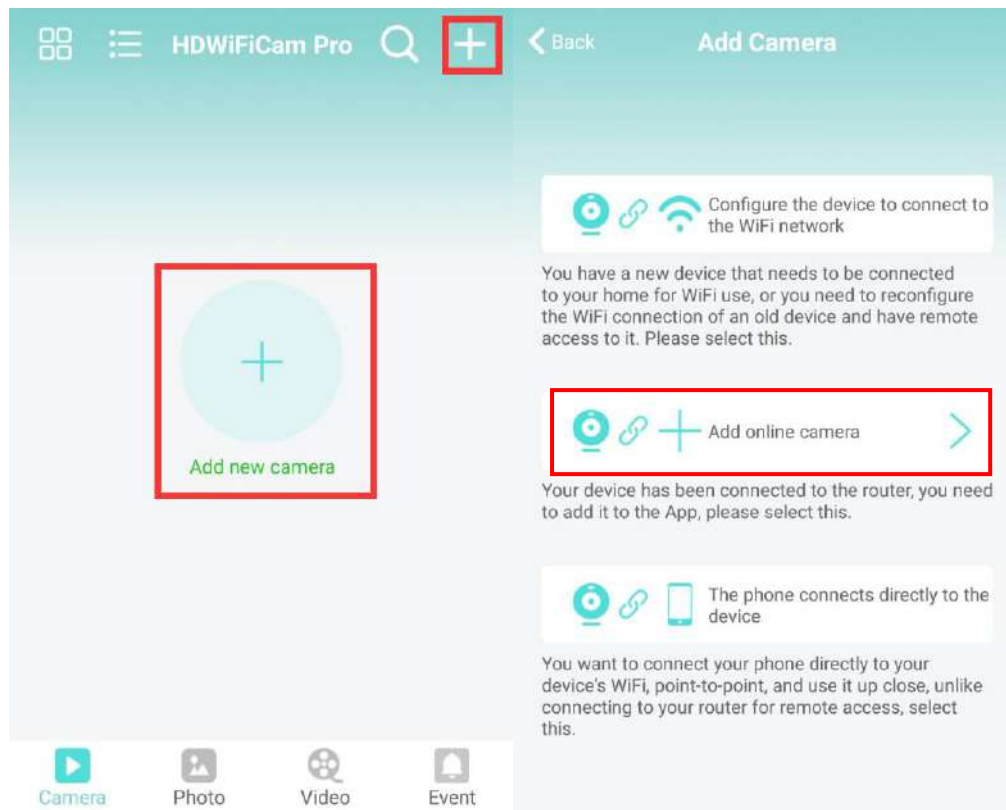

 5. After the connection is successful, open and view the videos.

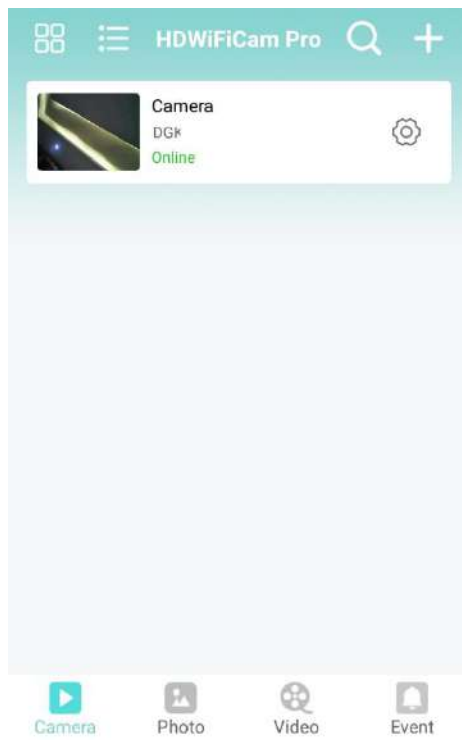

FAQ

1. Why the search tool is unable to detect the camera?

A: Please make sure if the network connection is good, turn off the firewall and security software, and make sure the camera is connected to the router.

2. Why does the camera always require a user name and password, or an incorrect user?

A: The default password for the camera is 6666. If you forget your user name or password, you can resume the camera to the default settings to get the default user name and password.

3. How can I resume my camera to default settings?

A: Please press the reset button on the camera for about 5 seconds until the camera restarts.

4. Why the image is blurred?

A: Remove the protective film of the lens. If it is still not clear, rotate the camera lens and focus it so that you can get a clear image after focusing.