



Fujifilm FinePix XP70 Battery Replacement

This guide will show how to replace the battery in a Fujifilm Finepix XP70

Written By: Olivia A



INTRODUCTION

Replacing the battery is an easy and simple fix if the battery needs charging or replacement. It's important to remove the battery before opening any other parts of the device to remove the potential danger of electric shock.


Step 1 — Battery



- Power off the camera.

⚠ Leaving the camera on while removing presents the risk of electrical shock or permanent data loss.

Step 2

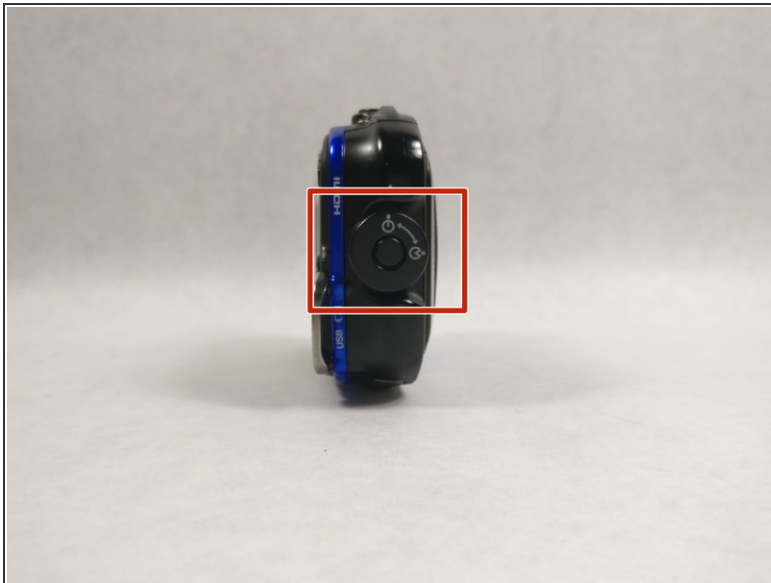

- Push down on the center button and turn the dial on the side counterclockwise to open the battery compartment.

Step 3



- Pull the orange tab towards the hinge to release the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 06:41:06 PM.