



Operating Guide

AB-QM 4.0 Flexo, DN 15-20

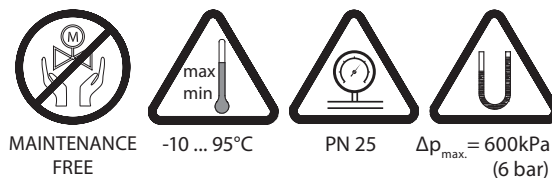


Installation

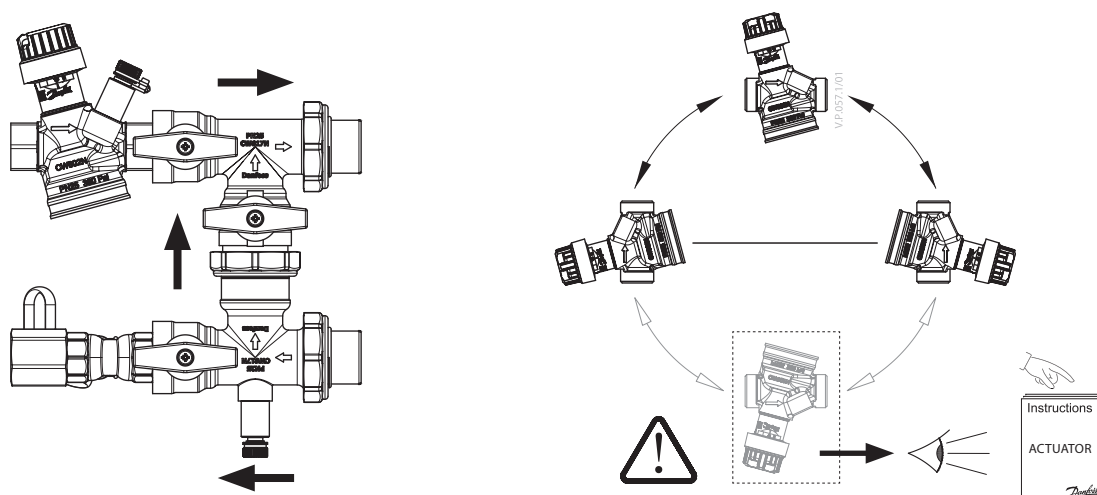



Installation

	27 mm
	29 mm
	30 mm
	32 mm

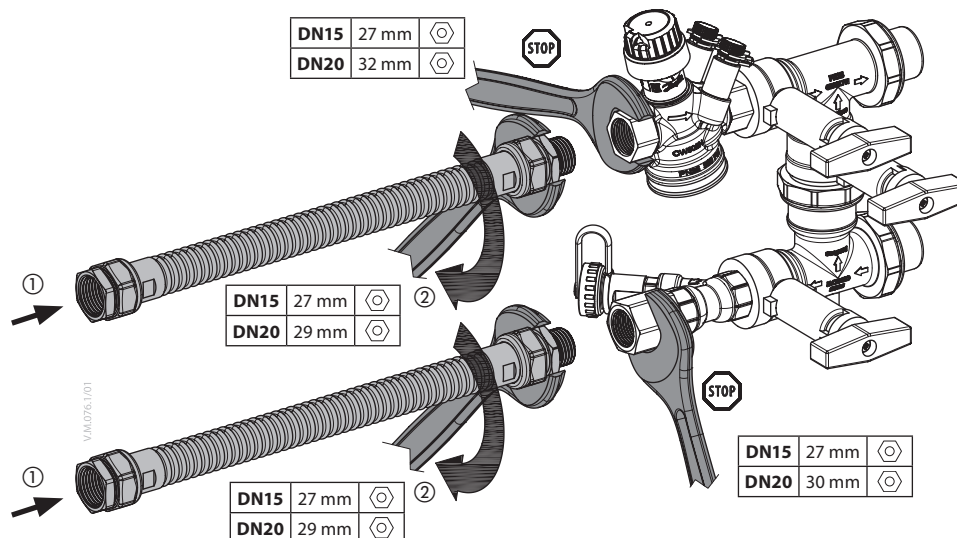


AB-QM 4.0 Flexo, DN 15-20

Insulation

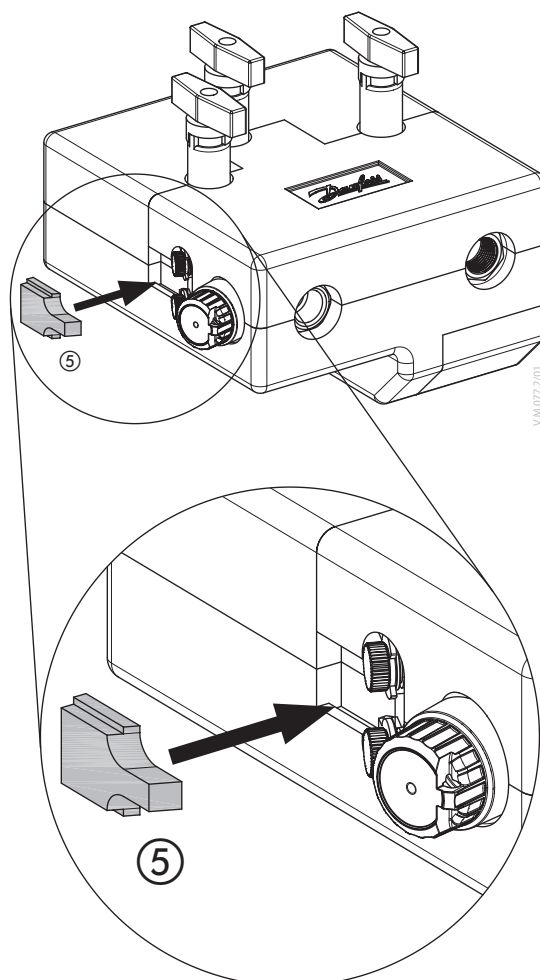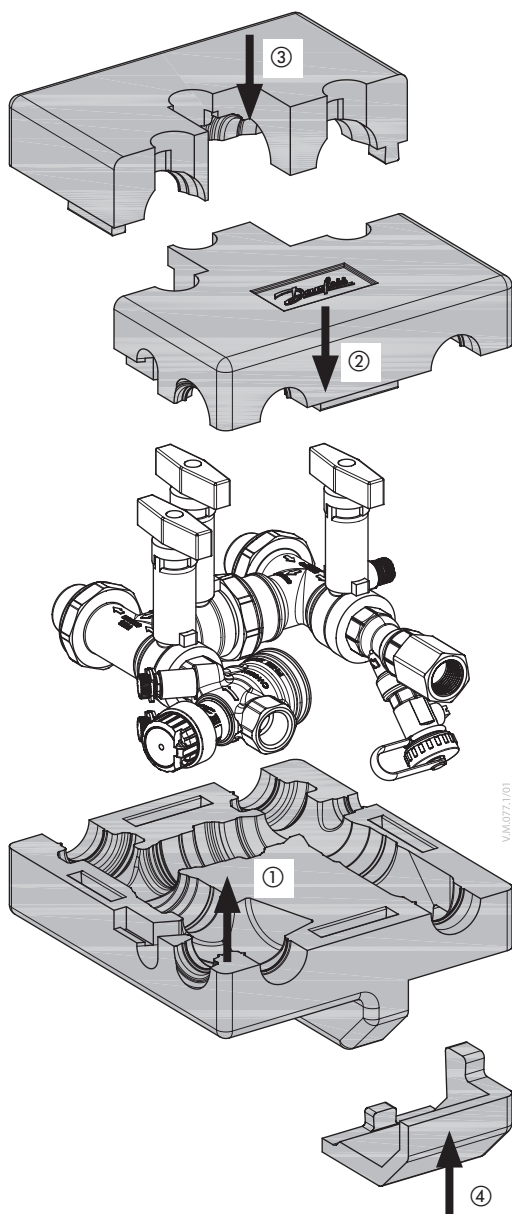


AB-QM 4.0 Flexo, DN 15-20

Setting

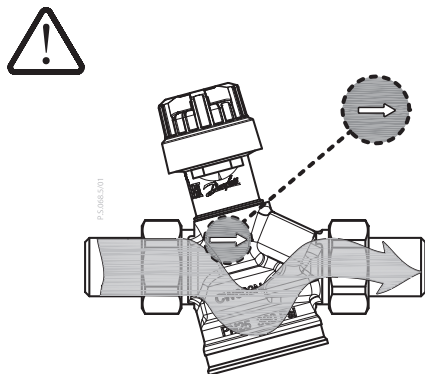


Shut-off

$\Delta p_{max} = 10 \text{ bar}$

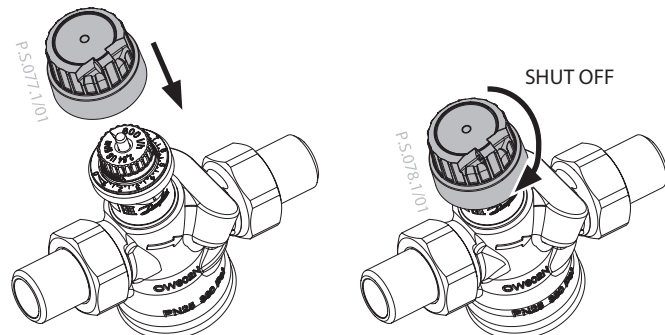


Setting




 = 10 (100%)

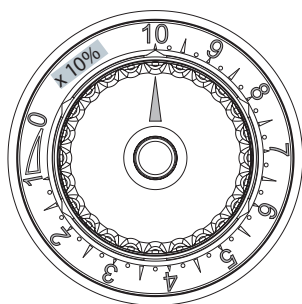

Locking

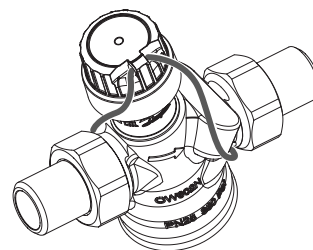


Filter cleaning

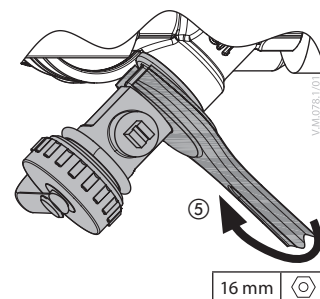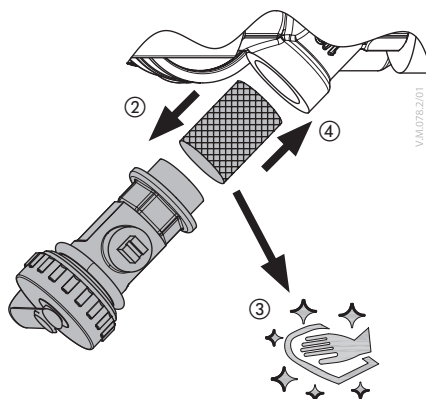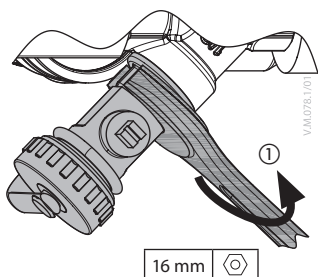


AB-QM 4.0 Flexo, DN 15-20


Operation

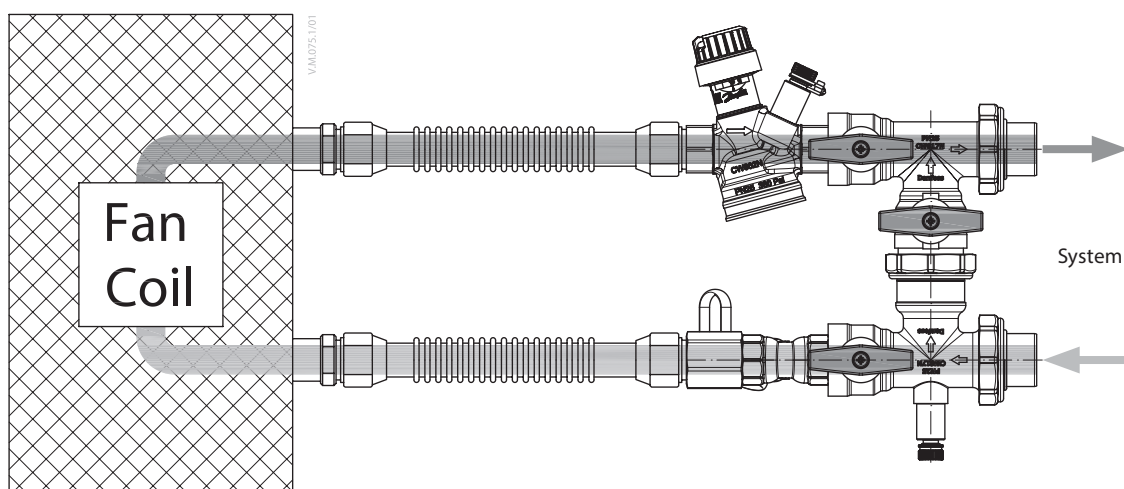

Shut-off/Maintenance

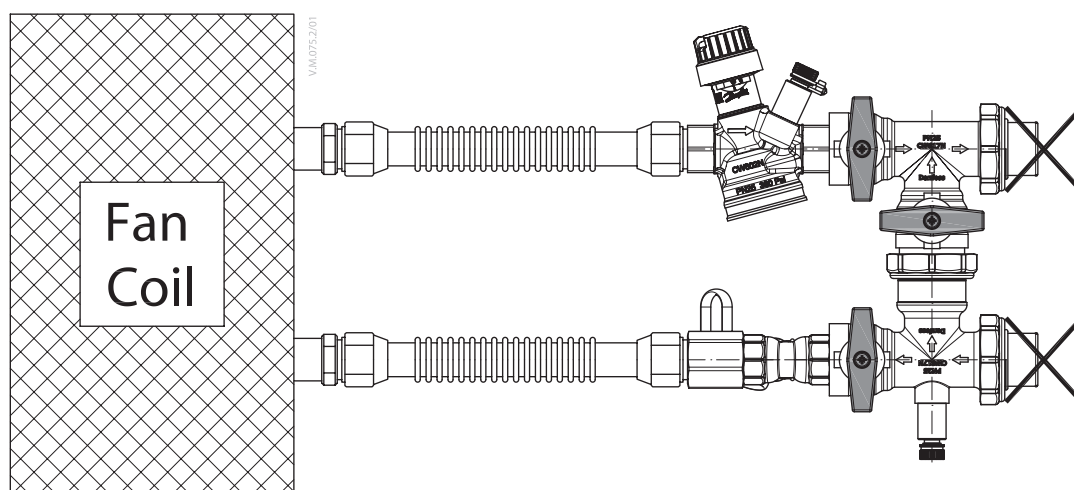


Flushing of main pipe

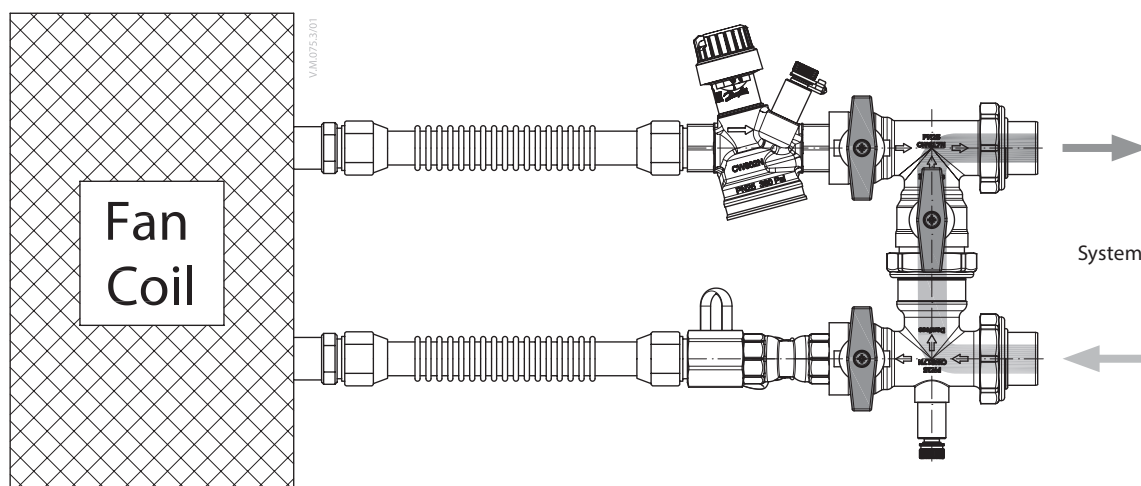


AB-QM 4.0 Flexo, DN 15-20

Backward flushing

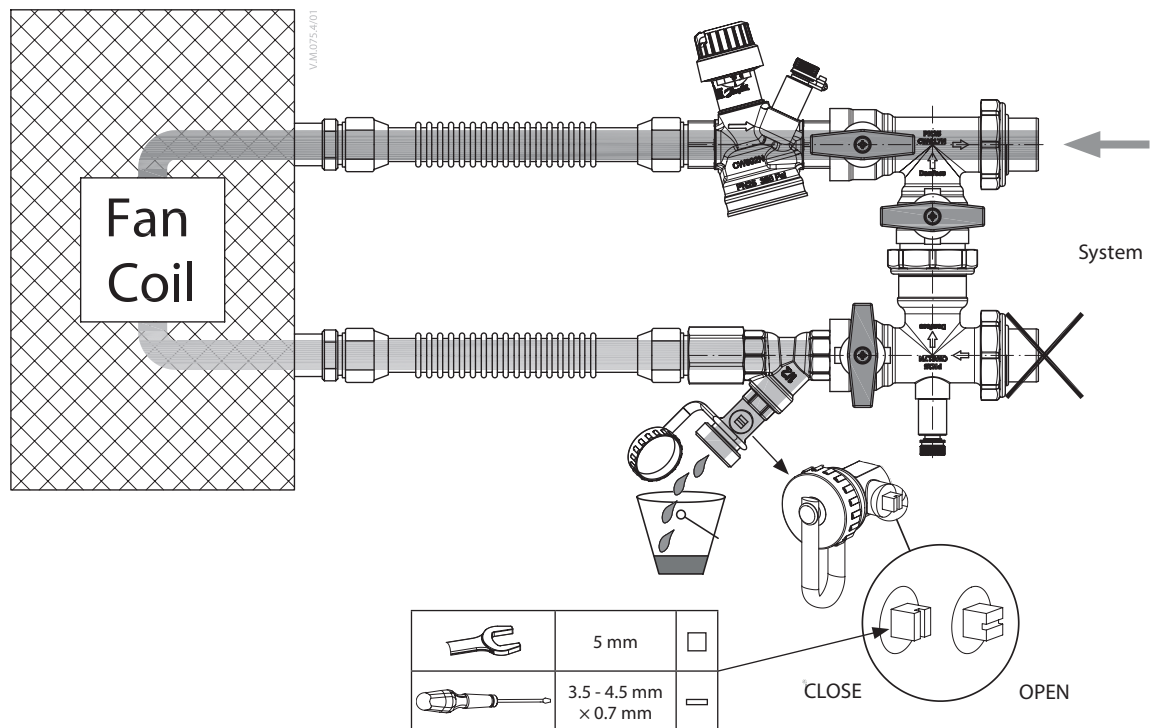

Forward flushing

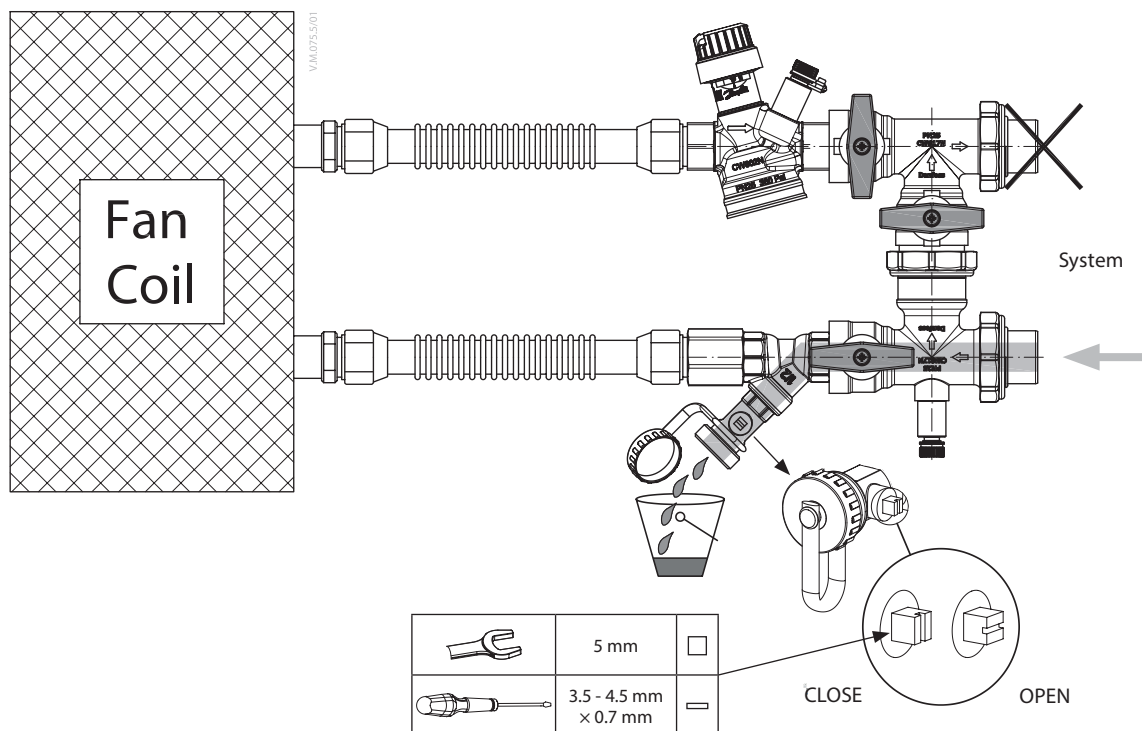


AB-QM 4.0 Flexo, DN 15-20

Sizing


Setting	DN15 LF			DN 15			DN 15 HF			DN 20			DN 20 HF		
	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM	L/h	L/s	GPM
10%	20	0.006	0.09	65	0.018	0.29	120	0.033	0.53	110	0.03	0.48	190	0.053	0.84
15%	30	0.008	0.13	98	0.027	0.43	180	0.050	0.79	165	0.05	0.73	285	0.079	1.25
20%	40	0.011	0.18	130	0.036	0.57	240	0.067	1.06	220	0.06	0.97	380	0.106	1.67
25%	50	0.014	0.22	163	0.045	0.72	300	0.083	1.32	275	0.08	1.21	475	0.132	2.09
30%	60	0.017	0.26	195	0.054	0.86	360	0.100	1.59	330	0.09	1.45	570	0.158	2.51
35%	70	0.019	0.31	228	0.063	1.00	420	0.117	1.85	385	0.11	1.70	665	0.185	2.93
40%	80	0.022	0.35	260	0.072	1.14	480	0.133	2.11	440	0.12	1.94	760	0.211	3.35
45%	90	0.025	0.40	293	0.081	1.29	540	0.150	2.38	495	0.14	2.18	855	0.238	3.76
50%	100	0.028	0.44	325	0.090	1.43	600	0.167	2.64	550	0.15	2.42	950	0.264	4.18
55%	110	0.031	0.48	358	0.099	1.57	660	0.183	2.91	605	0.17	2.66	1045	0.290	4.60
60%	120	0.033	0.53	390	0.108	1.72	720	0.200	3.17	660	0.18	2.91	1140	0.317	5.02
65%	130	0.036	0.57	423	0.117	1.86	780	0.217	3.43	715	0.20	3.15	1235	0.343	5.44
70%	140	0.039	0.62	455	0.126	2.00	840	0.233	3.70	770	0.21	3.39	1330	0.370	5.86
75%	150	0.042	0.66	488	0.135	2.15	900	0.250	3.96	825	0.23	3.63	1425	0.396	6.27
80%	160	0.044	0.70	520	0.144	2.29	960	0.267	4.23	880	0.24	3.87	1520	0.422	6.69
85%	170	0.047	0.75	553	0.154	2.43	1020	0.283	4.49	935	0.26	4.12	1615	0.449	7.11
90%	180	0.050	0.79	585	0.163	2.58	1080	0.300	4.76	990	0.28	4.36	1710	0.475	7.53
95%	190	0.053	0.84	618	0.172	2.72	1140	0.317	5.02	1045	0.29	4.60	1805	0.502	7.95
100%	200	0.056	0.88	650	0.181	2.86	1200	0.333	5.28	1100	0.31	4.84	1900	0.528	8.37

Measurements

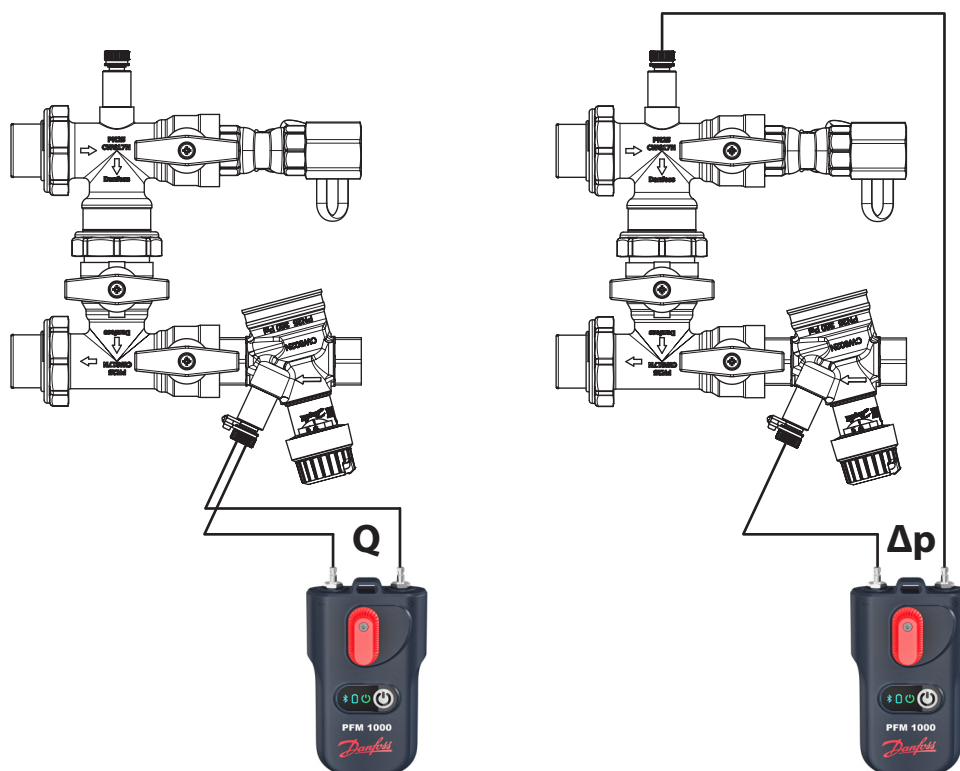


AB-QM 4.0 Flexo, DN 15-20


Dimensions

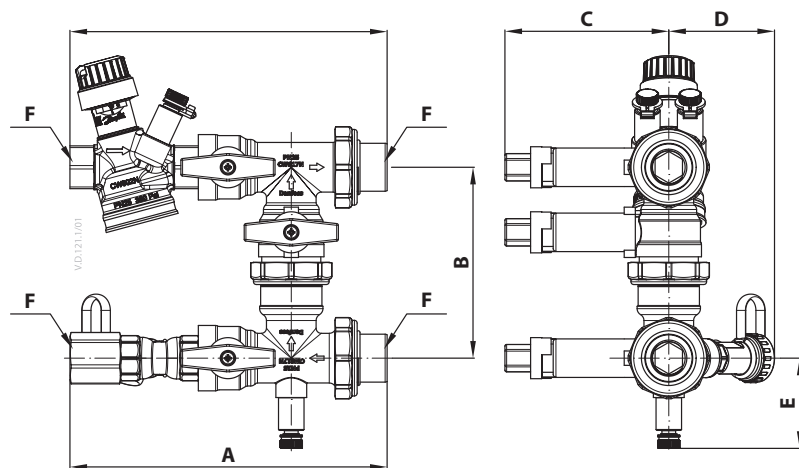

	DN15LF	DN15	DN15HF	DN20	DN20HF
A	185	185	185	200	200
B	111.5	111.5	111.5	111.5	111.5
C	96	96	96	96	96
D	62	62	62	65	65
E	53	53	53	53	53
F	R ½	R ½	R ½	R ¾	R ¾

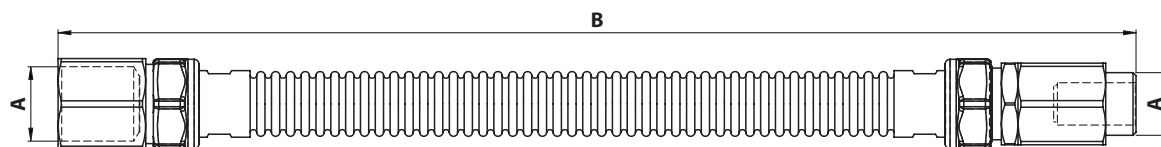

	A	B
DN15	R ½	307.5
DN20	R ¾	319.5

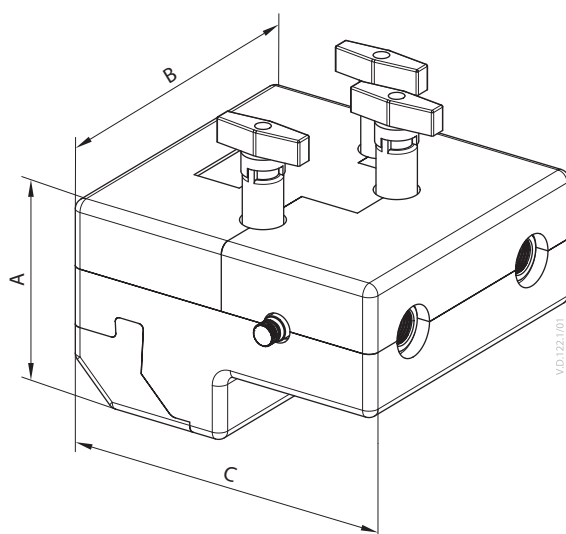

	A	B	C
DN15	120	190	200
DN20	120	190	215



AB-QM 4.0 Flexo, DN 15-20

ІМПОРТЕР:

ТОВ з іі "Данфосс ТОВ" 04080, Київ 80, п/с 168, Україна

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.