

RX-V567/HTR-5063 How to program remote control codes For TV Control Key Operations

TRANSMIT LIGHT



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

1 Use the remote codes listed in this document to find your TV manufacturer code.

2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



3 Press the TV Power button on the bottom of the remote.



4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

List of remote control codes

TV			Axon	0156	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elin	0277, 0320, 0323, 0342, 0349, 0350
A.R. Systems	0320		Baird	0282			Elite	0320, 0340, 0350
Acme	0342		Bang & Olufsen	0180, 0339	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elman	0341
Acura	0323, 0343		Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Contec/Cony	0012, 0058	Elta	0277, 0323, 0343
ADC	0337		Bastide	0282, 0342	Continental Edison		Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347		Baur	0320, 0349			Emprex	0154
Advent	0158		Bazin	0282	Cosmel	0323, 0343	Envision	0008, 0026, 0050
Adventura	0057		Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Craig	0058, 0179	Epson	0155, 0206, 0359
Adyson	0277, 0282, 0342			0008	Crosley	0010, 0037, 0171, 0339	Erres	0320, 0349, 0350
Agashi	0277, 0282		Belcor	0019, 0054	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	ESA	0051
Agazi	0337		Bell & Howell	0097, 0242, 0361			ESC	0282
Aiko	0277, 0282, 0320, 0323, 0342, 0343		Benq	0320, 0349, 0350	CS Electronics	0277, 0340, 0342	Etron	0343
Aim	0320		Best	0161	CTC Clatronic	0341	Eurofeel	0282
Aiwa	0078, 0379		Bestar	0161, 0320, 0350	CTX	0205	Euro-Feel	0337
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350		Binatone	0282, 0342	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Euroline	0349
			Blue Sky	0320, 0340			Euroman	0161, 0277, 0282
			Blue Star	0348	CXC	0058, 0179	Euromann	0320, 0337, 0342, 0350
			Boots	0282, 0342	Cybertron	0340		
			BPL	0320, 0348	Cytron	0152	Europhon	0277, 0282, 0320, 0341, 0342, 0350
			Bradford	0058, 0179	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Expert	0321
Akiba	0320, 0340		Brandt	0322, 0345			Exquisit	0320
Akura	0320, 0323, 0337, 0340		Brilliant	0182	Dainichi	0277, 0340	Fenner	0323, 0343
Alaron	0277		Brinkmann	0320	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Ferguson	0322, 0345, 0349
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382		Brionvega	0320, 0339, 0349, 0350	Dantax	0161, 0349	Fidelity	0277, 0320, 0342, 0346
					Dawa	0320		
Albatron	0140		Britannia	0277, 0282, 0342	Daytron	0007, 0008, 0026, 0323, 0343	FIRST LINE	0342, 0343, 0350
Alcyon	0171		Brockwood	0008	De Graaf	0346	Firstline	0277, 0282, 0320, 0323
Alleron	0059		Broksonic	0109, 0179	Decca	0282, 0320, 0342, 0349, 0350	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Allorgan	0282		Bruns	0339	Dell	0145, 0245	Flint	0320, 0350
Allstar	0320, 0350		BTC	0340	Denver	0358, 0362	Formenti	0171, 0277, 0336, 0339, 0342, 0349
America Action	0179		Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Desmet	0320, 0349, 0350	Formenti/Phoenix	0277
AMOI	0276				Diamant	0320	Fortress	0336, 0339
Amplivision	0161, 0282, 0321, 0342				Diamond	0277	Fraba	0161, 0320
					DiamondVision	0135, 0143	Friac	0161
Amstrad	0320, 0323, 0337, 0340, 0343				Dimensia	0049	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Amtron	0058				Disney	0219	Fujitsu	0059, 0069, 0074, 0075, 0282
Anam	0179, 0343				Dixi	0282, 0320, 0323, 0343, 0349, 0350	Fujitsu General	0282
Anam National	0052, 0058				Dream Vision	0461, 0498	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Ange	0323, 0343				DTS	0323, 0343	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
Anitech	0171, 0320, 0323, 0337, 0343				Dual	0282, 0320, 0342		
Ansonic	0161, 0168, 0320, 0323, 0341, 0343				Dual-Tec	0342, 0343		
AOC	0008, 0026, 0050, 0053				Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342		
Apex	0039, 0111, 0217				Durabrand	0031, 0051, 0179, 0215		
Arcam	0277, 0282				Dux	0349		
Arcam Delta	0342				Dwin	0178		
Aristona	0320, 0349, 0350				Dynatron	0320, 0349, 0350		
Arthur Martin	0321				Dynex	0228, 0231		
ASA	0339, 0347				Elbe	0161, 0168, 0282, 0320		
Asberg	0171, 0320, 0350				Elcit	0339		
Astra	0343				Electa	0348		
Asuka	0277, 0282, 0337, 0340, 0342				ELECTRO TECH	0343		
Atlantic	0277, 0320, 0342, 0349, 0350				Electroband	0055, 0107		
Atori	0323, 0343				Electrograph	0176		
Auchan	0321				Electrohome	0008, 0026, 0052, 0055		
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350				Element	0230		
AudioTon	0161, 0282, 0342							
Audiovox	0058, 0179, 0194							
Ausind	0171							
Autovox	0171, 0282, 0337, 0339, 0342							
Aventura	0051							
Awa	0277, 0282							

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
		Insignia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxman	0008, 0026		
		Interactive	0161	Luxor	0282, 0342, 0346		
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Interbuy	0323, 0343	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	NEI	0320, 0349, 0350
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350			Net-TV	0176
		International	0277	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Newfunk	0320, 0323
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New Tech	0343, 0350
Gorenje	0161, 0351			MAG	0096	New World	0340
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnadyne	0339, 0341, 0349	NewTech	0282, 0320, 0323
GPX	0129			Magnafon	0171, 0277, 0341, 0342	Nicamagic	0277, 0342
Gradiente	0240					Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Graetz	0347	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
		ITS	0277, 0320, 0340, 0348, 0350				
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347			Nokia	0347
		ITV	0320, 0343, 0349	Magnum	0337, 0343	Norcent	0201
Gronic	0282	Janeil	0057	Majestic	0054	Nordic	0282
Grundig	0160, 0161, 0171, 0310, 0320	JBL	0010	Mandor	0337	Nordmende	0339, 0345, 0347, 0350
		JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordvision	0349
Grunpy	0058, 0059, 0179					Novatronic	0320
Haier	0157, 0233	JCB	0055, 0107	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Oceanic	0321, 0347
Halifax	0277, 0282, 0337, 0342	Jensen	0008, 0026			Okano	0161, 0320, 0351
		JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Marelli	0339	Olevia	0102, 0199, 0200, 0207, 0222
Hallmark	0008, 0026, 0031			Mark	0277, 0282, 0320, 0323, 0349, 0350	ONCEAS	0342
Hampton	0277, 0282, 0342					Onwa	0058, 0179
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Masuda	0282	Opera	0320
				Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	Oppo	0130
Hantarex	0320, 0323, 0343					Optimus	0017, 0019
Hantor	0320					Optoma	0144
Harman/Kardon	0010	Kamosonic	0342	Matsushita	0017	Optonica	0178
Harvard	0058, 0179	Kamp	0277, 0342	Maxent	0147, 0176	Orbit	0320, 0350
Harwood	0320, 0323	Kapsch	0347	Mediator	0320, 0349, 0350	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Havermy	0178	Karcher	0161, 0320, 0342, 0343, 0349	Medion	0320, 0337, 0343		
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348			Megapower	0140	Online	0320
		Kawasho	0008, 0026, 0055, 0277	Megatron	0026, 0031	Osaki	0282, 0320, 0337, 0340, 0342
Hema	0282, 0323	KEC	0179	MElectronic	0277, 0282, 0320, 0323	Oso	0340
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	Melvox	0321	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Higashi	0277			Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343		
HiLine	0320	Kenwood	0008, 0026, 0050			Pael	0277, 0342
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282	Memphis	0323, 0343	Palladium	0161, 0282, 0320, 0342, 0351
		Kingsley	0277, 0342	Mercury	0320, 0323		
		KLH	0039	Metz	0339	Palsonic	0282
Hisawa	0321, 0340, 0348	Kloss Novabeam	0057, 0058	MGA	0008, 0026, 0031, 0050, 0053	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hisense	0247	Kneissel	0161, 0168, 0320				
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0320, 0350	Micromaxx	0337, 0343	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Konka	0340	Microstar	0337, 0343		
		Korpel	0320, 0349, 0350	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062		
		Korting	0161, 0339				
		Kosmos	0320	Minerva	0171		
		Koyoda	0343	Minoka	0320, 0350		
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153		
				Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Panavision	0320
Hornyphon	0320, 0350	Kyoto	0277, 0282			Pathe Cinema	0161, 0168, 0277, 0321, 0342
Hoshai	0340	Lasat	0161				
Huanayu	0277, 0342	Lenco	0323, 0343	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Pausa	0323, 0343
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343			Penney	0021, 0023, 0031, 0050, 0111
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350	Monivision	0140	Perdio	0277, 0320
				Montgomery Ward	0054	Perfekt	0320
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478			Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
						Philharmonic	0282, 0342
Hyundai	0141					Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226,
Iberia	0320	LG/GoldStar	0164				
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Liesenk	0349	Motion	0171		
		Liesenkotter	0320	Motorola	0052, 0178		
ICeS	0277			MTC	0008, 0026, 0050, 0053, 0161, 0277		
Ilo	0148, 0153			Multi System	0349		
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350	Life	0337, 0343				

	0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460		Robotron 0339 Rowa 0277, 0282 Royal Lux 0161 RTF 0339 Runco 0030, 0050, 0062 Saba 0298, 0322, 0339, 0345, 0347 Saisho 0282, 0323, 0337, 0342, 0343 Salora 0346, 0347 Sambers 0171, 0341 Sampo 0007, 0008, 0026, 0050, 0176 Samsung 0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468 Sandra 0277, 0282, 0342 Sansui 0043, 0109, 0320, 0350 Sanyo 0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469 SBR 0320, 0349 Sceptre 0235, 0244 Schaub Lorenz 0347 Schneider 0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382 Scotch 0026, 0031 Scott 0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179 Sears 0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111 SEG 0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382 SEI 0320 SEI-Sinudyne 0339, 0341, 0347 Seleco 0344, 0346, 0347 Sencora 0323, 0343 Sentra 0323 Serino 0277 Sharp 0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476 Sheng Chia 0178 Shogun 0008 Siarem 0320, 0339, 0341 Sierra 0320, 0350 Siesta 0161 Signature 0054 Silva 0277 Silver 0344 Singer 0321, 0339, 0341 Sinudyne 0320, 0339, 0341, 0349 Skantic 0347 Solavox 0347 Sonitron 0161, 0282		Sonoko 0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350 Sonolor 0321, 0347 Sontec 0161, 0320, 0349, 0350 Sony 0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475 Sound & Vision 0340, 0341 Soundesign 0008, 0026, 0031, 0058, 0059, 0179 Soundwave 0320, 0349, 0350 Squareview 0051 SSS 0008, 0058, 0179 Standard 0282, 0320, 0323, 0340, 0342, 0343, 0350 Starlite 0058, 0179, 0320, 0323, 0349 Stenway 0348 Stern 0346, 0347 Strato 0320, 0323 Stylandia 0282 Sunkai 0343 Sunstar 0320, 0323 Sunwood 0320, 0323, 0343, 0350 Superla 0277, 0282, 0342 Superscan 0013, 0178 SuperTech 0277, 0320, 0323 Supra 0323, 0343 Supre-Macy 0057 Supreme 0055, 0107 Susumu 0340 Sutron 0323, 0343 SVA 0151 Sydney 0277, 0282, 0342 Sylvania 0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253 Symphonic 0051, 0058, 0062, 0128, 0179, 0215 Syntax 0199 Syntax-Brilliant 0199 Sysline 0349 Sytong 0277 Tandy 0178, 0282, 0336, 0340, 0342, 0347 0277, 0282, 0342, 0344, 0346 Tashiko 0052, 0177, 0282, 0320, 0342, 0349, 0350 TCM 0337, 0343 Teac 0282, 0320 Tec 0282, 0323, 0342, 0343 Technics 0017, 0023, 0056 TechniSat 0274, 0496, 0497, 0499 Techwood 0008, 0023, 0026, 0056 TEDELEX 0282 Teknika 0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179 Teleavia 0345 Telecor 0282, 0320 Telefunken 0320, 0322, 0345, 0350 Telegazi 0320 Telemeister 0320 Telesonic 0320 Telestar 0320 Teletech 0320, 0323, 0343, 0349 Teleton 0282, 0342 Televideon 0277 Televiso 0321 Tensai 0282, 0320, 0323, 0340, 0343, 0350		Tesmet 0350 Tevion 0337, 0343 Textet 0277, 0282, 0323, 0342 Thomson 0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350 Thorn 0320, 0349 TMK 0008, 0026, 0031 TNCi 0030 Tokai 0282, 0320, 0350 Tokyo 0277, 0342 Tomashi 0348 Toshiba 0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454 Totevision 0007 Towada 0282, 0347 Trakton 0282 Trans Continen 0282, 0320 Transtec 0277 Trident 0282 Triumph 0320 Uher 0161, 0171, 0320, 0347, 0350 Ultravox 0277, 0320, 0339, 0341, 0342 Unic Line 0320 United 0349 Universum 0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351 Univox 0320 Vector Research 0050 Vestel 0282, 0320, 0346, 0347, 0349, 0350, 0351 Vexa 0320, 0323, 0343, 0349 Victor 0015, 0344, 0350 VIDEOLOGIC 0277 Videologique 0277, 0282, 0340, 0342 VideoSystem 0320, 0350 Videotechnic 0277, 0282 Vidikron 0010 Vidtech 0008, 0026, 0031, 0053 Viewsonic 0176, 0203, 0232, 0364 Viking 0057 Viore 0148 Visiola 0277, 0342 Vision 0282, 0320, 0350 Vizio 0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506 Vortec 0320, 0349, 0350 Voxson 0171, 0320, 0339, 0346, 0347, 0350 Waltham 0282, 0320, 0342 Wards 0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059 Watson 0320, 0349, 0350 Watt Radio 0277, 0341, 0342 Waycon 0111 Wega 0320, 0339, 0344 Wegavox 0323 Weltblick 0282, 0320, 0349, 0350 Westinghouse 0107, 0216, 0220 White Westinghouse 0037, 0090, 0277, 0320, 0341, 0342, 0349 Wincom 0101, 0106 Xrypton 0320
--	--	--	---	--	---	--	---

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.