



KOGAN SMARTERHOME™ SMART BABY MONITOR CAMERA

KAFHDBABYCD

Components	3
Overview	4
Installation	5
Connect to Kogan SmarterHome™ App	8
Operation	11
Google Home Control	14
Amazon Alexa Control	17
Troubleshooting	20
Specifications	21
Notes	22

 
COMPONENTS



A Baby monitor (x1)



B Power adaptor (x1)

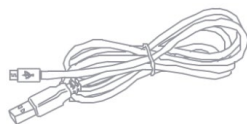

C USB to Micro USB cable (x1)



D Adhesive strip (x1)



E Bracket (x1)



F Temperature and humidity sensor (x1)

 


H Screw (x2)



I User guide (x1)

OVERVIEW

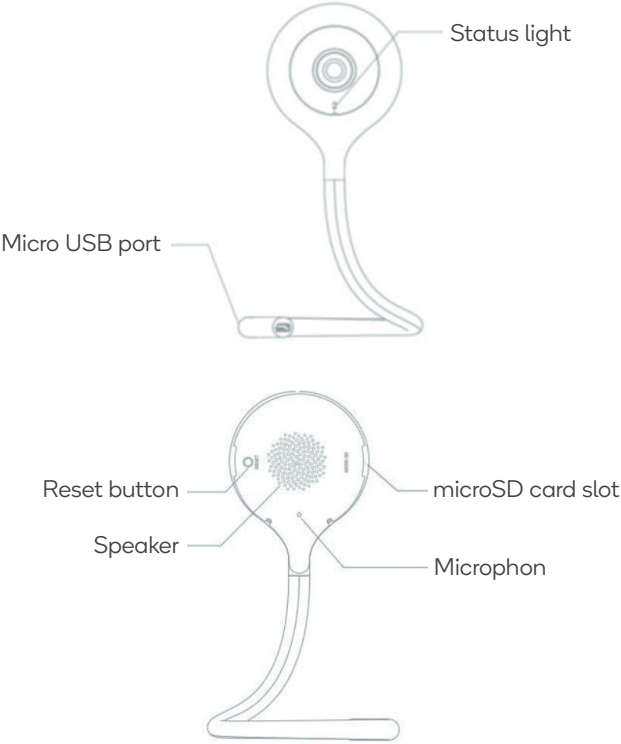


Micro USB port	Connects to a power supply.	
Status light	Light	Status
	Solid red light	The camera is not connected to Wi-Fi.
	Blinking red light	Awaiting Wi-Fi connection.
	Blinking blue light	Ready for connection.
	Solid blue light	The camera is connected to Wi-Fi.
Microphone	Captures audio.	
microSD card slot	Supports FAT32 formatted microSD cards up to 256GB.	
Reset	<ul style="list-style-type: none">• Press and hold this button for 5 seconds to reset the device.• If you have modified the settings, they will return to factory default settings.	

INSTALLATION

The camera can be either placed on a table or mounted to a wall.

Table

 Position the camera on the table as desired. The tail may be bent as required.

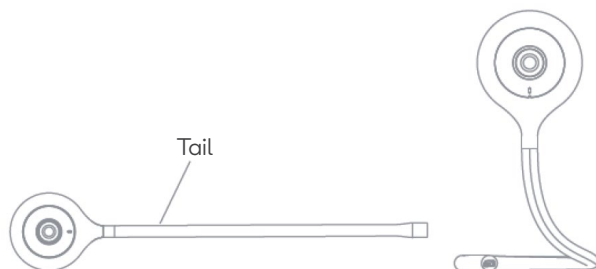


Mounting to a wall


If mounting to a wall, the camera must be fixed onto a clean surface with the bracket. The bracket can be fixed by using either the provided screws or adhesive strip.

Using screws

 
1. Mark the positions of the two screw holes in the bracket on the wall where you would like to mount the camera.

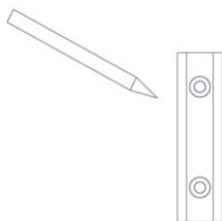

 
2. Use a drill (not supplied) to make holes on the marked locations. Secure two wall anchors (not supplied) into the holes.

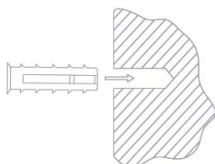

 - 3.** Align the screw holes on the bracket with the holes on the wall. Using a screwdriver (not supplied), secure the provided screws through the marked positions, fixing the bracket onto the wall.

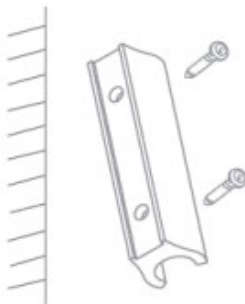


 - 4.** Insert the camera into the bracket from any angle.

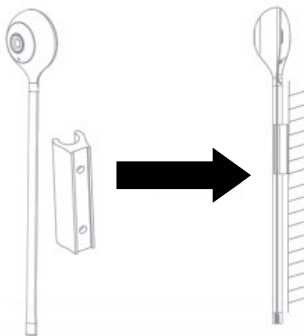


Using the adhesive strip

 
- 1.** Mark the positions of the two screw holes in the bracket on the wall where you would like to mount the camera.

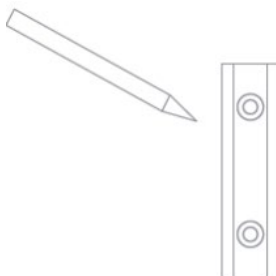

 - 2.** Peel one side of the backing off the adhesive strip and stick the strip onto the desired location on the wall. Peel the other side of the backing off the strip, then stick the bracket onto the strip.

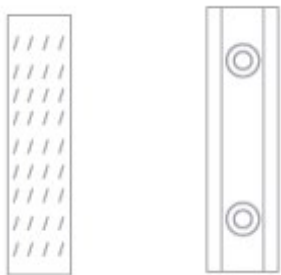


 - 3.** Insert the camera into the bracket from any angle.

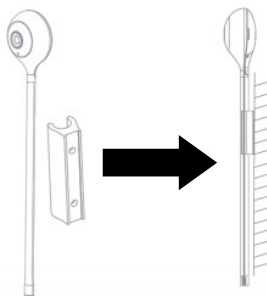

Powering on

 - 1.** Connect the temperature and humidity sensor into the Micro USB port of the camera.

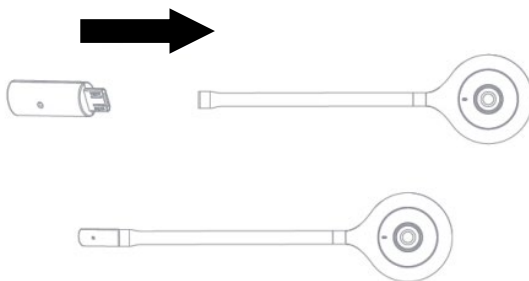

- 2.** Connect the Micro USB end of the power cable into the temperature and humidity sensor, then connect the USB-A end into the power adaptor. Plug the power adaptor into a socket and switch the socket on. The baby monitor will then turn on.

CONNECT TO SMARTERHOME™ APP

Install App

 
Download the “Kogan SmarterHome” app from the Play Store (Android) or App Store (iOS).

Register

If you do not have a Kogan SmarterHome™ account, register or sign in with a verification code sent by SMS.

To register:

1. Tap to enter the registration page.
2. The system automatically recognises your country/area. You can also select your country code manually. Enter your email address and tap ‘Next.’
3. Alternatively, you can register by mobile number and enter the verification code sent to you by SMS.
4. Create a profile on the next page to define your location and room.

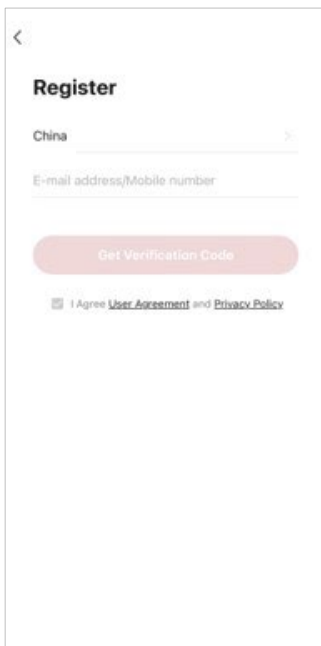

The screenshot shows the 'Register' screen of the Kogan SmarterHome app. At the top left is a back arrow. The title 'Register' is centered. Below it is a dropdown menu showing 'China' with a right-pointing arrow. Underneath is a text input field labeled 'E-mail address/Mobile number'. Below the input field is a pink button labeled 'Get Verification Code'. At the bottom, there is a checkbox followed by the text 'I Agree [User Agreement](#) and [Privacy Policy](#)'.

 
 
 
Set device in pairing mode

When the device is first turned on, it may automatically enter pairing mode which is indicated by the blue light blinking rapidly.



If not automatically in pairing mode when powered on, you can manually set the device in pairing mode by pressing and holding the reset button for 5 seconds until the blue light begins blinking rapidly.

Add device through network

1. Once registered, tap “+” in the upper right corner of the app’s home page to add a new device through the network.
2. Select the product type from the list of options in the app (Home Security > Cameras).
3. Ensure that the device is in pairing mode, with the blue light blinking rapidly, and tap “Confirm light is rapidly flashing”.
4. Upon successfully confirming pairing mode, enter your Wi-Fi details. It is important that your SmarterHome™ device and the app are connected to the same Wi-Fi network during setup.

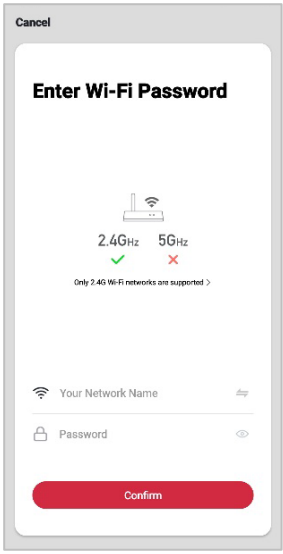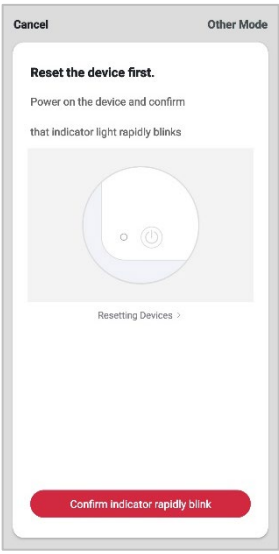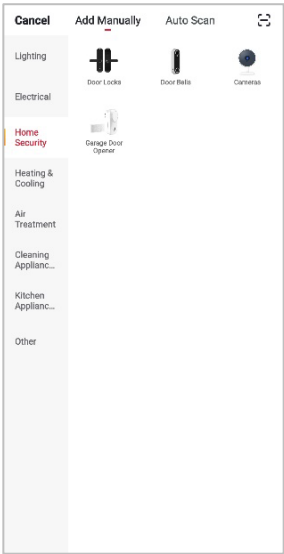

5. Tap 'Continue'. The mobile device will display a QR code. Hold the camera 15–20cm away from the mobile device to allow the camera lens to scan the QR code. Tap 'I Heard a Prompt' when you hear an audio tone from the camera.
6. The device will commence the pairing process and connect to the app. Ensure your Wi-Fi router, mobile phone, and the SmarterHome™ device are kept close until connection is complete.
7. After successfully being added, you will have the option to rename the device and assign it to a location. It will now be listed on the app's home page. Tap the device listing to enter its control page.

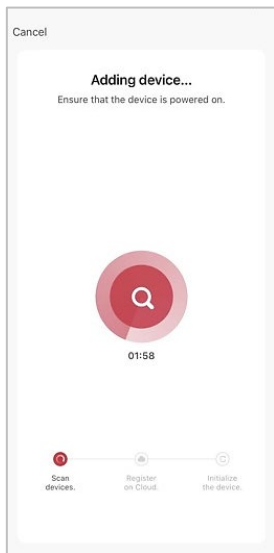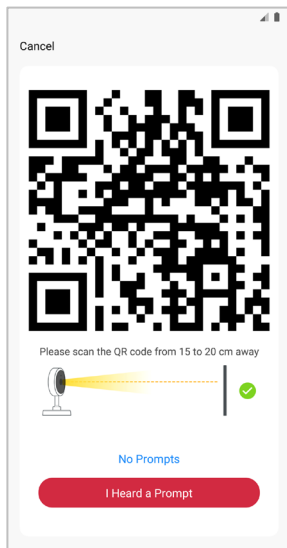  


Notes:

- The device and the app have to use the same Wi-Fi network.
- The device is only compatible with 2.4Ghz networks.

OPERATION

 Interface

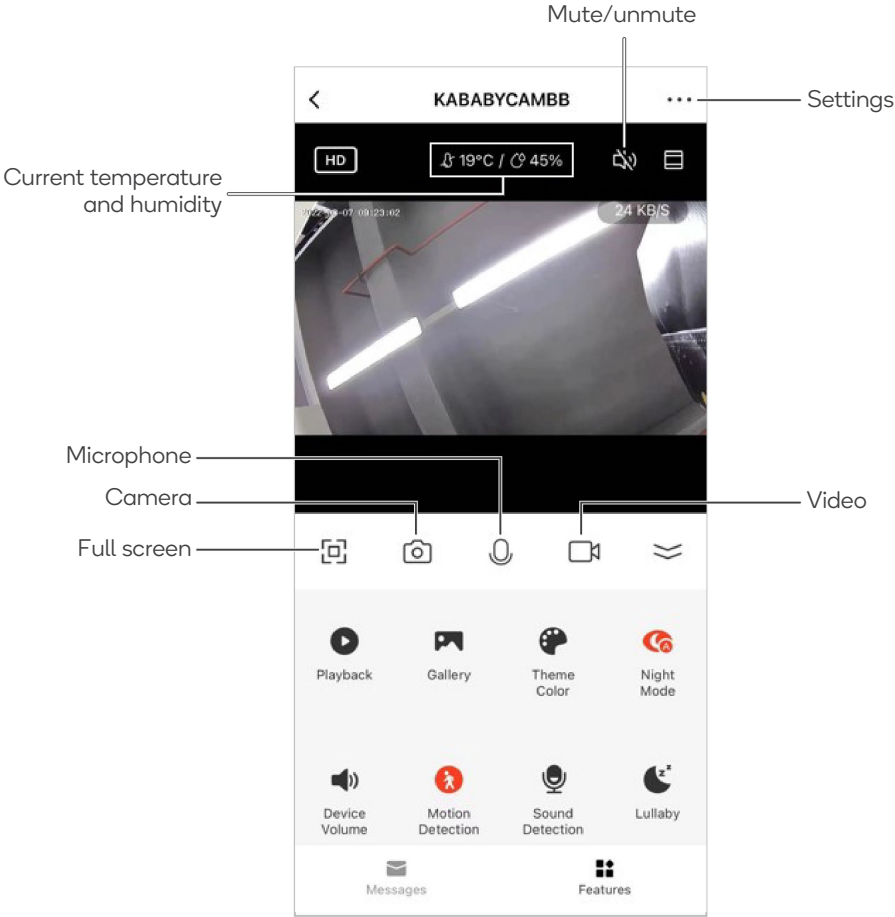


Name	Description
Full screen	Tap to change the orientation of the screen and enter full screen.
Camera	<ul style="list-style-type: none"> Tap to take a screenshot of the current feed. These are saved into the gallery. To gain more storage, insert a FAT32 formatted microSD card (not included) when the camera is turned off into the microSD card slot.
Microphone	Tap to turn on the microphone.
Video	Tap to record a video of the current feed.
Playback	Tap to view past footage.
Gallery	Tap to view any screenshots taken.
Theme colour	Tap to change the colour of the interface.
Night mode	Tap to activate night mode. This is ideal for darker areas or when the lights are not turned on.
Device volume	Tap to adjust the volume of the feed.
Motion detection	Tap to activate the motion detection alarm.
Sound detection	Tap to activate the sound detection alarm.
Lullaby	Tap to browse and play a pre-set list of songs in the camera's library. These songs can assist in having your child fall asleep.


Motion and sound detection alarm notifications

When the alarm is turned on, the camera will be able to send push notifications to users when any movement is detected in the camera's view. This gives added security and may be useful during periods when you are not home. To turn on the notifications, follow the steps outlined below:

 1. Go to the 'Me' tab in the Kogan SmarterHome™ app and tap on the settings icon.

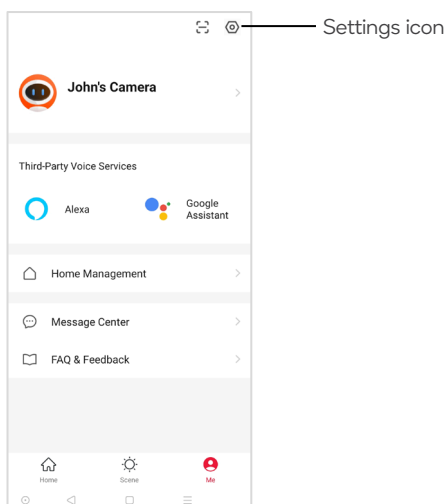

 2. Tap 'App Notification' then turn on 'Enable Notifications' and 'Alarm'. The toggles will turn light green.

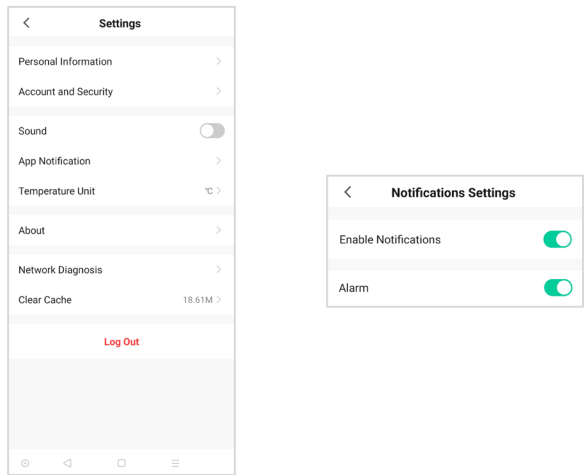

Note:

Ensure notifications are turned on in your mobile device's settings, otherwise you may not receive push notifications from the Kogan SmarterHome™ app.

 
 
GOOGLE HOME CONTROL

Note:



You will need to have set up a Google Home account prior to linking your Kogan SmarterHome™ device.

Adding “SmarterHome” to the Google Home app


1. From the home page of the Google Home app, select the “+” icon to access the ‘Add and manage’ page.
2. Select ‘Set up device’, then under the Works with Google banner, select ‘Have something already set up?’
3. Select the search bar and type ‘Smarter Home’ to locate the Kogan SmarterHome™ service.

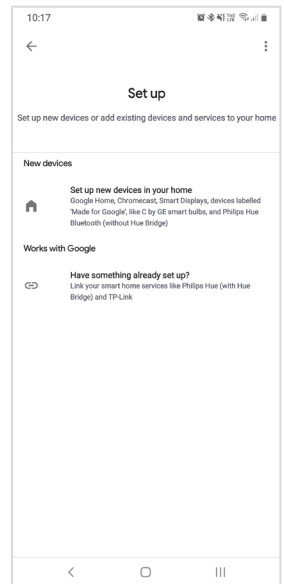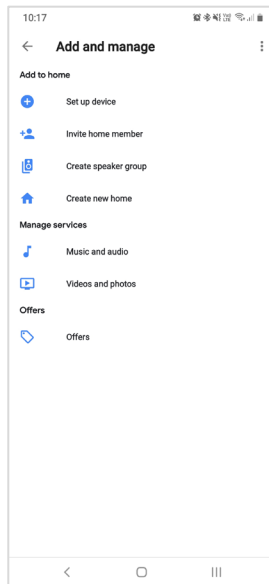

  4. Tap 'Authorise' to grant Google permission to access the SmarterHome™ app and your devices.
5. From here, you will be prompted to sign into your SmarterHome™ account using either your email or mobile phone number, depending on which method you used to register your account.

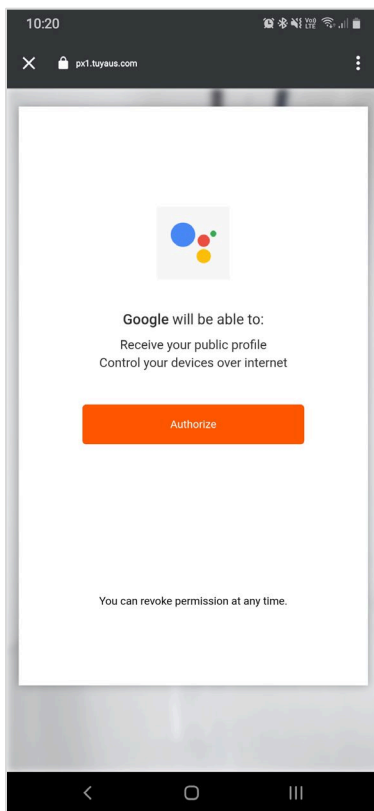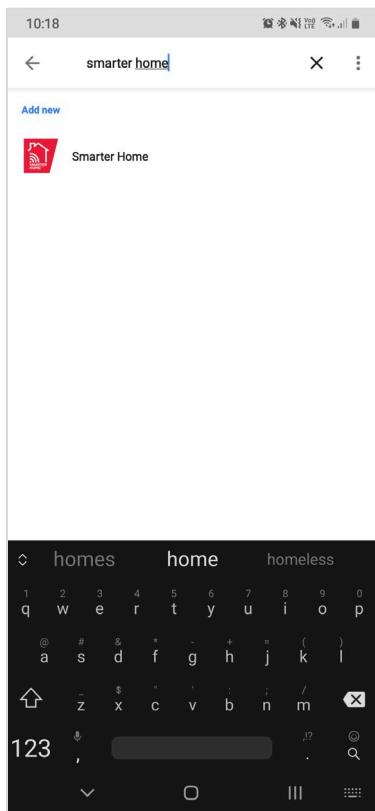

 6. Once connected, the app will display any compatible devices linked to your SmarterHome™ account. From here you can assign them to rooms and set up any routines.
7. Tap on any of the devices to view a list of available commands.

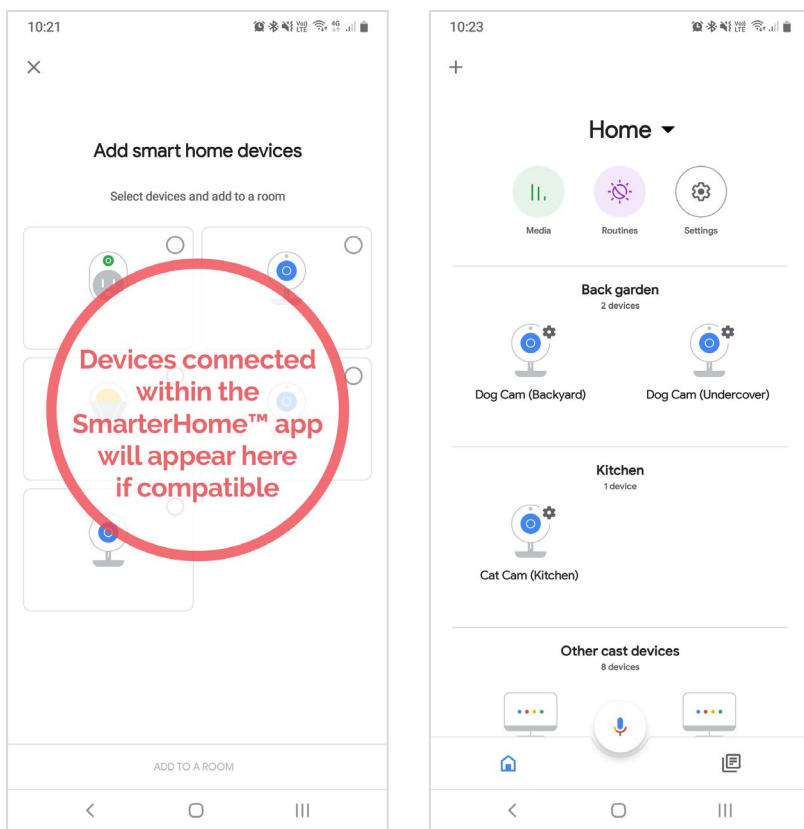

Note:

Please note that Google Home can only control the base/core functions of any compatible SmarterHome™ devices. To make full use of this product's smart functionality, please use the Kogan SmarterHome™ app.

 
 
 
AMAZON ALEXA CONTROL

Note:



You will need to have set up an Alexa account prior to linking your Kogan SmarterHome™ device.

Adding “SmarterHome” to the Alexa app


1. From the home page of the Alexa app, select the “☰” icon in the top-right and select Skills & Games from the sidebar.
2. Select the search bar and type ‘Smarter Home’ to locate the Kogan SmarterHome™ skill.

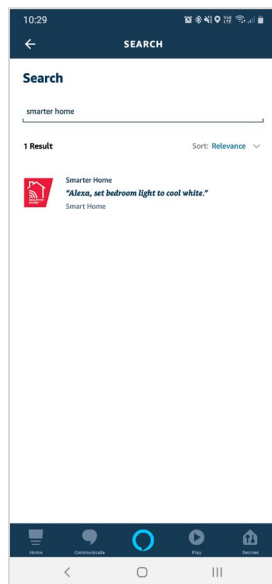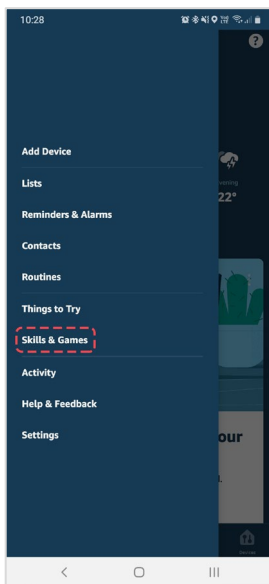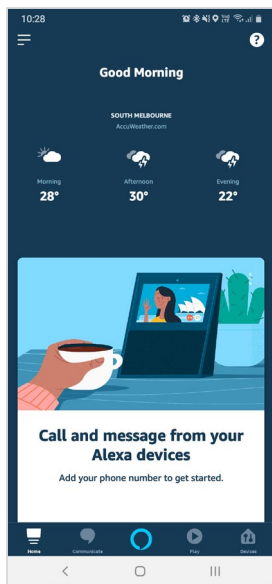

  3. Tap 'Enable to Use' to add the Kogan SmarterHome™ skill to Alexa.
4. From here, you will be prompted to sign into your SmarterHome™ account using either your email or mobile phone number, depending on which method you used to register your account.
5. Tap 'Authorise' to grant Alexa permission to access the SmarterHome™ app and your devices.

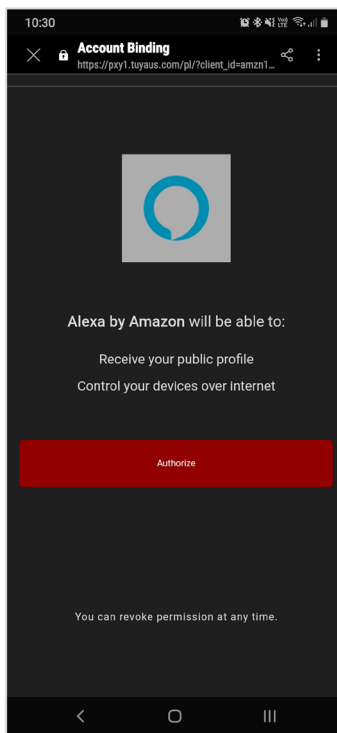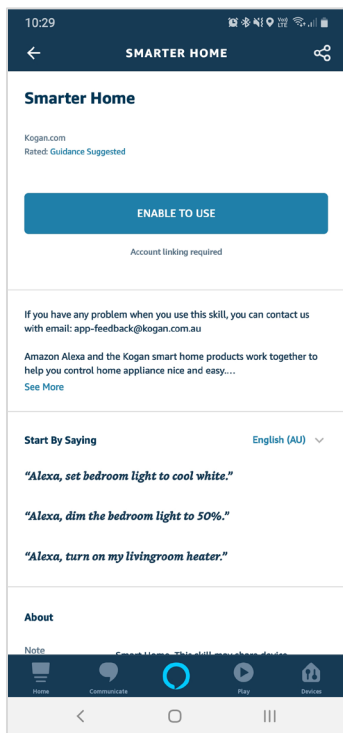

 6. Once connected, the app will perform a search and display the devices linked to your SmarterHome™ account.
7. When your devices have successfully connected to the Alexa app, you will be able to control your Kogan SmarterHome™ devices via Alexa's voice commands.

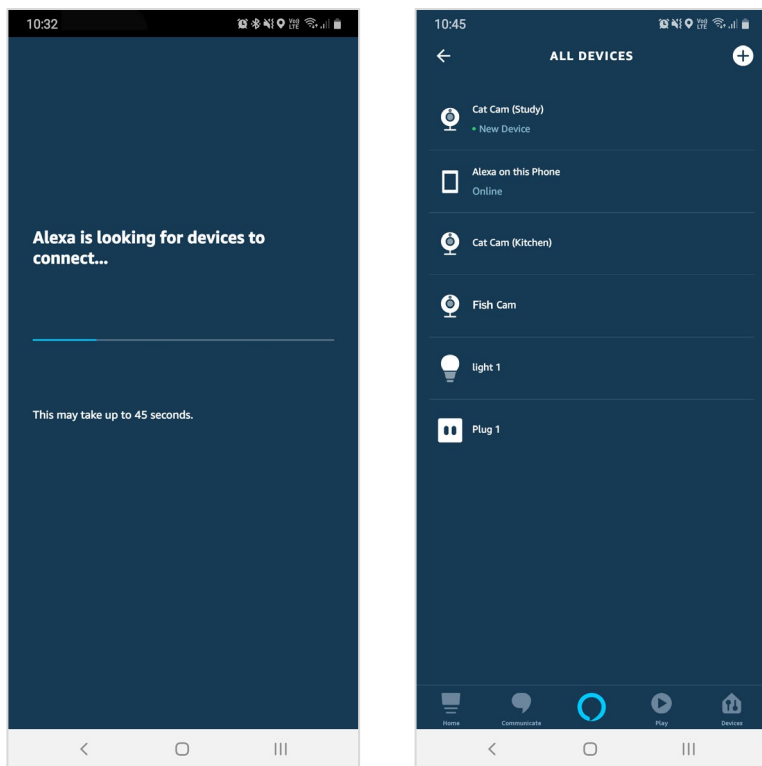

Note:

Please note that Alexa can only control the base/core functions of any compatible SmarterHome™ devices. To make full use of this product's smart functionality, please use the Kogan SmarterHome™ app.

TROUBLESHOOTING

Problem	Possible cause/s and solution
The camera cannot be accessed via the Kogan SmarterHome™ app.	<ul style="list-style-type: none"> • Ensure the camera is within the range of both your router and connected smart device. • The camera is not connected to the Wi-Fi network. Reset the camera by pressing and holding the reset button for 5 seconds. Reconnect to the Kogan SmarterHome™ app.
This camera is shown in the list of devices in the Kogan SmarterHome™ app even after resetting.	Resetting the camera only resets the network configuration of the camera but does not change the configuration on the Kogan SmarterHome™ app. You must remove the camera from the Kogan SmarterHome™ app settings.
The camera is not detected after changing the router.	<ol style="list-style-type: none"> 1. Reset the camera by pressing and holding the reset button for 5 seconds. 2. Remove the device from the Kogan SmarterHome™ app settings. 3. Reconnect the device to the Kogan SmarterHome™ app.
The device is not identifying the microSD card.	<ul style="list-style-type: none"> • Ensure the camera is turned off before inserting the microSD card. • Confirm whether the microSD card is formatted to FAT32.
I am not receiving push notifications for motion or sound detection.	<ul style="list-style-type: none"> • Ensure push notifications are enabled in the app settings. • Ensure the Kogan SmarterHome™ app is running on your smart device. • Confirm the motion detection alarm/sound detection alarm is turned on in the Kogan SmarterHome™ app.

SPECIFICATIONS

Power supply	DC 5V, 1A
Rated voltage	DC 5V
Operating temperature	-20°C– 50°C
Dimensions	53 x 32 x 280mm
Weight	50g
Maximum microSD card storage	256GB
Camera	
Image sensor	1/2.9"2 Megapixel CMOS
Resolution	2304 x 1296
Shutter	1/25–1/100,000s
Min Illuminance	Colour: 0.01 LUX at F1.2 Black and white: 0.001 LUX at F1.2
IR Distance	Night visibility up to 10m
DWDR	Yes
Lens	3.6mm @ F2.0, 105°
FOV (H/V/D)	85°/50°/100°
Video and audio	
Compression	H.264
Bit rate	32Kbps–2Mbps
Audio input/output	Built-in microphone and speaker
Network	
Communication protocol	HTTP, DHCP, DNS, TCP/IP
Wi-Fi	2.4G Wi-Fi, IEEE802.11b/g/n
OS supported	iOS 8 or later, Android 4.2 or later
Security	User authentication, software encryption

NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com