


KERNAU

USER MANUAL

ELECTRIC KETTLE KSK 101

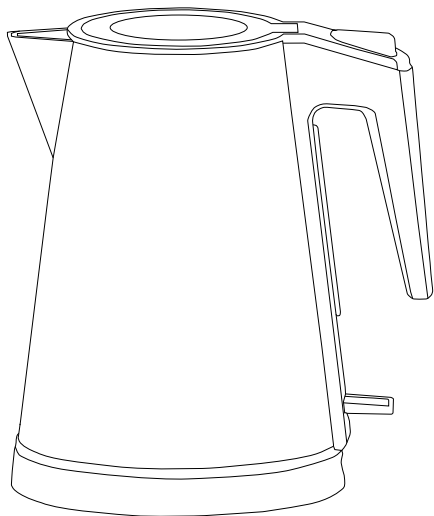

THANK YOU FOR CHOOSING THIS PRODUCT

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance. Please take the time to read this User Manual before using your appliance and keep this book for future reference.



CAUTION :

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING AND KEEP IT PROPERLY FOR FUTURE REFERENCE

Read this user manual carefully before you use the appliance and save it for future reference

- Please always charge the appliance before your use.
- Check if the voltage indicated on the CHARGER corresponds to the local mains voltage before you connection.
- Do not use the appliance if the plug, the cord or the appliance itself is damage.
- If the mains cord of this appliance is damaged, you must have it replaced in order to avoid a hazard
- Keep the appliance out of the reach of children.
- Never suck up water or any other liquid, never suck up flammable substances and do not suck up ashes until they are cold.
- Do not point the tube or any other accessory at the eyes or ears nor put it in your mouth when it is connected to the vacuum cleaner and vacuum cleaner is switched on.
- Do not take off the battery case when the appliance is under charging or using.

PART 1. FEATURES


This product is made of high quality material and incorporates the following features for your convenience:

- Cordless design, easy operation.
- Boils water rapidly, save more time and energy.
- Concealed heating element, safety and easy cleaning.
- Three-level safety system:
 - Automatic power off
 - When water boiling. Dry-boiling protection.
 - Over heat protection.
- Separate base move kettle conveniently. 360 °rotation design.

SPECIFICATION

Model	KSK 101
Rated voltage	220-240V
Frequency	50-60Hz
Rated Power	1500-1800W
Capacity	1.0L

NAME OF PARTS

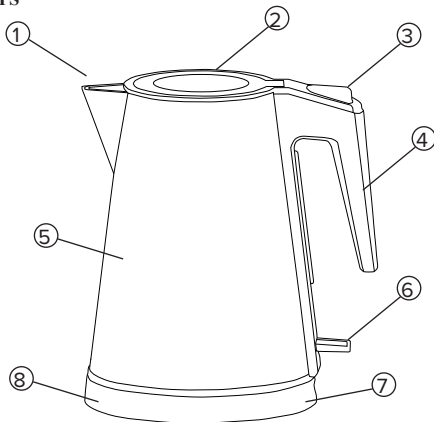

PARTS:

1. Spout
2. Lid decoration
3. Lid button
4. Handle
5. Kettle Body
6. "On/off" switch Press "1" to connect power. Press "0" to shut off power Indicator Lamp
7. Power Cord
8. Power Base

PART 2. IMPORTANT GUIDELINES

Read all instructions before using.

1. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
2. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
3. Do not place on or near a hot gas or electric burner or in a heated oven.
4. Do not operate the appliance without anything in it to avoid damaging the heat elements.
5. Ensure that the kettle is used on a firm and flat surface out of reach of children; this will prevent the kettle from overturning and avoid damage or injury.
6. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
7. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
8. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
9. Be careful of refilling when the kettle is hot.
10. Children's should be supervised to ensure that they do not play with the appliance.
11. Do not touch the hot surface. Use the handle or the button.
12. The attached base cannot be used for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot water.
14. The appliance is not a toy. Do not let the children play it.
15. The kettle is for household use only. Do not use outdoors.
16. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
17. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
18. To disconnect, turn any control to "off", then remove plug from wall outlet.
19. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
20. Do not use the appliance for other than intended use.
21. The kettle can only use with the stand provided.
22. If the kettle is overfilled, boiling water may spill out.
23. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
24. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
25. Avoid spillage on the connector.

PART 3. BEFORE FIRST USE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with damp cloth.



NOTE:

The max capacity of kettle is 1.0L.



WARNING!

Position the lid so that steam is directed away from the handle.

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PART 4. USING ELECTRIC KETTLE

1. Place the unit on the level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button, fill with the desired amount of water, and then close the lid.

Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX marks or sit below MIN level. Too little water will cause the kettle switching off before the water has boiled.



NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the On/Off switch, the indicator will light up. Then the kettle will start to boil the water, once the water has being boiled the On/Off switch will be off automatically. You can shut off the power by lifting On/Off switch at any moment during boiling water. If you want to boil water again, only press down the On/Off switch directly to restart the kettle.



NOTE: Ensure that the On/Off switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.

5. Lift the kettle from the power base and then pour the water.



NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water is boiling, position the lid so that steam is directed away from the handle.

6. The kettle will not re-boil until the On/Off switch is pressed down again. The kettle may be stored on the power base when not in use.



NOTE: Always disconnect the power supply when not use.

7. The heating element surface is subject to residual heat after use.

PART 5. BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water; the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water to reboil.

PART 6. CLEANING

1. Always disconnect the appliance from the power outlet and cool it down completely before cleaning.
2. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
3. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.
4. Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.



CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

When not in use, the power cord can be stored at the bottom of the appliance. When not in use or storage, the power cord may be wound under the base of kettle.

REMOVAL OF MINERAL DEPOSIT

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale at the bottom of kettle interior so as to cause the operation less efficiency.

You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow the below instructions to use the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add the water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.

2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

If the kettle is overfilled, boiling water may be ejected.

The appliance is only to be used with the stand provided.

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Fig. A



Fig. B

DISPOSAL OF USED EQUIPMENT

This device has been designed and manufactured of high-quality reusable materials and components.

The symbol of the crossed waste container placed on the product (Fig. A) means that the product is subject to selective collection in accordance with the provisions of Directive 2012/19/EU of the European Parliament and of the Council. A crossed-out wheeled bin symbol (Fig. B) placed on the product means that the product contains batteries that are subject to separate collection in accordance with the provisions of Directive 2006/66/EC of the European Parliament and of the Council. Such marking informs that electrical and electronic equipment and batteries (if any) must not be disposed of with other household waste after the period of use.

The user is obliged to return waste equipment and batteries (if any) to collection points for waste electrical and electronic equipment and batteries (if any). Collectors of such waste, including waste equipment collectors, treatment plants, distributors (shops), municipal waste separate collection points (municipal units), and other entities specified by law form an appropriate system to return this kind of equipment.

Correct disposal of waste equipment and batteries (if any) allows avoiding consequences that may be harmful to health and the environment, caused by the possible presence of hazardous components in the equipment and batteries, and inappropriate storage and processing of such equipment and batteries. Households play an important role in contributing to the reuse and recovery, including recycling, of waste equipment. At this stage, attitudes are formed, affecting the common good, which is a clean natural environment.

Moreover, households are one of the largest users of small equipment and the rational management thereof at this stage affects the recovery of secondary raw materials.

Penalties may be imposed in accordance with national legislation for improper disposal of this product.

If the device has a lock, please remove it for the safety of all persons who may later come into contact with the device.

Some refrigerators and freezers contain insulation material and CFC refrigerant. Therefore, be careful not to pollute the environment when you dispose of your old refrigerator.

KERNAU

SERWIS

PL: +48 22 243 70 00

Pn 8:00 - 17:00

Wt-Pt 8:00 - 16:00

serwis@kernau.com

www.kernau.com/support/