

Programming instructions for your TV

Before getting started:

- Stand 6-8 feet away from the TV and ensure there is a line of sight between the remote and the digital box.
 - Make sure the TV and digital box are on.
- 1 Turn on the device that you would like to program the remote for. This could be your TV or an amplifier.
 - 2 Set the volume of the digital box to 25 by using the remote volume button before you program a TV or amplifier.
 - 3 Press and hold  for 3 seconds, until the green LED next to the OPTIK button on the remote control flashes twice.
 - 4 From the lists below, enter the 4-digit code for the brand of your TV or amplifier. The LED light beside the TV button will flash twice in red when a TV code is entered; and will flash twice in yellow when an amplifier code is entered.

Codes for TV Brand

Funai	0011
Insignia	0021
LG	0015
Panasonic	0013
Philips	0019
RCA	0020
Samsung	0018
Sanyo	0012
Sharp	0014
Sony	0017
Toshiba	0016
Vizio	0010
Other*	0029

Codes for Amplifier Brands

Aiwa	0070
Bose	0067
Denon	0063
Harman/ Kardon	0062
Hitachi	0071
LG	0065
Onkyo	0066
Phillips	0069
Pioneer	0068
Samsung	0064
Sanyo	0073
Sharp	0072
Sony	0060
Yamaha	0061
Other*	0079

Tap to go back.
Press and hold to exit.

- 5 Press and hold  until your TV or amplifier switches off.
- 6 As soon as your TV or amplifier switches off, remove your finger from  and press  to confirm – the red TV light will flash twice.
- 7 Now press  again to switch your TV or amplifier back on.

Quick tip:

To have your digital box and TV come on with 1 button press, follow the steps below.

- Press and hold  for 3 seconds, until the green LED on the remote control flashes twice.
- Enter code **0 0 0 7** – green LED flashes twice.

 will then turn on both your digital box and TV: (and amplifier if programmed).

To turn power sync off. Enter code **0 0 0 6** and the green LED will flash twice.

