



MOBO COMPONENTS(SHANGHAI)LLC FRONT LOADING WASHING MACHINE INSTRUCTION MANUAL



MODEL NO: 3000-0301AU

- * Intelligent frequency conversion
- * High temperature cleaning
- * Drainage protection in winter
- * Maximum mass of dry cloth: 2.5kg

CONTENTS

IMPORTANT SAFEGUARDS.....	3
PARTS DESCRIPTION	5
INSTALLATION METHOD	5
ATTENTION BEFORE US USING	7
BEFORE WASHING INSTRUCTIONS	8
CONTROL PANEL	10
MAINTENANCE	11
TROUBLE SHOOTING GUIDE	13
NAME AND CONTENT OF PRODUCTS HAZARDOUS SUBSTANCE....	15
PARAMETERS.....	16


IMPORTANT SAFEGUARDS

1. Please use a special power socket with good grounding, 220V ~ and above 10A.
2. Please take the plug to insert and unplug the power cord. Do not use damaged power cord. When there is dirt on the power cord insert, wipe it with a dry cloth in time.
3. Do not plug or unplug the power plug with wet hands.
4. After use, please unplug the power plug for maintenance or cleaning.
5. Do not let the washing machine near the fire source, or put lit cigarettes, candles and volatile materials on the washing machine.
6. Please do not spill water directly on the panel of the washing machine.
7. Please do not place the washing machine in a place with heavy moisture.
8. Please fix the drain pipe before use and make sure that the sewer is not blocked.
9. When washing at high temperature, the door glass will become hot. Do not touch the door glass, especially children.
10. When the door needs to be opened during high-temperature washing, please wait until the temperature drops to a safe temperature and the door lock is unlocked automatically before opening the door.
11. The disassembled packaging materials shall be handled in time and shall not be touched or swallowed by children.
12. Children should be supervised to ensure that they do not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.
Children of less than 3 years should be kept away unless continuously supervised
13. Please close the door when the washing machine is not in use to prevent children from entering the washing or spinning drum.
14. Please do not put heavy objects on the washing machine.
15. Please do not let non professionals repair or transform the washing machine.
16. Please do not wash waterproof clothes, such as raincoats, down products, sleeping bags, etc.
17. Only machine-washable clothes can be washed. If in doubt, please

follow the washing guide logo on the clothes.

18. Do not wash or dehydrate clothes stained with kerosene, gasoline, diluent and other inflammables.
19. Do not operate the washing machine when gas leaks.
20. In any case, please confirm the water level in the barrel before opening the door. If the water level is high, please do not open the door to avoid unnecessary loss caused by water overflow.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
23. This appliance is intended to be used in household and similar applications such as:
 24. – staff kitchen areas in shops, offices and other working environments;
 25. – farm houses;
 26. – by clients in hotels, motels and other residential type environments;
 27. – bed and breakfast type environments;
 28. – areas for communal use in blocks of flats or in launderettes.
29. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
30. New hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


PARTS DESCRIPTION

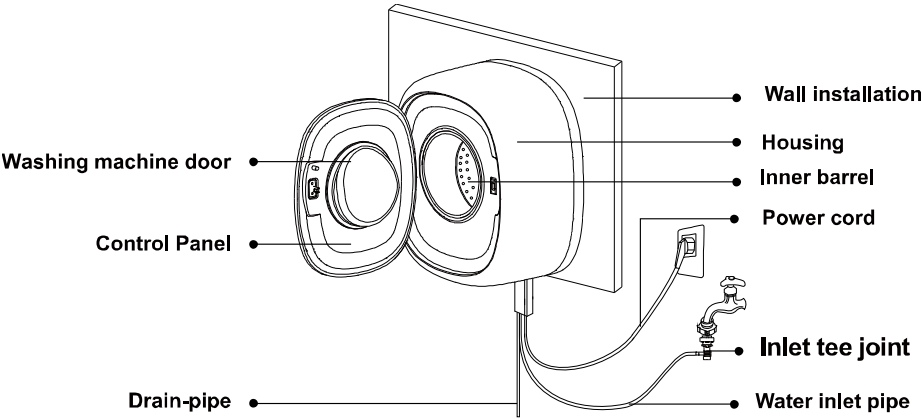


INSTALLATION METHOD

Connection between water inlet tee joint and faucet

1. Hold the connector in one hand and press the snap ring in the other hand to pull down to separate the connector from the tee joint.

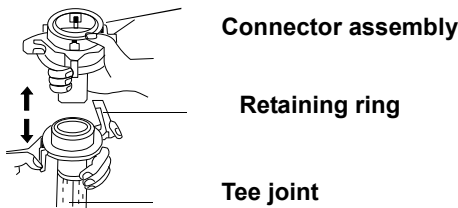

2. Loosen the four fixing screws on the connector and rotate the tightener so that there is sufficient distance between the tightener and the connector (the height of 3 threads) for screw installation.

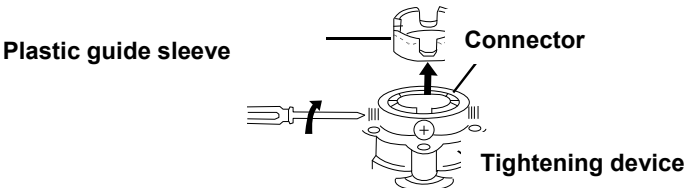

If the pipe diameter of the faucet is too thick, the plastic guide sleeve inside can be removed.


- Evenly adjust the four screws of the connector so that the two screws close to the wall first fully contact the outside of the faucet.



water faucet


Screws near the wall can be screwed in a little in advance.

- Press the connector against the faucet port to make its internal gasket fully contact with the faucet (please note that the gasket cannot be taken out).

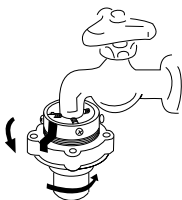

Please select standard faucet. The faucet mouth must be flat. If it is uneven, please flatten it.

- As shown in the figure, rotate the two screws on the opposite side of the wall to make them contact with the faucet, and then tighten them with a screwdriver.

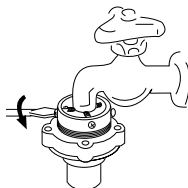


- Rotate the tightener until the tightener is tightened (water leakage will occur if it is not tightened). After rotation, the gap between the tightener and the connector is less than 3mm.

less than 3mm




Retaining ring

 - When removing the water inlet pipe: press down the retaining ring of the water inlet pipe.



Retaining ring

8. When installing the water inlet pipe: fasten the back of the water inlet pipe and loosen the retaining ring.

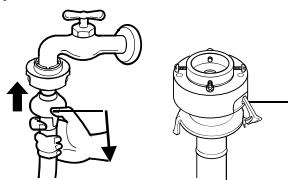

Retaining ring

Ensure that the buckle is located on the connector







Attentions before using

1. Washing guide identification




 
 

 
Check the washing guide logo on the laundry, the fabric with laundry on the logo and its suitable washing method.

2. Classified washing

- In order to get the best washing effect, only the same kind of clothes are washed in the same washing cycle. For different clothes, the required water temperature, dehydration speed and washing procedures are also different. Dark clothes should be washed separately from light and white clothes. Dyed clothes and cotton clothes should be washed separately. Otherwise, it may cause white clothes to change color. If possible, do not wash dirty clothes and cleaner clothes at the same time.
- The degree of contamination (serious, medium and slight) shall be washed according to the degree of contamination.
- Color (white, light, dark), white clothes should be washed separately from colored clothes.
- Cotton velvet (clothes easy to fall off cotton wool and clothes easy to adhere brown wool).

 <p>Check whether or not the clothes are machine-washable</p>	 <p>For clothes whose buttons or accessories are easy to be damaged during washing, please wash inside out</p>	 <p>Remove dust and silt from clothes before washing</p>
 <p>Take out objects such as keys, hairpins, pins and coins from pockets</p>	 <p>Put delicates into a laundry bag before washing</p>	 <p>Wash clothes with oil stains or clothes that are easy to fade separately</p>

Component Name

instruction book	water inlet	drain-pipe	installation guide	water supply connector	expansion bolt (4↑)	rubber mat (4↑)
						


BEFORE WASHING INSTRUCTIONS




Before you use this machine, please make sure that the machine has been properly installed according to the installation instructions.


For the first time, it is recommended that you complete a "tub cleaning" or other high-temperature washing procedures without clothes.

1. Preparation before washing

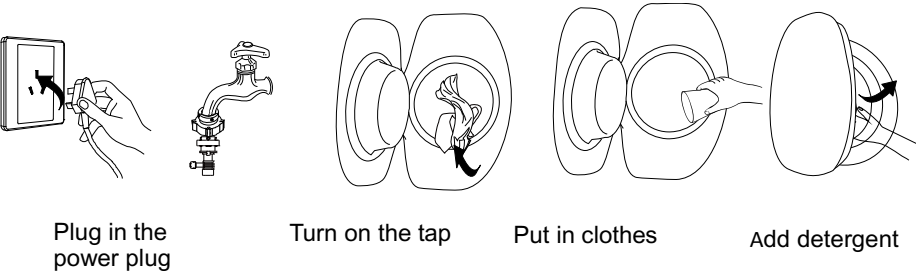

2. Start the laundry

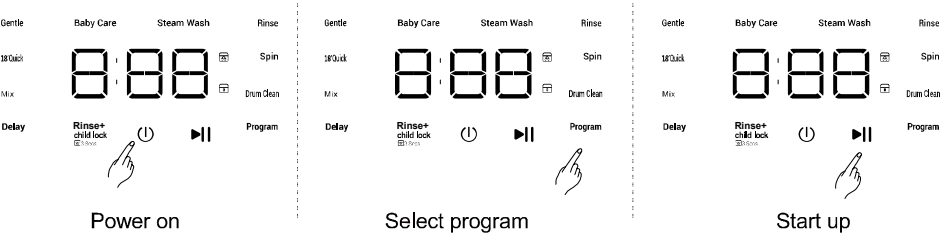


Program	Max load (kg)	Clothes Type
Mix	Rated	Cotton fabrics/Chemical fiber fabrics
18'Quick	≤1.5	Cotton fabrics/Chemical fiber fabrics
Gentle	≤1.5	Cotton fabrics/Chemical fiber fabrics
Baby Care	Rated	Infant cotton fabrics
Steam wash	Rated	Infant cotton fabric
Rinse	Rated	Cotton fabrics/Chemical fiber fabrics
Spin	Rated	Cotton fabrics/Chemical fiber fabrics
Drum Clean		Washing machine cleaning and degerming

Laundry procedure Introduction

1. During the operation of some programs, the actual displayed time may jump due to the perceived weight of clothes, which is not a washing machine fault.
2. The time required will change when the water pressure, drainage conditions, clothing material, clothing weight and water temperature change.
3. The weight of clothes and the type of detergent may lead to the reduction of spinning speed. If the spinning speed is too low, poor rinsing effect may occur. Please increase the rinsing times.
4. Power on again after power failure, and the washing machine will continue to operate at the time node before power failure.

CONTROL PANEL

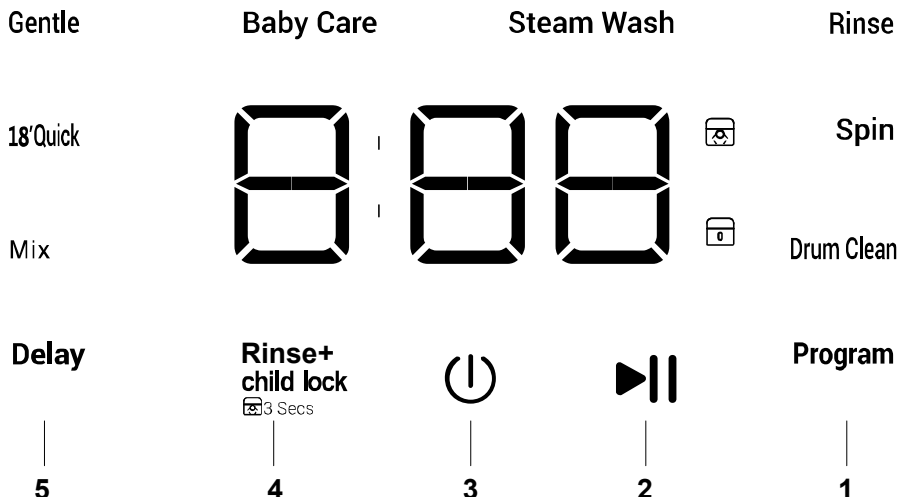

1. "PROGRAM" BUTTON

Select the appropriate procedure according to the type and stain degree of laundry.

2. "START/PAUSE" BUTTON

Press this button to start working.

During operation, press this button to stop temporarily, and then press this button to continue operation and execute the setting program.

Press this button for 2 seconds to temporarily open the door, so that clothes can be added in the middle of the way.

Caution: When the washing machine is running at a high temperature or the water level is higher than the bucket mouth, the midway filling function does not respond.

3. "POWER" BUTTON

Press this button to switch the power supply.

After the program ends, press the "POWER" button to cut off the power supply.

4. "Rinse" BUTTON (Including "Child lock" button function)

In order to prevent children from misoperation, this button can set the child lock function.

After setting the child lock function, other buttons do not work except the power button.

After the program is started, press and hold the "Rinse" button for more than 3 seconds to turn on or off the child lock function.

5. "PRESET" BUTTON

The preset time refers to the time from the preset to the start of washing.

The preset time should be selected after selecting the required program and before pressing the "START/PAUSE" button.

In order to prevent children from misoperation, this button can set the child lock function.

After setting the child lock function, other buttons do not work except the power button.

After the program is started, press and hold the "Rinse" button for more than 3 seconds to turn on or off the child lock function.

MAINTENANCE

After long-term use, the washing machine should be maintained in time. Good maintenance habits will prolong the service life of the washing machine.

Before carrying out maintenance work, please unplug the power plug to prevent danger.

Housing

After each use, please wipe it with a soft and clean cloth. When the stain is serious, please wipe the cloth with an appropriate amount of detergent or soapy water.

Do not pour water directly.

Do not use detergent, diluent, gasoline, alcohol and other chemicals to wipe the housing.


Door sealing ring

After each use, please wipe away dirt, thread scraps and other sundries with a towel. If there are pins and other foreign matters in the groove of the door sealing ring, be sure to take them out.


When the washing machine is frozen

1. Wrap the faucet and connector assembly with a hot towel.
2. Remove the water inlet hose and soak it in hot water at about 50 °C.
3. Pour 2-3 liters of hot water at about 50 °C into the drum.


4. Reconnect the water inlet pipe, turn on the faucet, start the washing machine, and check whether the water inlet and drainage are normal.

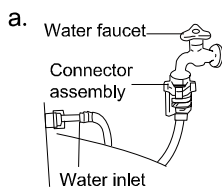

 - b. Remove the water inlet hose and soak it in hot water.



- c. Pour 2-3 liters of hot water at about 50 °C into the drum.

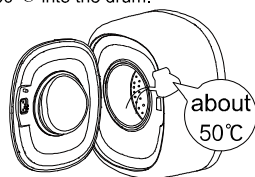

Clean the barrel

After the washing machine has been used for a period of time, there may be dirt in the washing cylinder. The purpose of cleaning the inner and outer **barrel** can be achieved by using the tub cleaning procedure.

Note: do not put clothes and detergents into the barrel in tub cleaning mode.


Cleaning of connector assembly

1. Remove the water inlet hose on the connector assembly side.
2. Unscrew the tensioner in the direction of the arrow.
3. Flush the inside of the tensioner with water.
4. Reinstall the cleaned tensioner and water inlet hose.


Clean the drain filter

Because there will be water falling from the drain outlet, please prepare the water receiving container in advance and then open the drain outlet cover.


Before disassembling the filter, please make sure that the water stored in the washing machine has been cooled to avoid scalding.

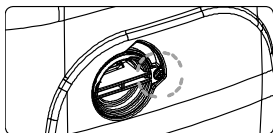

1. Unscrew the screws at the marked position with a screwdriver.

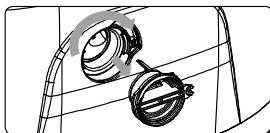

2. Turn the filter cover clockwise and pull it out.

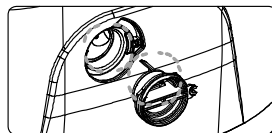

3. Clean the foreign matters and reinstall the filter cover.

Troubleshooting guide

Problem	Cause	Solution
Cannot start	<ol style="list-style-type: none"> 1. Press the "POWER" Button or the "START/PAUSE" button or not? 2. Is the power cord unplugged? 3. Is there a power failure? 4. Is the leakage protector disconnected? 	<ol style="list-style-type: none"> 1. Press the "POWER" Button or the "START/PAUSE" button. 2. Connect the power cord plug 3. Please wait 4. Turn on the leakage protector
Poor drainage	<ol style="list-style-type: none"> 1. Is the washing machine installed smoothly? 2. Have you washed a single smaller garment? 	<ol style="list-style-type: none"> 1. Install the washing machine on a horizontal and flat ground. 2. Add a few similar items of clothing.
Water inlet fault displays "E1"	<ol style="list-style-type: none"> 1. Is the tap turned off? 2. Is there no water supply or low water pressure? 3. Is the water inlet pipe frozen? 4. Is the inlet pipe and inlet valve blocked? 	<ol style="list-style-type: none"> 1. Turn on the tap 2. Please wait 3. Thaw the inlet pipe with hot water 4. Take out the water inlet pipe and thoroughly clean the filter screen in the water inlet valve.
Drainage failure displays "E3"	<ol style="list-style-type: none"> 1. Is the height of the drain too high? 2. Is the drain frozen? 3. Is the drain blocked by foreign matter? 4. Is the drain blocked by foreign matter? 	<ol style="list-style-type: none"> 1. Please place the drain pipe to ensure that the height is less than 1m. 2. Thaw the drain pipe with hot water. 3. Remove foreign matters and dredge the drain pipe. 4. Remove floor drain debris.
Door failure displays "E2"	Confirm whether the washing machine is started when the door is not closed?	Close the door firmly
No heating displays "E6"	Turn off the faucet and unplug the power plug. Please contact professional maintenance personnel.	
Keep water injecting displays "E4"	Turn off the faucet and unplug the power plug. Please contact professional maintenance personnel.	
Too much bubble	Do you use special low foam detergent for drum washing machine?	It is recommended to add an appropriate amount of detergent
In case of other faults, please contact professional maintenance personnel.		

Note:The following conditions are not faults.

The door won't open	The program is running.
Stink	Due to the use of rubber parts, there will be a rubber smell at the beginning.
Less water for washing and rinsing	The front loading washing machine only needs a small amount of water to wash.
Midway water inflow	If the water level drops, the water will be replenished automatically.
Drainage during washing	Is there too much or multiple-bubble detergent?
Remaining time change	If the clothes are eccentric during dehydration, the dehydration time will be extended accordingly in order to correct the eccentricity. If the water pressure is too low, the water inlet time will be prolonged accordingly.
Abnormal sound during dehydration	Is the power cord in contact with the box? Have the transportation fixing bolts been removed? Are there any hairpins, coins and other foreign matters falling into the drum?

NAME AND CONTENT OF PRODUCTS HAZARDOUS SUBSTANCE

Part name	Hazardous substances					
	Pb	Hg	Cd	Cr6	PBB	PBDE
Door lock	x.	o	o	o	o	o
Computer board	X.	o	o	o	o	o
Power cord	o	o	o	o	o	o
Bolt and nuts	o	o	o	o	o	o
Water level sensor	o	o	o	o	o	o
Draining Valve	o	o	o	o	o	o
Motor	x	o	o	o	o	o
Belt and belt pulley	o	o	o	o	0	o
Door assembly	o	o	o	o	o	o
Top cover assembly	o	o	o	o	o	o
Control panel assembly	o	o	o	o	o	o
Housing assembly	o	o	o	o	o	o
Inner barrel	o	o	o	o	o	o
Base	o	o	o	o	o	o
Detergent box	o	o	o	o	o	o
Washing inner and outer barrels	o	o	o		o	o

Notes:

1.This form is prepared in accordance with SJ/T 11364.

2.“o”Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T26572.

3.“X”It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T26572, but it is within the scope of the application exception list of restricted substances in the compliance management catalogue.

Parameters

PARAMETER	
Rated voltage	220-240V~,50Hz
Rated washing power	50W
Rated spin power	125W
Rated heating power	1550W
Maximum power	1550W
Water Pressure	0.05-0.75Mpa
Overall dimensions (mm)	558*658*320

The Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle, and that this programme is used to assess the compliance with the EU Ecodesign legislation.

Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.