

User Manual

 
EASY[®]
HOME

 
 
2-IN-1 RECHARGEABLE VACUUM CLEANER

 
 
 


Contents

- Overview 3**
- Use..... 4**
- Device parts..... 6**
- About these operating instructions..... 7**
- Proper use 9**
- Safety information 10**
 - Safe operation10
 - Use of rechargeable batteries.....14
- Package contents.....15**
- Preparing the appliance.....16**
 - Charging the battery16
- Using the handheld vacuum cleaner MD 18418 H.....17**
- Using the floor vacuum cleaner17**
 - Assembling the floor vacuum cleaner.....17
 - Using the floor vacuum cleaner.....17
- Cleaning and care 18**
 - Cleaning the dust container.....18
 - Cleaning the suction openings of the floor vacuum cleaner19
 - Cleaning the brush and floor tool19
- Storage 20**
- Troubleshooting..... 20**
- Disposal.....21**
- Technical specifications 22**
- Declaration of Conformity..... 22**
- Service information 23**
- Legal Notice 24**

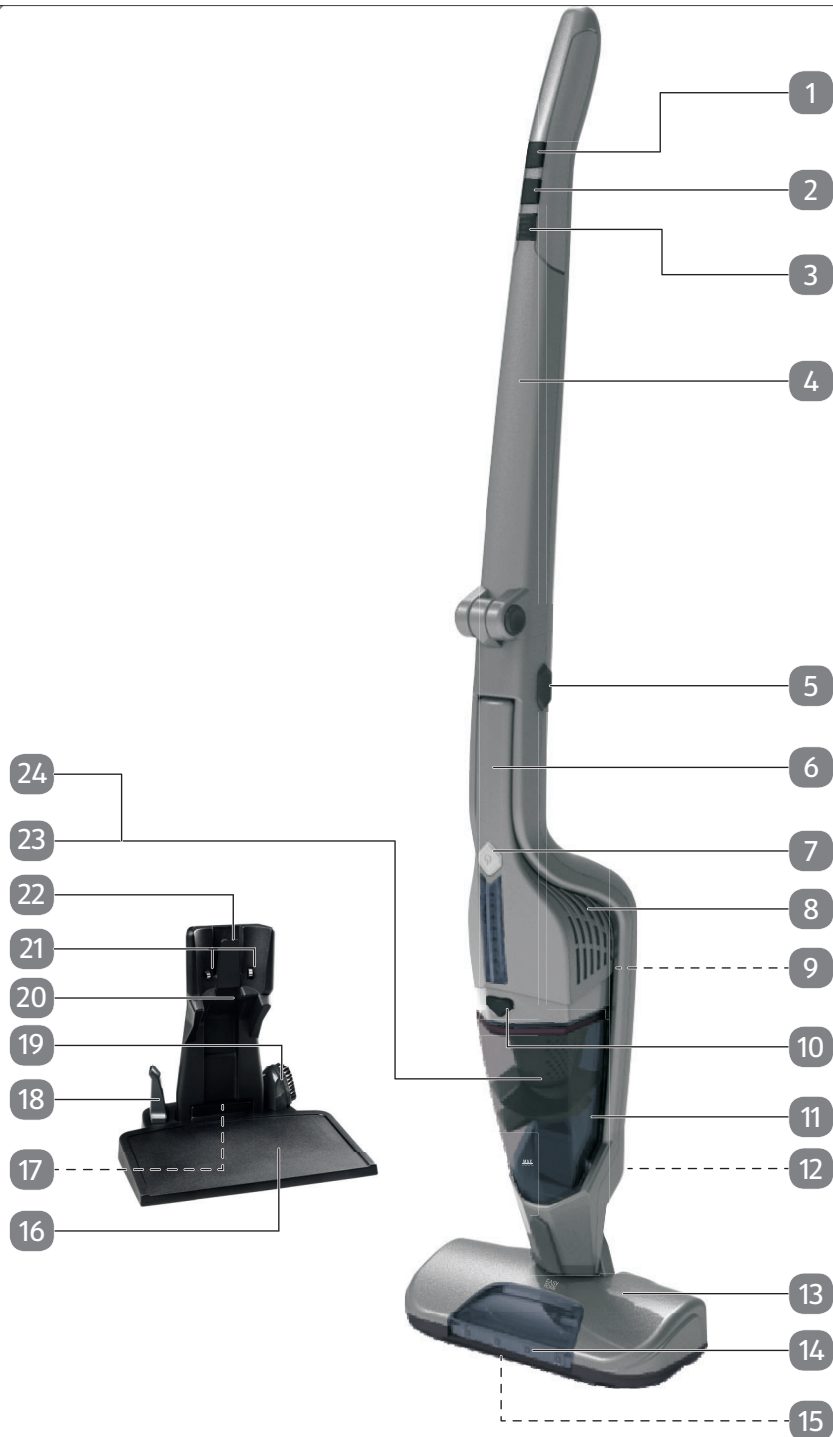

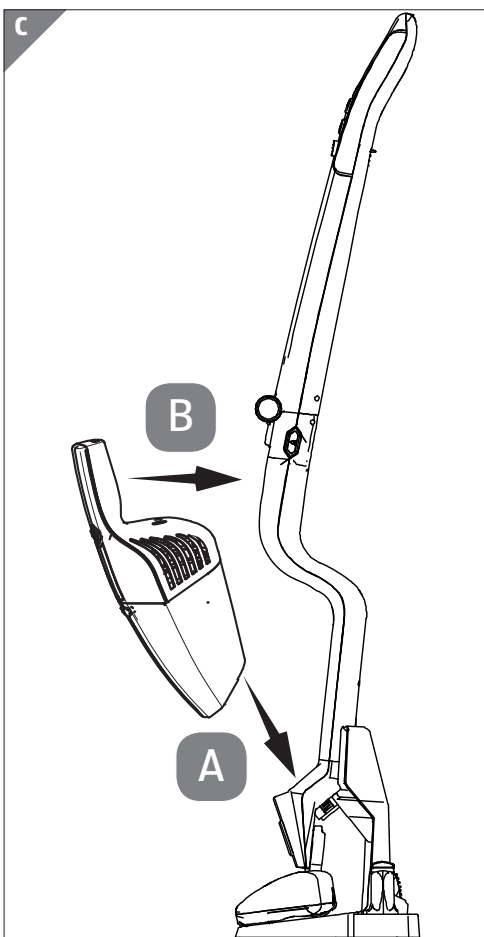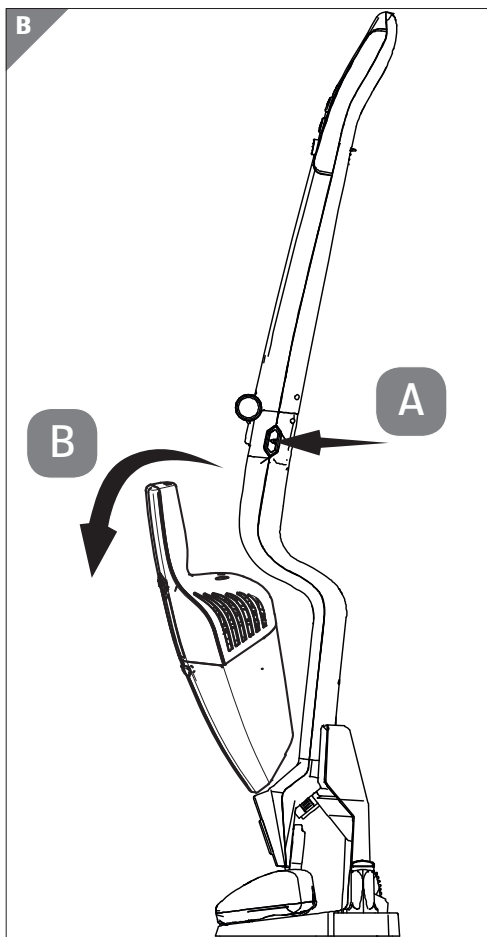

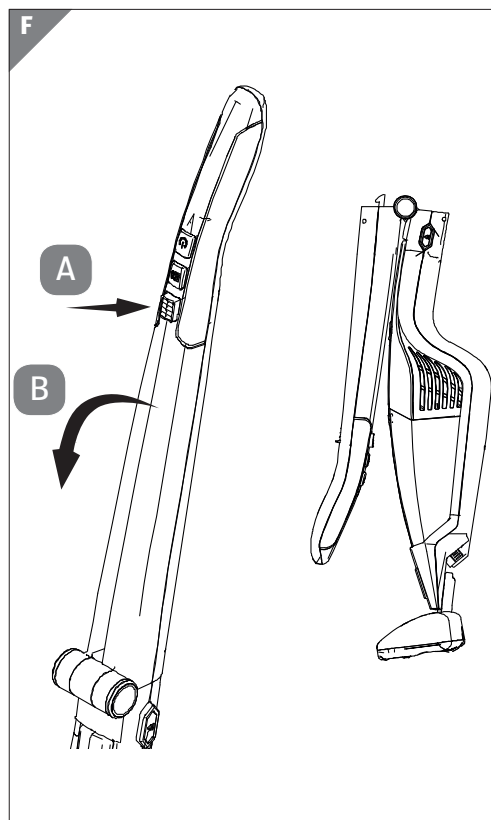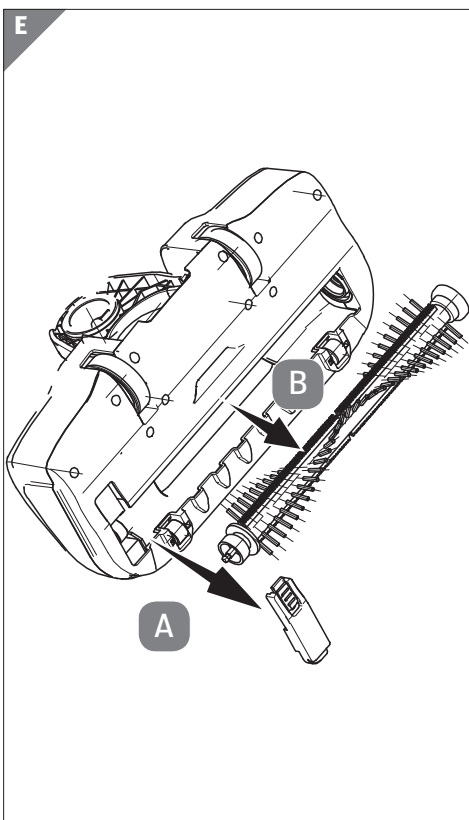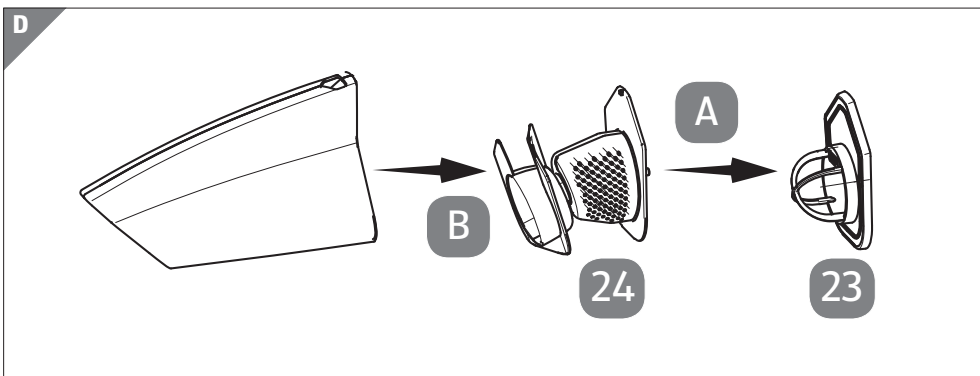

Device parts

- | | | | |
|----|---|----|--|
| 1 | On/Off switch for the floor vacuum cleaner | 17 | Power adapter connection socket (not shown, located on the bottom of the base) |
| 2 | ECO button (for reducing or increasing the suction power) | 18 | Crevice tool |
| 3 | Handle unlocking mechanism | 19 | Upholstery brush |
| 4 | Floor Vacuum Cleaner | 20 | Holder for charging station including power adapter connection |
| 5 | Unlocking mechanism for handheld vacuum cleaner | 21 | Latching spring of charging station |
| 6 | Handheld vacuum cleaner | 22 | Charging contacts |
| 7 | On/Off switch for handheld vacuum cleaner with charge indicator and operating LED | 23 | Dust filter |
| 8 | Ventilation slots | 24 | Coarse filter |
| 9 | Charging contacts for handheld vacuum cleaner (on the rear) | | |
| 10 | Unlock button for dust container | | |
| 11 | Dust container with dust and coarse filter | | |
| 12 | Locking groove for charging station | | |
| 13 | Floor tool with cleaning brush | | |
| 14 | LED light | | |
| 15 | Locking bar for cleaning brush (on the bottom of the floor tool) | | |
| 16 | Base of charging station | | |

About these operating instructions



Thank you for choosing our product. We hope you enjoy using it.

Read the safety instructions carefully before using the appliance for the first time. Note the warnings on the appliance and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the appliance or give it away, please ensure that you also pass on these operating instructions. They are an essential component of the product.

Explanation of symbols

If a block of text is marked with one of the warning symbols listed below, avoid the hazard described in that text to prevent the potential consequences described there from occurring.



DANGER!

This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



WARNING!

This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



CAUTION!

This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE!

This signal word warns of possible damage to property.




This symbol gives you useful additional information on assembly or operation.



The Australian Regulatory Compliance Mark (RCM) is a single compliance mark used by suppliers after establishing compliance with all applicable regulations, including EMC, telecommunications, radio communications, electromagnetic radiation (EMR) and electrical safety.

Protection class II

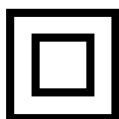

Electrical appliances in protection class II are electrical appliances that permanently have double and/or reinforced insulation and do not have any connection options for a protective earth. The housing of an electrical appliance in protection class II that is enclosed in insulated material can partially or fully act as the additional or reinforced insulation.

Protection class III



Electrical appliances in protection class III are electrical appliances built for operation with safety extra-low voltage that have neither internal nor external electricity circuits which work with a different voltage other than safety extra-low voltage. The maximum rated voltage for the safety extra-low voltage between the conductors and between the conductors and the earth is 42 V. In the case of three-phase alternating current, the maximum rated voltage between the conductors and the neutral conductor is 24 V. The maximum off-load voltage must not exceed 50 V. The safety extra-low voltage may only be supplied via a safety transformer or a transformer with separate windings.



Indoor use

Appliances with this symbol are only suitable for indoor use.

Fig. A



Fig. B



Polarity symbols


On appliances with barrel connectors, these symbols indicate the polarity of the plug. There are two variants for the polarity: either the inner contact is positive and the outer contact is negative (Fig. A) or the inner contact is negative and the outer contact is positive (Fig. B).



Please follow the guidelines in the operating instructions.




Only use the power adapter supplied.

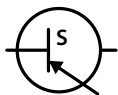

Switched-mode power supply (electrical)

A switched-mode power supply converts an unstable input voltage into a constant output voltage.

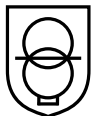

Short-circuit-proof transformer

A transformer where the temperature does not exceed established limit values when overloaded or short-circuited and which continues to meet all of the requirements of this standard once the overload or short circuit has been removed.

Proper use

The vacuum cleaner is used for vacuuming up dry dirt such as dust, crumbs or fluff from hard floors, carpets and upholstery indoors or in motor vehicles.

It is not suitable for vacuuming up liquids.

This appliance is intended to be used in private households.

The appliance is not suitable for commercial or industrial use.

Please note that we shall not be liable in case of improper use:

- Do not modify the appliance without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Follow all the instructions in these directions for use, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the product.

Safety information

- Keep the appliance and its accessories out of the reach of children.
- This appliance can be used by children over 8 years of age and by people with reduced physical, sensory or mental capacity or with a lack of experience and/or knowledge but only under proper supervision or if they have been told how to use the appliance safely and understand the risks involved if they use it improperly.
- Children must not be allowed to play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.
- Do not allow children less than 8 years of age near the appliance and its power cord.



DANGER!

Risk of choking and suffocation!

Risk of choking and suffocation through swallowing or inhaling small parts or plastic wrap.

- Keep the plastic packaging away from children.

Safe operation



DANGER!

Risk of electric shock!

Live parts. There is a risk of electric shock/short circuit.

- Use the power adapter provided to charge the vacuum cleaner.
- Use the power adapter only for charging the vacuum cleaner and not other appliances or batteries.
- The appliance must not be connected to the power adapter during operation.

-
- Only connect the appliance to a properly installed power point. The supply voltage must match the technical specifications for the appliance.
 - The power point must be easily accessible so that you can unplug the appliance from the power quickly if necessary.
 - Never use the cord to pull the power plug out of the socket.
 - Do not use an extension cord.
 - The power adapter may only be used in dry rooms.
 - Only use the vacuum cleaner in closed rooms and never expose the appliance to dripping or splashing water.
 - Do not hold the appliance with wet hands while charging the appliance.
 - Check the appliance, power adapter and power cord for damage before using for the first time and after each use.
 - Do not use the appliance, power adapter or power cord if these show signs of damage.
 - Switch off the appliance before cleaning, pull the power adapter out of the power point and the appliance plug out of the charging station, if these are plugged in.
 - Never immerse the vacuum cleaner in water for cleaning.
 - Contact Medion Service immediately if the appliance has been damaged during transport.
 - Do not, under any circumstances, make any unauthorised modifications to the appliance or try to open a component and/or repair it yourself.
 - A damaged power cord cannot be replaced. If the cord or power adapter are damaged, the power adapter must be disposed of and replaced by a power adapter of the same type.
 - Make sure the power cord does not come into contact with hot appliance parts or other heat sources.



WARNING!

Risk of explosion!

There is a risk of fire or explosion if flammable liquids or certain solids are vacuumed up.

- Do not use the appliance near highly flammable materials. Do not vacuum up sharp objects or highly flammable objects or liquids such as matches or hot ash.
- Never vacuum up toner dust (laser printers, copiers).



CAUTION!

Harm to health!

Inhaling dust when emptying the dust container can cause harm to health or allergic reactions.

- Empty the dust container in the open air directly into a waste container.
- Empty the dust container regularly.
- Clean the dust filter regularly.



CAUTION!

Risk of injury!

Accidentally activating the brush roller can lead to crushing.

- Remove the handheld vacuum cleaner from the floor vacuum cleaner before cleaning the brush roller.

**CAUTION!****Risk of injury/Risk of damage to the appliance!**

There is a risk of injury or possible damage to the appliance if it is handled improperly.

- Keep hair and items of clothing away from the suction opening.
- Only use the vacuum cleaner with the filters and dust container fitted.
- Do not cover the suction and exhaust openings to prevent the appliance from overheating.
- Always switch off the vacuum cleaner before changing the accessories, emptying the dust container or cleaning the filters.
- Never use the appliance without filter elements.
- Do not store the appliance near heat sources such as ovens, heaters, etc.
- Take particular care when cleaning stairs to avoid a fall.
- Do not vacuum up chemical products, plaster, stone dust, cement or similar.
- Do not expose the appliance to any extreme conditions. The following should be avoided:
 - high humidity or moisture,
 - extremely high or low temperatures,
 - direct sunlight,
 - open fire.

Use of rechargeable batteries

The appliance contains a lithium ion battery.



WARNING!

Risk of explosion!

Batteries can explode if they are exposed to extreme heat.

- Do not throw the battery into a fire.
- Never expose the battery to excessive heat such as sunlight, fire, strong artificial light or similar.

NOTICE!

Risk of damage to the battery.

Improper use of the battery can lead to complete destruction of the battery.

- Avoid strong impacts and vibrations.
- Charge the battery regularly and as fully as possible. Do not leave the battery discharged for a longer period.
- Contact Service if the appliance can no longer be switched on despite the battery having been charged (operating light is blue).
- Use the power adapter provided to charge the vacuum cleaner.
- Do not use chargers that are damaged in any way.
- Keep any fluid that leaks out of a battery away from your eyes or skin. If battery fluid makes contact with eyes or skin, rinse the corresponding area with plenty of clear water and immediately seek medical advice.
- Do not store the vacuum cleaner and charging station in hot, cold, damp or dirty environments. Extreme environmental conditions will impair the charging capacity of the battery.
- Do not charge the battery for a longer time if the vacuum cleaner is not used.

- After a longer period, you might have to charge and discharge the battery several times to achieve full capacity.
- Dispose of used batteries in an environmentally friendly manner (see Disposal section).

Package contents



DANGER!

Risk of suffocation!!

Plastic film can be swallowed or used improperly. Therefore, there is a risk of suffocation!

- Keep packaging material such as plastic film or plastic bags away from children.
 - Remove the product from the packaging and remove all packaging material.
 - Please check your purchase to ensure that all items are included. If anything is missing, please contact us within 14 days of purchase.

The product you have purchased includes:

- Floor vacuum cleaner MD 18418 with handheld vacuum cleaner MD 18418 H
- Crevice tool
- Upholstery tool
- Power adapter
- Charging station (two-part)
- Operating instructions including guarantee documents

Preparing the appliance

- Remove all packaging material and protective stickers from the appliance and accessories, especially from the contacts on the rear of the handheld vacuum cleaner.
- Place the holder **20** in the base **16** until you hear it latch into place.

Charging the battery

You can charge your floor vacuum cleaner with the power adapter and charging station provided.

- Switch the floor vacuum cleaner off before charging it.



To charge the floor vacuum cleaner, the handheld vacuum cleaner **6** must be latched into the housing of the floor vacuum cleaner.


- Connect the power adapter to the charging station **16** by plugging the hollow plug into the connecting socket **17** on the bottom of the charging station.

NOTICE!

Risk of damage!

Improperly routing the cord can lead to cord breaks and defects in the power adapter.

- Guide the cord through the cord duct on the bottom of the charging station and then to the recess on the rear and then out of the base.
- Place the floor vacuum cleaner **4** with the handheld vacuum cleaner in the charging station. Make sure the floor vacuum cleaner is upright and that the latching groove **12** engages in the latching spring **21** of the charging station.
- Connect the power adapter to the socket.
The charge indicator lights red. The charge indicator lights blue as soon as the battery is fully charged.
- Once fully charged, pull the plug of the power supply unit out of the socket again and remove the jack plug from the charging station.

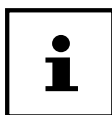

Charge the battery for at least 8 hours before using the floor vacuum cleaner for the first time.

Always charge the battery if the suction power declines significantly.

Neither the floor vacuum cleaner nor the handheld part can be operated during charging

Using the handheld vacuum cleaner MD 18418 H

- To detach the handheld vacuum cleaner **6** from the floor vacuum cleaner **4**, press the unlock buttons **5** (Step A) and lift the handheld vacuum cleaner out of the housing (Step B). Make sure the handheld vacuum cleaner does not fall to the ground. (**Fig. B**)
- Make sure the coarse filter **24** and dust filter **23** is fitted snugly in the dust container **11** and the dust container fits firmly on the motor block. You can find more information on assembly/disassembly in section "Cleaning the dust container" on page 18.
- Fit the appropriate vacuum attachment:
 - Crevice tool **18** for vacuuming areas that are difficult to reach
 - Upholstery brush **19** for cleaning delicate surfaces
- Switch on the handheld vacuum cleaner by pressing the on/off switch **7**. The operating LED lights blue.
- Pressing the on/off switch again switches off the handheld vacuum cleaner.

Using the floor vacuum cleaner

Assembling the floor vacuum cleaner

- Place the handheld vacuum cleaner **6** in the floor vacuum cleaner by first inserting it with the suction opening in the lower part of the housing (Step A) and then pressing it to the rear into the housing, until the handheld vacuum cleaner audibly latches into place (Step B). (**Fig. C**)

Using the floor vacuum cleaner

- Take the vacuum cleaner out of the charging station by positioning it with a slight forward slope and pulling it out upward. Hold the base with the foot.

Cleaning and care

- Switch on the floor vacuum cleaner by pressing the on/off switch **1** on the handle. The operating LED in the on/off switch for the handheld vacuum cleaner **7** lights blue.
The floor vacuum cleaner starts in economy mode, with reduced suction power and a longer operating time.
- Press the +/- button to change to normal suction mode.
- Pressing the +/- button again takes you back to economy mode.
- Switch off the floor vacuum cleaner by pressing the on/off switch on the handle again.
- Place the floor vacuum cleaner back in the charging station by positioning it with a slight downward slope and inserting it into the charging station.

Cleaning and care



Risk of electric shock!

Live parts. There is a risk of electric shock/short circuit.

- Switch off the appliance each time before cleaning and pull the power adapter out of the socket plus the jack plug out of the charging station.
- Empty the dust container **11** and clean the coarse and dust filter ideally after each use but no later than when the level of the dust container has reached the MAX marking. Cleaning the suction openings when required.
- Do not use solvents, corrosive or gaseous cleaning agents for cleaning the surface of the appliance and its accessories. Wipe the surface with a damp cloth.

Cleaning the dust container

We recommend cleaning after each use to achieve consistent suction power:

The appliance is switched off.

- Take the handheld vacuum cleaner **6** out of the floor vacuum cleaner **4**.
- Press the unlock button **10** on the handheld vacuum cleaner.
- Remove the dust container from the motor base.
- Remove the coarse and dust filter along with the dust container by holding its opening and pulling it out. (**Fig. D**)

- Empty the dust container into a rubbish bin.
- Clean the coarse and dust filter plus dust container regularly under running water. It is not necessary to clean with water each time. Do not put the dust container into a dishwasher!
- Reinsert the filters once the dust container and filters are dry again.
- Place the dust container on the motor base by first placing it on the locking lug under the motor block and then folding shut until the unlock button audibly latches into place.

NOTICE!

Risk of damage!

Improperly assembling the filter and dust container can cause damage to the floor vacuum cleaner.

- Make sure the dust container filters are correctly installed before use.

Cleaning the suction openings of the floor vacuum cleaner

Dirt and dust may accumulate around the suction openings of the floor vacuum cleaner after some time, which may reduce the suction power. To prevent this, the suction openings should be cleaned at regular intervals.

- Switch the appliance off. Remove the handheld vacuum cleaner from the housing.
- Remove dirt and dust from the suction openings of the floor vacuum cleaner, floor tool, suction tube on the floor vacuum cleaner as well as the crevice tool and upholstery brush.

Cleaning the brush and floor tool

You can remove the brush of the floor tool **13** for cleaning:

- Push the locking bar **15** for the cleaning brush toward the front edge of the floor tool and remove the bar. (**Fig. E**)
- Take off the brush, remove coarse fluff and clean the brush under running water.
- After drying, reinsert the brush in the reverse order and secure the locking bar.
- Then reassemble the floor vacuum cleaner as described above.

Storage

Place the appliance back in the charging station after each use so it is always ready for operation.

- If you wish to store the appliance for a longer period (more than four weeks), please charge the appliance fully.
- Disconnect it from the power supply after charging.

You can store the appliance for at least three months. You can also fold the handle forward to save space.

- To do this, press the handle unlocking mechanism **3** (Step A).
- Fold the handle of the floor vacuum cleaner **4** fully forward. (Step B). **(Fig. F)**

Troubleshooting

If the appliance malfunctions, please check first whether you can fix the problem yourself with the help of the following overview.

Never try to repair the appliance yourself. Contact our Service Centre or another suitably qualified workshop if repairs are necessary.

Problem	Remedy
The vacuum cleaner is not working	<ul style="list-style-type: none">- Battery not charged sufficiently
The suction power has become weak	<ul style="list-style-type: none">- Suction tools are blocked. Switch off appliance. Remove blockage.- Dust filter is dirty. Clean dust filter.
The vacuum cleaner makes strange noises during operation	<ul style="list-style-type: none">- Switch the vacuum cleaner off immediately. Suction tool is blocked. Remove blockage.
The charge indicator LED does not light up during charging	<ul style="list-style-type: none">- The protective stickers on the contacts on the rear of the handheld vacuum cleaner have not been removed. Remove stickers.
The charge indicator LED flashes red and the vacuum cleaner is not charging.	<ul style="list-style-type: none">- Please contact our Service Centre.

Disposal



PACKAGING

The product has been packaged to protect it from damage during transport. The packaging is made of materials that can be recycled in an environmentally friendly manner.




APPLIANCE

The appliance is equipped with one integrated rechargeable battery. At the end of its service life, do not dispose of the appliance with normal household waste. If you can no longer use your electrical appliance, dispose of it in accordance with the legal provisions applicable in your country. This involves separating the materials in the appliance for the purpose of recycling and minimising the environmental impact.






Contact your local waste disposal company or your local authority for more information.

Technical specifications


Vacuum cleaner

Model	MD 18418
Power:	90 W
Suction power:	4 kPa (high power level) 3 kPa (low power level)
Input	22 V, 0.5 A
Protection class	III 
Operating volume:	75 dB
Dust capacity:	0.5 L
Dimensions:	26.5 × 111 × 24 cm (W × H × D)
Weight:	approx. 2100 g

  Power adapter

Model:	XZ2200-0500WS
Manufacturer:	Xiamen Xdroid Tech Co.,Ltd.
Input:	100–240 V, ~50–60 Hz, max. 300 mA
Output:	DC 22 V  500 mA  
Protection class	II  

Integrated battery

Model:	18650 2200 mAh 18 V (5ICR19/66)
Type:	18 V  2200 mAh (5 × 3.6 V Li ion cells)
Charging time:	approx. 4.5–5 hours
Operating time:	up to 38 min.



Declaration of Conformity

MEDION AG hereby declares that the 2-in-1 rechargeable vacuum cleaner MD 18418 conforms to all relevant Australian requirements.

Service information

Please contact our Customer Service team if your device ever stops working the way you want or expect it to. There are several ways for you to contact us:

- In our Service Community, you can meet other users, as well as our staff, and you can exchange your experiences and pass on your knowledge there. You will find our Service Community at <http://community.medion.com>.
- Alternatively, use our contact form at www.medion.com/contact.
- You can also contact our Service team via our hotline or by post.

Opening times	Hotline number
Mon – Fri: 8.30 am to 6 pm EST	① 1300 884 987
Service address	
MEDION Australia Pty Ltd. Chatswood, NSW 2067 Australia	



You can download this and many other sets of operating instructions from our service portal at www.medion.com/au/contact.php.

You will also find drivers and other software for a wide range of devices there.

You can also scan the QR code on the side of the screen to download the operating instructions onto your mobile device from the service portal.

Legal Notice

Copyright © 2019

Date: 25.07.2019

Version: V2.2

All rights reserved.

These operating instructions are protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MEDION AG

Am Zehnthof 77

45307 Essen

Germany

Please note that you cannot use the address above for returns. Please always contact our Customer Service team first.



MEDION®

2-IN-1 RECHARGEABLE VACUUM CLEANER



Warranty Details

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 884 987

 www.medion.com.au





MEDION®

2-IN-1 RECHARGEABLE VACUUM CLEANER

Repair and Refurbished Goods or Parts Notice

**REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/
TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION**

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type of use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 884 987 or write to us at:

MEDION Australia Pty Ltd
Chatswood, NSW 2067; Australia
Hotline: 1300 884 987
(Opening hours: Mon - Fri 08:30AM to 06:00PM EST)
Internet www.medion.com.au;
E-mail Support.australia@medion.com

AFTER SALES SUPPORT

1300 884 987

www.medion.com.au



ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

EASY HOME is a registered trademark of ALDI Stores

DISTRIBUTED BY:

ALDI STORES

1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

V2.5

AFTER SALES SUPPORT

97514 



1 300 884 987



www.medion.com.au

MODEL:
MD 18418

11/2019

3

**YEARS
WARRANTY**