

KIDS DIGITAL CAMERA



INSTRUCTION MANUAL

Thank you for purchasing this KIDS' DIGITAL CAMERA. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and longer service life.

Keep this manual in a safe place for future reference.

In the interest of continually improving our products, Ggez reserves the right to update or modify the information contained in this manual.

INDEX

| | |
|--------------------------------------|----|
| Safety precautions | 04 |
| Checking the supplied items | 04 |
| Identifying parts | 05 |
| Inserting a memory card | 06 |
| Resetting the camera | 06 |
| Turning on/off the power | 07 |
| Checking the remaining battery | 07 |
| Setting the date and time | 08 |
| Shooting images | 08 |
| Shooting movies | 09 |
| Recording | 09 |
| Viewing images | 10 |
| Playing games | 10 |
| Learning the various functions | 11 |
| Note on using the camera | 12 |
| Specifications | 12 |
| Warranty | 13 |
| Customer Support | 13 |

SAFETY PRECAUTIONS

Never leave the camera in the places listed below^ no matter if in use or storage:


- Places where temperatures and/or humidity are high or gothrough extreme changes.
- In sandy or dusty environments.
- Near flammable items and/or explosives.
- In any humid places, such as bathrooms or in the rain.

CHECKING THE SUPPLIED ITEMS

The number in parentheses indicates the number of pieces.

- Kids Digital Camera (1)
- 32GB Memory Card (1)
- Memory Card Reader (1)
- Dedicated USB cable (1)
- Wrist Strap (1)
- Instruction Manual (this manual)

IDENTIFYING PARTS

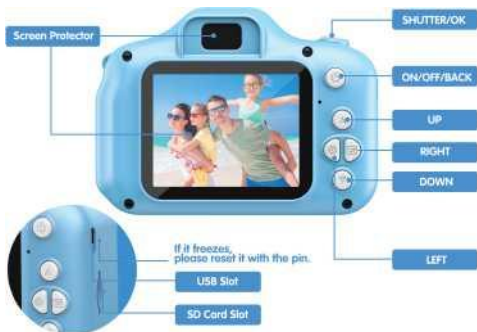

*When viewing images, press the UP button and hold it to delete images. You can delete one image at a time.

INSERTING A MEMORY CARD

Insert the included memory card before turning on the power. To remove the memory card, push the memory card in once.

RESETTING THE CAMERA

Pressing RESET allows you to reset the camera to its initial settings. Press RESET with the included card tray pin or other pointed instruments.

The camera must be reset under the following conditions:

- Prior to using this unit for the first time after installation
- If the unit fails to operate properly
- If strange or incorrect messages appear on the display



TURNING ON/OFF THE POWER

©Turning on the power. Press the ON/OFF button, then hold until the blue indicator is on, and the power will be turned on.

©**Turning** off the power. Press the ON/OFF button, then hold until the blue indicator is off and the power will be turned off.

®Auto Power Off mode. The camera will power off if you leave it idle for 3 minutes.

CHECKING THE REMAINING BATTERY

The remaining charge indicator will appear in the screen's upper left corner after turning on the camera.

Sufficient power remaining

Battery almost fully charged

Battery low

Charge the battery soon, or the camera will turn off
automatically!

When using the micro USB cable to charge the battery the red charging indicator will light up during the charging process.

SETTING THE DATE AND TIME

Set the date and time when using this camera for the first time.

1. The menu list will appear after the power is turned on. Select SETTINGS, then press the OK button.
2. Select DATE INPUT then press the OK button.
3. Make sure that the clock is correctly set, then press the OK button.

SHOOTING IMAGES

1. Select PHOTO, then press the OK button.
2. Hold the kids' camera with your elbows pressed against your body to steady it.
3. Position the subject in the center of the focus frame.
4. Press the SHUTTER button fully down to shoot.
5. The blue indicator flickers once, indicating the photo shooting completes.

SHOOTING MOVIES

1. Select VIDEO, then press the OK button.
2. Hold the kids¹ camera with your elbows pressed against your body to steady it.
3. Press the SHUTTER button to start recording.
4. The red dot on the screen is flickering, which indicates that it is making a recording.
5. Press the SHUTTER button again to stop recording.

RECORDING

1. Select RECORDING, then press the OK button.
2. Turn the microphone toward the original sound source.
3. Actually produce the sound you would like to record.
4. Press the SHUTTER button to start recording.
5. The recording indicator light will flicker on the screen.
6. Press the SHUTTER button again to stop recording.

VIEWING IMAGES

1. Select **PLAYBACK**, then press the **OK** button.
2. Select an image with the **LEFT** button/**RIGHT** button.

Press the **OK** button to view movies.

3. Recorded images are stored on the memory card. By using a memory card reader, you can view them on a computer,
4. Make sure that you save the image data on the hard disk of a computer.

PLAYING GAMES

1. Select **GAME**, then press the **OK** button,
2. Select a game with the **LEFT** button/**RIGHT** button.
Press the **OK** button to play games.
3. There are five puzzle games available for you to play and enjoy. These include Gluttonous Snake, Push The Box, Game of Maze, Airplane Shooter, and Guess The Number,

LEARNING THE VARIOUS FUNCTIONS

- ① When shooting images, press the UP button/DOWN button to choose from different filter effects and photo frames.
- ② Tabs categorize items in SETTINGS, so select a tab first and move to the desired item to quickly set it.
- ③ Select PHOTO SIZE in SETTINGS, then press the OK button to choose image sizes among 1.3M, 2M, 3M, 5M, 8M, and 12M,
- ④ Select DELAY CAPTURE in SETTINGS, then press the OK button to set the Self Timer so that you can delay the shutter release for 2s, 5s, or 10s,
- ⑤ Select BURST in SETTINGS, then press the OK button to switch on/off the burst mode.
- ⑥ Select LANGUAGE in SETTINGS, then press the OK button to change the system language.
- ⑦ Select Volume in SETTINGS, then press the OK button to adjust the volume.

NOTE ON USING THE CAMERA

- Avoid rough handling, modifying, disassembling, or impact such as hammering, dropping, or stepping on the product. Be particularly careful of the lens.
- The camera is neither dust-proof nor splash-proof, nor water-proof.
- If water enters inside the camera, a malfunction may occur,
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.

SPECIFICATIONS

Pixels -12 mega pixels

Image Sensor-CMOS

Display Screen - 2.0-inch IPS screen

Camera Lens - Fixed lens

Viewing Angle -100 degrees

Maximum Storage - 32GB

asd543919793@outlook.com

Image Format - JPEG

Video Format - AVI

Image Resolution - VGA, L3M, 2M, 3M, 5M, 8M, 12M

SelfTimer-10s/5s/2s/0FF

Audio - Built-in microphone and speaker

WARRANTY

GQEZ warrants that this product is free from defective material and artistry. GQEZ further warrants that if the product fails to operate properly within the specified warranty period, and the failure is due to improper artistry or defective material, GQEZ will repair or repair or replace the product at its option.

CUSTOMER SUPPORT

For support or warranty claims, contact us at Amazon or the email address below. Please include your order number and product name.

asd543919793@outlook.com