



HARMONIC TREM

CONTROLS

VOLUME - Controls the overall volume of the pedal. Left is less, right is more. Tons of volume on tap.

RATE - Controls the rate of the tremolo. Left is slower, right is faster.

DEPTH - Controls the depth of the tremolo. Left is less, right is more.

TYPE TOGGLE - Switch down is a harmonic tremolo, switch up is a standard tremolo.

JACKS

INPUT - 1/4" jack on the right side of the pedal.

OUTPUT - 1/4" jack on the left side of the pedal.

POWER - Requires 9V DC negative center power and consumes 70mA. Do not use more than 9V DC. You will void your warranty.