



KNIFE SHARPENER

GB

KNIFE SHARPENER

Instructions for use

DK

KNIVSLIBER

Brugervejledning

FR BE

AIGUISEUR

Notice d'utilisation

NL BE

MESSENSLIJPPAPPARAAT

Gebruiksaanwijzing


DE AT CH

MESSERSCHÄRFER

Gebruuchsanweisung

IAN 460055_2401

GB DK
FR BE NL
DE AT CH

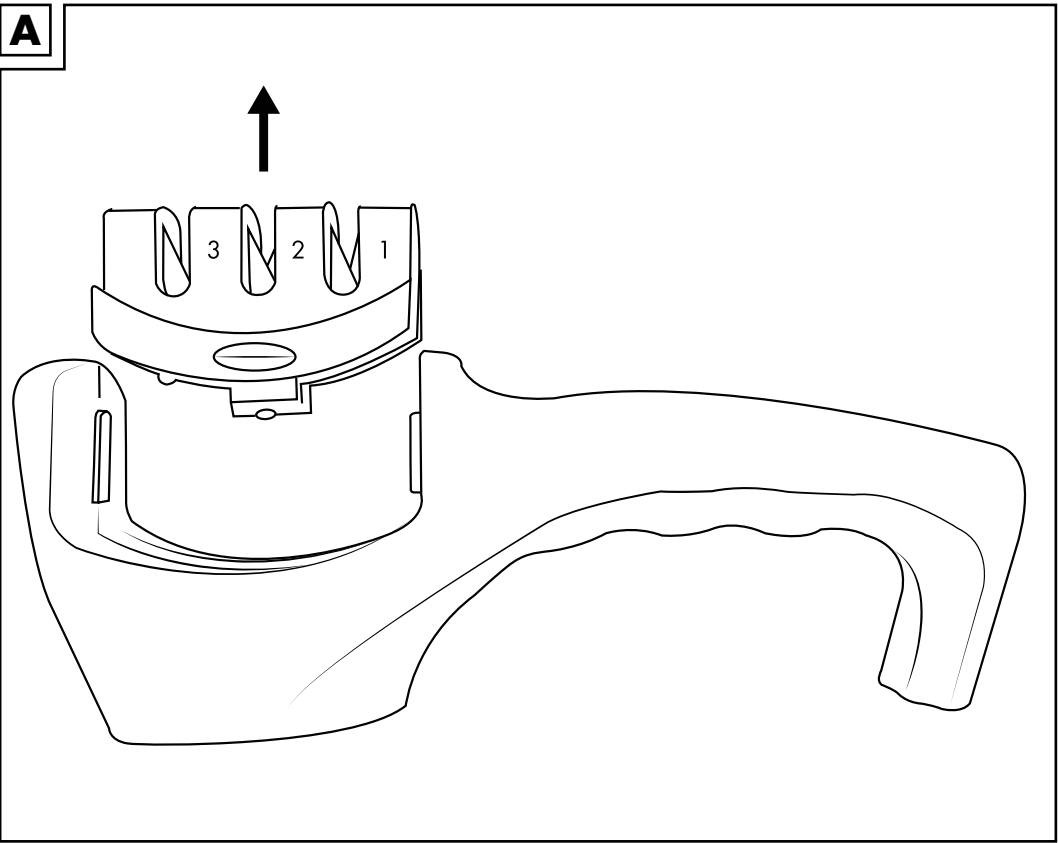

Congratulations!
You have chosen to purchase a high-quality product.
Familiarise yourself with the product before using it for the first time.



Read the following instructions for use carefully.

Use the product only as described and only for the given areas of application. Store these instructions for use carefully. When passing the product on to third parties, please also hand over all accompanying documents.

Package contents

- 1 x knife sharpener
- 1 x instructions for use

Technical data

Date of manufacture (month/year):
06/2024

Intended use

This product is only intended for private use and not for commercial use. The product is suitable for left- and right-handed users. The product is not dishwasher safe.



⚠ Safety information

Important: read these instructions for use carefully and keep them in a safe place!

⚠ Risk of injury!

- Never leave children unattended with the product. Keep away from children. The product is not a toy.
- Check the product for damage or wear before each use. The product may only be used if it is in perfect condition!

Use

The product has three sharpening levels:

- Level 1: preparing the blade with high-grade diamond rods.
- Level 2: sharpening the knife with tempered steel.
- Level 3: polishing and reshaping the blade with ceramic rods.

Proceed as follows to sharpen the knife:

1. Place the product on a stable surface.
2. Use all three levels in succession for optimal sharpening.
3. Applying light pressure from above, pull the knife through the slots from the handle to the tip.
4. Repeat the process 3–5 times per level, or until you are satisfied with the result.

Important:

- Never move the knife back and forth.
- Do not use the product for serrated knives or scissors.
- After sharpening, clean the blades with a soft, damp cloth and then dry the blade.
- Ceramic blades can turn black after sharpening.

Storage, cleaning

When not in use, always store the product clean and dry at room temperature. Clean the product carefully before using it for the first time. In order to be able to clean the sharpening head under running water, press the depressions on the sides together and pull it up (Fig. A).
IMPORTANT! Never clean the product with harsh cleaning agents.

Disposal

Dispose of the product and packaging materials in accordance with current local regulations. Store the packaging materials (foil bags, for example) out of the reach of children. For further information about disposal of the product no longer needed, contact your local council. Dispose of the product and the packaging in an environmentally friendly manner.



The Recycling Code distinguishes different materials to be returned for recycling. The Code consists of the recycling symbol for the recycling process and a number that identifies the material.

Notes on the guarantee and service handling

The product was produced with great care and under continuous quality control. DELTA-SPORT HANDELSKONTOR GmbH gives private end customers a three-year guarantee on this product from the date of purchase (guarantee period) in accordance with the following provisions. The guarantee is only valid for material and manufacturing defects. The guarantee does not cover parts that are subject to normal wear and tear and that are thus considered wear parts (e.g. batteries) and it does not cover fragile parts such as switches or parts that are made of glass.

Claims under this guarantee are excluded if the product has been used incorrectly, improperly, or contrary to the intended purpose, or if the provisions in the instructions for use were not observed, unless the end customer proves that a material or manufacturing defect exists that was not caused by one of the aforementioned circumstances.

Claims under the guarantee can only be made within the guarantee period by presenting the original sales receipt. Please therefore keep the original sales receipt. The guarantee period is not extended by any repairs carried out under the guarantee, under statutory guarantees, or as a gesture of goodwill. This also applies to replaced and repaired parts. If you wish to make a claim please first contact the service hotline mentioned below or contact us by e-mail. If there is a guarantee case, then the product will be repaired or replaced free of charge to you or the purchase price will be refunded, depending on our choice. There are no further rights from the guarantee.

Your legal rights, in particular guarantee claims against the respective seller, are not limited by this guarantee.

IAN: 460055_2401

GB Service Great Britain
Tel.: 0800 404 7657
E-Mail: deltasport@lidl.co.uk

Hjertelig tillykke!

Du har valgt at købe et kvalitetsprodukt. Lær produktet at kende, inden du bruger det første gang.



Det gør du ved at læse nedenstående brugervejledning omhyggeligt.

Brug kun produktet som beskrevet og til de angivne anvendelsesområder. Opbevar denne brugervejledning et sikkert sted. Udlever også alle dokumenter, hvis produktet videregives til en tredje part.

Leveringsomfang

- 1 x knivsliber
- 1 x brugervejledning

Tekniske data

Fremstillingsdato (måned/år):
06/2024

Bestemmelsesmæssig brug

Artiklen er kun beregnet til privat og ikke til erhvervs-mæssig brug. Artiklen egner sig til venstre- og højrehåndede. Artiklen tåler ikke opvaskemaskine.



⚠ Sikkerhedsanvisninger

Vigtigt: Læs denne brugervejledning omhyggeligt, og opbevar den til senere brug!

⚠ Fare for kvæstelser!

- Lad aldrig børn være alene med artiklen. Opbevar udlægning for børn. Artiklen er ikke legetøj.
- Kontroller artiklen for skader og slitage inden hver brug. Artiklen må kun anvendes i fejlfri stand!

Brug

Artiklen har tre skarphedstrin:

- Trin 1: klargøring af knivbladet med diamanstave af høj kvalitet.
- Trin 2: slibning af kniven med hærdet stål.
- Trin 3: polering og efterslibning af knivbladet med keramikstave.

Gå frem som følger for at slibe:

1. Placer artiklen på et stabilt underlag.
2. Brug alle tre trin efter hinanden for at opnå en optimal slibning.

3. Træk kniven igennem kærven fra skæftet til spidsen med et let tryk.
4. Gentag fremgangsmåden 3-5 gange per trin, eller til du er tilfreds med resultatet.

Vigtigt:

- Træk aldrig kniven frem og tilbage.
- Må ikke anvendes til savtakke knive og sakse.
- Rengør knivbladet med en blød, fugtig klud efter slibningen, og tør knivbladet af.
- Keramiske knivblade kan få en sort misfarvning efter slibningen.

Opbevaring, rengøring

Opbevar altid artiklen tør og ren ved stuetemperatur, når den ikke er i brug. Rengør artiklen grundigt inden første brug. Tryk sammen om fordybningerne i siden, og træk slibehovedet af for at kunne rengøre det under rindende vand (fig. A).
VIGTIGT! Må aldrig rengøres med skrappe rengøringsmidler.

Henvisninger vedr. bortskaffelse



Bortskaf artiklen og emballagematerialerne i henhold til aktuelle, lokale forskrifter.
Opbevar emballagematerialer (som f.eks. folieposer) utilgængeligt for børn. Yderligere informationer om bortskaffelse af den udjente artikel kan indhentes hos kommunen. Bortskaf artiklen og emballagen på en miljøvenlig måde.



Genbrugskoden tjener til identifikation af forskellige materialer med hensyn til tilbageførsel til genanvendelses kredsløbet (recycling). Koden består af et genbrugssymbol, som afspejler genanvendelses kredsløbet, og et tal, der identificerer materialet.

Oplysninger om garanti og servicehåndtering

Varen er fremstillet med største omhu og under løbende kontrol. DELTA-SPORT HANDELSKONTOR GmbH yder private slutkunder tre års garanti på varen fra købsdato (Garantifrist) i henhold til følgende bestemmelser. Garantien gælder kun for materiale- og fremstillingsfejl. Garantien dækker ikke dele, der udsættes for normal slitage og derfor må betragtes som sliddele (f.eks. batterier) eller skrøbelige dele såsom afbrydere eller dele, der er fremstillet af glas.

IAN 460055_2401



