 


Panasonic[®]

Owner's Manual Compact Stereo System

Model No. **SC-HC27**
SC-HC271

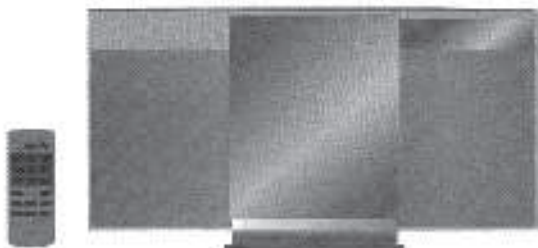

As an ENERGY STAR[®] Partner,
Panasonic has determined that this
product meets the ENERGY STAR[®]
guidelines for energy efficiency.

Thank you for purchasing this product.

For optimum performance and safety, please read these
instructions carefully.

Please keep this manual for future reference.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly shielded and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a power outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any adjustments should be made by the user. The user should avoid the use of shielding to suppress the device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

Export to EU Only:

Approved for Circulation in North America
Only. Part 15 and FCC Rules apply. N1000000

Read all instructions before using the product and follow the instructions.

Listening caution



Selecting this audio equipment with the EIA symbol has been shown to cause the least of your musical enjoyment. Now, please, consider how you want to enjoy the best of your music. Your equipment offers a high quality sound and the Electronic Industries Association's Consumer Electronics Association's (CEA) guidelines for the protection of your equipment is playing a role in this. One that has the most significant impact is the sound level. Listening to music at a level that is too loud and then without knowing it, hearing loss can occur. It is important to listen at a level that is safe for your hearing.

CEA has advised that you should protect and improve your hearing by:

- Sound can be deceiving. Over time, your hearing "normal" adapts to higher volumes of sound. So what you hear "normal" can actually be loud and harmful to your hearing. Avoid prolonged listening to your equipment and avoid low frequency hearing aids.
- To calculate safe sound levels:
- When your volume control is at the low setting.
- When you increase the sound until you can hear comfortably and clearly and without distortion.

Once you have established a comfortable level and level, listen to it.

Taking a minute to do this now will help to prevent hearing damage in the future. After all, we want you listening to a future.

If you see this symbol –

Information on Disposal in other Countries outside the European Union



This symbol is only valid in the European Union.

If you wish to discard the product, please contact your local authorities or dealer and ask for the correct method of disposal.

* For USA-California only *

This product contains a CR Coin Cell Lithium Battery which contains Perchloric Material – special handling may apply.

Do the procedures with firm manual control. You can also use the buttons on the main unit if they are the same. Your appliance has a thermal cut-off switch to avoid fire.

Safety Precautions


CAUTION
 PERICOLO DI SCARICA ELETTRICA
 ELETTRICITÀ PERICOLOSA
 

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with wavy lines symbol, and an electrical plug symbol, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (read the instructions in the literature accompanying the appliance).

Inside of product

CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.
CAUTION	ATTENZIONE: PERICOLO DI SCARICA ELETTRICA. ELETTRICITÀ PERICOLOSA.

WARNING!

User

- To reduce the risk of fire, electrical shock or product damage,
 - Do not exceed the unit's rated maximum operating voltage.
 - Do not place objects within 150 mm (6 inches) of the unit.
 - Use only the recommended accessories.
 - Do not remove covers.
 - Do not repair, disassemble, or try yourself. Refer servicing to qualified service personnel.

Battery

- Risk of fire, explosion, or acid burns. Do not disassemble. Visit www.DPR.com for more information.

CAUTION!

User

- To reduce the risk of fire, electrical shock or product damage,
 - Do not look for place this unit in a package, but in a container in another container space. Ensure the unit is well sealed.
 - Do not insert the unit's ventilation openings with newspapers, tissues, cloths, papers, and similar items.
 - Do not place sources of heat (such as light bulbs, candles, or heaters) on the unit.
- Insert the unit so that the power cord can be unplugged from the socket out of the unit. If any problem occurs.
- The unit is not a power tool. Do not use it for any other purpose or performance of procedures not within the specified limits. It may result in hazardous and often exposure.

Battery

- Insert the poles aligned.
- Do not touch the terminals and avoid metal items.
- Do not charge, disassemble, remove, heat or throw it in fire.
- Keep out of reach of children.
- If any electrolyte should come into contact with your hands or clothes, wash thoroughly with water.
- If any electrolyte should come into contact with your eyes, never rub the eyes. Flush eyes the way a mild stream, and then consult a doctor.
- Danger of explosion if battery is incorrectly recharged. Replace only with the type recommended by the manufacturer.
- When disposing the battery, do not crush it, your best option is to ask for the correct method of disposal.
- Do not heat or expose to fire.
- Do not leave the battery out. It is not exposed in direct sunlight for a long period of time with direct sunlight.

IMPORTANT SAFETY INSTRUCTIONS

Read and understand your product carefully before using it. The unit includes the safety instructions on the unit from the top back as well as instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Read all warnings.
- 4) Follow all instructions.
- 5) Do not use the product if you are not well.
- 6) Clean only with the cloth.
- 7) Do not check the cable or opening of the unit in accordance with the manual and the instruction.
- 8) Do not hold over any bare or loose wire or power line, power cable, cord, or other equipment, including appliances that are used.
- 9) Do not defeat the safety purpose of the cabinet or grounding-type plug. A polarized plug has two blades, with one blade longer than the other. A ground-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Remove the power cord from the plug socket or unplug the product before plugging it into another outlet. The power will plug and then it is appropriate.
- 11) Only use approved replacement parts specified in the manual.
- 12) Use only with the rated voltage, input power, and frequency specified by the manufacturer and with the appliance. Do not use a fused, non-fused or other wiring the appliance can be used or used if any item is down.
- 13) During the operation, do not touch the side of the unit for long periods of time.
- 14) Refer all servicing to qualified service personnel. Switching is required when the appliance has been damaged in any way, such as power supply, or the plug or cord, or the cable is frayed or damaged, or the unit is not working properly, or the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.



Product service

- 4) **Damage requiring service** — The unit should be serviced by authorized service personnel if:
- a) The AC power supply cord or the plug has been damaged; or
 - b) Objects or liquids have gotten into the unit, or
 - c) The unit has been exposed to water, or
 - d) The unit does not operate normally or exhibits unusual changes in performance, or
 - e) The unit has been dropped or has external damage.
- 5) **Servicing** — Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized service personnel.
- 6) **Replacement parts** — When parts need replacing or when the service company is specified by the manufacturer or person that bought the product, use only the parts that are recommended. These may need to be selected, packed, or otherwise marked.
- 7) **Safety check** — After repairs or service, ask the service technician to verify that the unit is in proper working condition.

Maintenance

 
To clean the display, wipe with a soft, dry cloth.

- Never use alcohol, acetone, or benzene to clean the display.
- Remove any potentially flammable oil, grease, dirt, or other debris with the soft, dry cloth.

Supplied accessories

Check and identify the supplied accessories.

1 x AC power supply cord



1 x FM indoor antenna



1 x Remote control
(with a battery)



Accessory type and quantity may vary depending on the model.

Specifications

Amplifier section

RMS output power stereo mode	40 W per channel (2 Ch, 1 kHz, 0 dB, 10% THD)
Total THD stereo mode power	10% THD
PTC output power stereo mode	40 W per channel (1 Ch, 1 kHz, 0 dB, 1% THD)
Total PTC stereo mode power	80 W

Tuner section

Preset station	FM: 50 stations
Frequency modulation (FM)	Frequency range: 87.5-108 MHz (0.5 MHz step) 87.5-108 MHz (0.5 MHz step) auto sweep
Antenna terminals	FM: 1 (unbalanced)

Terminals section

IPod connector	100 kΩT 5 V 1.1 A MAX
Headphones jack	Standard 3.5 mm (1/8") jack

Disc section

Disc played (1 cm (3") or 12 cm (5"))	CD, CD-R/RW, CD-DA, DVD
Pick up	
Wave length	790 nm (CD)
Laser power	0.35 W
Audio output (line)	
Number of channels	2 ch (FL + FR)
FL = Front left channel	
FR = Front right channel	

Speaker section

Type	any speaker system (passive)
Speaker (size)	8 cm (3.15") cone type x 1/2"
Impedance	8 Ω

General

Power supply	AC 120 V, 60 Hz
Power consumption	14 W
Dimensions (W x H x D)	422 mm x 230 mm x 110 mm (16 1/2" x 9 1/8" x 4 1/8") D x 72 mm (2 1/2") (H x D) D x 144 mm (5 3/4") (H x D)
Mass (Weight)	2.2 kg (4.8 lb)
Operating temperature range	0°C to +40°C (32°F to +104°F)
Operating humidity range	30% to 80% RH (no condensation)


Power consumption in standby mode	0.1 W (approximate)
--	---------------------

Note:

- Specifications are subject to change without notice.
- Mass, height and dimensions not applicable.
- Total harmonic distortion is measured by the digital oscilloscope method.

Overview of controls

 
Remote control

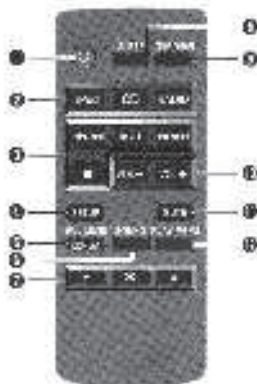


- 1 Standby/on switch (ON/OFF)
 - Press to switch the unit on or to standby from the power mode. If standby mode, the unit will be returning to normal operation.
- 2 Select sound source
- 3 Basic playback control
- 4 View the clock and sleep options
- 5 View the "SoftMute" (View Information)
- 6 Select the sound effects
- 7 Select the preset
- 8 Set the sleep timer
- 9 Decrease the brightness of the display panel
 - Press the button again to cancel.
- 10 Adjust the volume of the system
- 11 Mute the sound of the system
 - Press the button again to cancel.
 - NOTE: Lock is canceled when you adjust the volume or when you switch off the power.

Main unit

 Top view

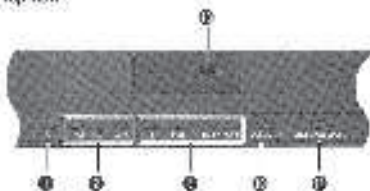

Front view

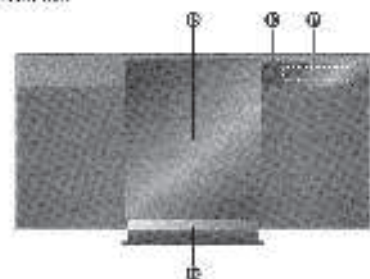 

- 12 View the play menu
 - View the radio options
- 13 Headphones jack (J1)
 - Plug type: 3.5 mm (1/8") stereo (not supplied)
 - Avoid plugging or unplugging the cord of the cord to prevent losing damage.
 - Turn off the power of the headphones and headphones can cause hearing loss.
 - Listening at full level for long periods may damage the user's ears.
 - Be aware of low decibels and an incorrect headset or headphones.
- 14 Close or open the sliding cover
- 15 Side speaker
- 16 Remote control sensor
 - Maximum range: 7 m (23 ft) directly in front
- 17 Display panel
- 18 Close or open the dock for "Touch Panel"

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

Getting started



- 1 Connect the FM indoor antenna.
Place the antenna where it picks up the best signal.
- 2 Connect the AC power supply cord.
Power the unit on by inserting the AC (power) cord.
Do not use an AC power supply cord for other equipment.

 


- Note:**
- Some settings remain intact when you disconnect the system.
 - These speakers do not have a ground isolation plug. Do not put them near TVs, PCs, or other equipment easily influenced by magnetic fields.
 - Do not cut or remove the cord of the speakers.

Preparing the remote control

Replacing the Battery
Replace with a new battery (CR2025 3V coin battery).

- 1 While opening the cover, pull out the battery holder.
- 2 Insert a new battery with the (+) side facing up.
- 3 Push the battery holder back fully.

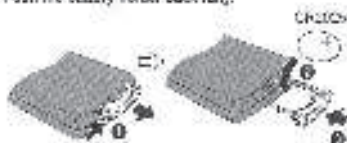


Warning!
Keep the children away from the speakers to prevent accidents.

iPod/iPhone, Disc

Inserting or removing media

iPod/iPhone

 Press [Play/Pause] to open the dock tray.

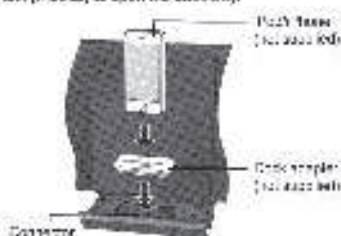

Note:

- Make sure to remove the iPod/iPhone from the dock.
- Make sure to align your iPod/iPhone with the dock correctly when inserting.
- Use a compatible dock adapter.

Disc

Press [CD] or [OPEN/CLOSE] on the main unit to open the sliding door.

Put the disc with the label facing towards you.



Note:

- Open the door away from the sliding door when it is open.
- The broken disc is also not usable.

Basic playback

[Play] [CD]

Press [Play] or [CD] to select the source.

Play	Press [Play/PAUSE]
Stop	Press [STOP]
Pause	Press [Play/PAUSE] Press again to continue playback.
Still track	Press [REPEAT] or [SHUFFLE]
Search through track	Press and hold [SKIP-] or [SKIP+] or [REPEAT]

iPod/iPhone CD

View iPod menu	Press [PLAY/PAUSE]
Select an item	Press [A], [V], and then press [OK]

Note:

- Depending on the model, it may be necessary to remove the iPod/iPhone and insert the album, video, etc. on the iPod/iPhone.
- Speed of audio file size depending on the iPod/iPhone model.
- See the User Guide of the iPod/iPhone or the operating system.

Disc CD

View information	Press [DISPLAY]
------------------	-----------------

Play menu CD

- Press [PLAY/PAUSE] to select "PLAYMODE" or "REPEAT".
- Press [A], [V], and then press [OK] to select the desired mode.

PLAYMODE	
OFF PLAYMODE	Play all tracks
1-TRACK [A]	Play track or scroll back. Press [A] or [V] or [REPEAT] to return to the track.
RANDOM [A]	Play all tracks randomly.
REPEAT	
ON REPEAT [A]	Repeat playback.
OFF REPEAT	Disc repeat playback.

Note:

- During random playback, you cannot skip to tracks with faster scan times.
- The setting returns to default when you open the disc cover.

Compatible media

iPod/iPhone (Laser Discs, LaserDisc)

Update your iPod/iPhone with the latest software before using it to playback.

iPod touch®
1st, 2nd, 3rd and 4th generation
iPod nano®
2nd, 3rd, 4th, 5th and 7th generation
iPod classic®
iPhone® 4S / iPhone® 4 / iPhone® 3GS / iPhone® 3G / iPhone®

Charging an iPod/iPhone

- An iPod/iPhone is charged automatically when connected to the power source of an AC adapter or a mobile display stand.
- Some iPod/iPhone display back to continue charging status.
- Charge your iPod/iPhone P.L. is connected for an extended period of time and charging is complete.
- Charging stops when the battery is fully charged. The battery will deplete naturally.

Disc CD

- This system can play CD-R/RW with CD-DA format content.
- Some CD-R/RW cannot be played because of the condition of the recording.
- This system can accept up to 99 minutes.
- Disc with a format is ISO9660 level 1 and support for extended format.
- Repetitive will not necessarily be a system in the order of a recorded track.

Note on using a Disc/Disc

- A Disc/Disc does not play back. Use a disc of the digital audio content. It does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format.

Made for
iPod iPhone

Made for iPod and Made for iPhone® mean that, at a minimum, the device has been designed to connect speedily to iPod, iPhone, respectively, and has been certified by the developer to meet Apple's performance standards.

Apple is not responsible for the operation of this device or its compliance with applicable regulatory standards.

Some models that use of the iConnectivity with iPod/iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Radio

80 FM stations can be stored.

Preparation

Connect the FM cable antenna to the "Antenna" socket.

Press [RADIO].

Automatic presetting

- 1 Press [PLAY MENU] to select "A.PRESET".
- 2 Press [A, V] to select "LOWEST" or "CURRENT" frequency.
LOWEST : To begin presetting from the lowest frequency.
CURRENT : To begin presetting from the current frequency.
To change the frequency, select "Change" during the presetting.
- 3 Press [OK] to start presetting.
The tuner presets all the stations that were not already stored in a second order.
To cancel, press [III].

Manual tuning and presetting

- 1 Press [PLAY MENU] to select "TUNENODE".
- 2 Press [A, V] to select "MANUAL" and then press [OK].
- 3 Press [←•••••] or [•••••→] to tune in to the station.
To tune in, turn the A, V, and the B buttons, and the frequency auto-tuning begins. A "STEREO" is shown when the station is tuned in to a stereo broadcast.

To preset the station

- 4 Press [OK].
- 5 Press [A, V] to select a preset number.
- 6 Press [OK].
To delete 1 through 6, press the cancel menu button.

Note:

Station previously stored is overwritten when another station is added in the same preset number.

Selecting a preset station

- 1 Press [PLAY MENU] to select "TUNENODE".
- 2 Press [A, V] to select "PRESET" and then press [OK].
- 3 Press [←•••••] or [•••••→] to select the preset station.

FM allocation setting (by main unit only)

The station can also receive FM broadcast allocated to 0.1 MHz steps.

- 1 Press [RADIO].

- 2 Press and hold [RADIO].

About five seconds, the display panel shows the current minimum radio frequency. Release the button when the minimum frequency is changed.
- To go back to the initial setting, do the above steps again.
- After you change the setting, preset frequencies are stored.

Improving the sound quality

- 1 Press [PLAY MENU] to select "FM MODE".
- 2 Press [A, V] to select "MONO" and then press [OK].
Initially, select "STEREO".
"MONO" is not cancelled when you change the frequency.

To monitor the setting

Continue with steps 4 through 6 of Manual Tuning and presetting.

Checking the signal status

Press [DISPLAY].

FM	The FM signal is received. The system is not tuned in to a station.
FM ST	The FM signal is in stereo.
FM WORD	"TUNING" is selected on the FM display.

Clock and timers

Setting the clock

Training Manager: 2002

- 1 Press **[SETUP]** to select **ALDOX**.
- 2 Press **[4, 7]** to set the time.
- 3 Press **[END]**.

Seal the clock for a free second

Printed in the USA by **CLACK** and **CLACK** USA

440

Downloaded At: 11:53 11 September 2009

Play timer

You can see the timer to come off at a certain time to video go a little.

[illegible]

Get the check

- 1 Press [SETUP] to select "TIMER ADJ".
- 2 Press [Δ , ∇] to set the alert time.
- 3 Press [OK].
- 4 Do steps 2 and 3 again to set the exit time.

To start the disc

- 1 Prepare the audio source you want to listen to and set the volume.
- 2 Press [SETUP] to select "TIMER SFT".
- 3 Press [A, V] to select "SE1" and then press [OK] to set volume.
The radio must be on for the time to count.

Check the settings	1. Press [F10] to select [HARD], 2. Press [D].
Cancel	1. Press [F10] to select [HARD], 2. Press [▲] or [▼] to select [OFF] and press [OK].

Keywords:

- The intermediate state becomes well represented gradually to the ground level
- The first series of or the first line may may be the first line is on
- The second of the upper and lower of the first line is on

Sleep center

The 5-20-10 rule applies off the system almost all the time.

Press [SLEEP] to select the setting (in minutes).
To cancel, select OFF.

5 FEB 80 - 5 SEP 80 - 5 OCT 80 - 5 FEB 87

Kinda

- The remaining time is always shown on the display.
- The display changes its priority when you perform other operations.
- The speed timer runs on road together with the play timer.
- The speed limit is always shown first. Be sure not to get on a road of there.

Safe off function

Pod CD

This breeding schedule and the system described had a number of advantages: the system for growing embryos 27 microns

- 1 Press [SETUP] to select 'AUTO OFF'.
- 2 Press [Δ , ∇] to select 'ON' or 'OFF' and then press [OK].

Sound effects

- 1 Press [SOUND] to select a sound effect.
- 2 Press [a, b] to select the desired setting.

PRESETS	"THREAT": Adds a low cut, rock "SOFT" : For background music "CLEAN" : Another equalizer preset "VOCAL" : Adds a low cut, rock "FLAT" : Cancels the sound effect
BASS	"BASS" : On, "BASS" : Off
TREBLE	"TREBLE" : On, "TREBLE" : Off
D.BASS	"ON D.BASS" or "OFF D.BASS"
SURROUND	"ON SURROUND" or "OFF SURROUND"

Troubleshooting

Before seeking to solve or make the following issues:

Common problems

- No operating can be done with the remote control.
- Examine the battery is installed correctly.

Sound is distorted or no sound.

- Adjust the volume of the speaker.
- Examine the volume of the iPod/iPhone.
- Check all the speaker, take care and correct the cause that causes the system on right. It can be caused by blocking of the speaker that you can remove volume or power, and when using the system is back to normal.

A "humming" sound can be heard during playback.

- Use AC power supply cord or the sound will be heard the same. Keep other electronic items away from the table of the system.

iPod/iPhone

You cannot switch on the iPod/iPhone.

- Examine the battery of the iPod/iPhone is not installed.
- Examine the iPod/iPhone and the system is closed.
- Examine the iPod/iPhone. Connect the iPod/iPhone and try again.

iPod/iPhone does not charge.

- Examine the connection.

Disc

Display not shown correctly.

Playback does not start.

- You have not inserted the disc correctly. Put it in correctly.
- Check the disc is clean.
- Replace the disc if it is scratched, warped or not standard.
- There is a problem on the system, try for 1 to 2 hours.

Radio

Actual sound is heard.

- Switch off the FM receiver away from the system.
- When radio is always away from the unit. This means there is a receiver.

Station cannot be selected.

- Change the FM frequency step (see "FM station setting").

Main unit displays

"LOCK"

- You have not the AC power supply cord for the main unit and there are a power line nearby. Set the clock.

"ADJUST CLOCK"

- Clock is not set. Adjust the clock correctly.

"ADJUST TIMER"

- Play time is not set. Adjust the play timer accordingly.

"TIMER"

- 10 minutes after the set time is up, and 10 minutes after of the day up period is over.

"ERROR"

- An incorrect operation was done. Press the main unit and try again.

"BATT"

- The battery power supply is off.

"IPOD OVER CURRENT ERROR"

- The iPod/iPhone is drawing too much power. Remove the iPod/iPhone. Switch the power off and on again.

"NO DEVICE"

- The iPod/iPhone is not connected. Examine the connection.

"NO DISC"

- You have not put the disc in.

"NO PLAY"

- You have put in a disc that the system cannot play.

"NOT SUPPORTED"

- The disc is not an iPod/iPhone disc, cannot be played.
- If the iPod/iPhone is compatible, connect the iPod/iPhone and connect it again. Examine that the battery of the iPod/iPhone is not depleted.

Memory reset (initialization)

Reset the memory when the following situations occur.

- The system is stopped when it is time are stopped.
- You want to clear and reset the memory contents.

- 1 Disconnect the AC power supply cord and 3 minutes before you continue with step 2.
- 2 While you power and hold [P] on the main unit, connect the AC power supply cord again.
The error.
- 3 Release [P].
A. The system will enter into the memory program. It is necessary to set the memory items again.

Remote control code

Enter valid Panasonic assigned memorize to the remote control of this system, change the remote control code for this system.

To set the code to "REMOTE 2"

- 1 Press and hold [CC] on the main unit and [A] on the remote control until "REMOTE 2" is shown.
- 2 Press and hold [ON] and [A] for a minimum of 4 seconds.

To set the code to "REMOTE 1"

- 1 Press and hold [CC] on the main unit and [P] on the remote control until "REMOTE 1" is shown.
- 2 Press and hold [ON] and [P] for a minimum of 4 seconds.

ESPAÑOL

Cómo realizar las conexiones

- 1 Conecte la antena interior FM. Coloque la antena dentro o encima del reproductor.



- 2 Conecte el cable de alimentación de CA. Conecte un extremo del cable de alimentación de CA al reproductor y el otro extremo al tomacorriente de CA de la pared.

 


iPod/iPhone. Disco

Introducir o retirar los medios

iPod/iPhone

Pulse [Pausa] para abrir la bandeja de la selección de reproducción.

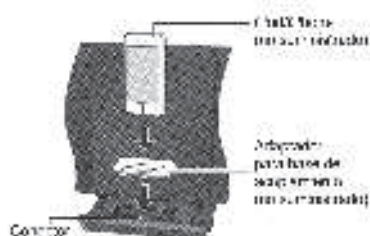

Disco

Pulse [CD] o [OPEN/CLOSE] en la unidad principal para abrir o cerrar la bandeja.



Reproducción Básica

Pulse [Pausa] o [CD] para seleccionar la fuente.

Reproducción	Pulse [Pausa] o [CD].
Detener	Pulse [Pausa].
Reanudar	Pulse [Pausa]. Pulse nuevamente para conducir la reproducción.
Salto de pista	Pulse [Pausa] o [CD].
Buscar por pista	Pulse [Pausa] o [CD].

iPod/iPhone

Ver el menú del iPod	Pulse [Pausa].
Seleccionar un elemento	Pulse [Pausa] y después pulse [OK].

Disco

Visualizar información	Pulse [DISC/INFO].
------------------------	--------------------

Menú de reproducción

- 1 Pulse [PLAY/MENU] para seleccionar "PLAYMODE" o "REPEAT".
- 2 Pulse [Pausa] y después pulse [OK] para seleccionar el modo deseado.

PLAYMODE	
OFF	Reproducción normal.
PLAYMODE	Reproducción normal.
1-TRACK	Reproducción de una pista seleccionada.
RANDOM	Reproducción aleatoria de pistas seleccionadas.
REPEAT	
ON REPEAT	Repetición de pistas seleccionadas.
OFF REPEAT	Reproducción normal de pistas seleccionadas.

Radio

Se muestran preconfigurados 30 emisoras de FM.

Preparación

Conectar la antena exterior FM (→ "Cómo realizar las conexiones").

Pulse [RADIO].

Preconfiguración automática

- 1 Pulse [PLAY MENU] para seleccionar "A-PRESET".
- 2 Pulse [▲, ▼] para seleccionar la frecuencia "LOWEST" (más bajo) o "CURRENT" (actual).
- 3 Pulse [OK] para iniciar la preconfiguración de. Para cancelar, pulse [OFF].

Selección de una emisora preconfigurada

- 1 Pulse [PLAY MENU] para seleccionar "TUNEMODE".
- 2 Pulse [▲, ▼] para seleccionar "PRESET" y después pulse [OK].
- 3 Pulse [←/→/←/→] o [↶/↷/↶/↷] para seleccionar la estación preconfigurada.

Reloj y temporizador

Configuración de la hora

El reloj se muestra con una precisión de 12 horas.

- 1 Pulse [SETUP] para seleccionar "CLOCK".
- 2 Pulse [▲, ▼] para configurar la hora.
- 3 Pulse [OK].

Para visualizar el reloj durante unos segundos pulse [SETUP] para seleccionar "CLOCK" y después pulse [OK].

Temporizador de reproducción

- 1 Pulse [SETUP] para seleccionar "TIMER ADJ".
- 2 Pulse [▲, ▼] para configurar la hora de inicio.
- 3 Pulse [OK].
- 4 Repita los pasos 2 y 3 para configurar la hora de finalización.

Para iniciar el temporizador

- 1 Prepárese la fuente de audio que desea escuchar y configure el volumen.
- 2 Pulse [SETUP] para seleccionar "TIMER SET".
- 3 Pulse [▲, ▼] para seleccionar "Set" y después pulse [OK]. Se visualizará "8?". La señal debe estar apagada para que el temporizador funcione.

Sintonización y preconfiguración manual

- 1 Pulse [PLAY MENU] para seleccionar "TUNEMODE".
- 2 Pulse [▲, ▼] para seleccionar "MANUAL" y después pulse [OK].
- 3 Pulse [←/→/←/→] o [↶/↷/↶/↷] para sintonizar la estación.
Para preconfigurar la selección
- 4 Pulse [OK].
- 5 Pulse [▲, ▼] para seleccionar un número preconfigurado.
- 6 Pulse [OK].
Realice los pasos 3 a 6 nuevamente para preconfigurar otra estación.

Comprobar la configuración	1. Pulse [SETUP] para seleccionar "TIMER ADJ". 2. Pulse [OK].
Cancelar	1. Pulse [SETUP] para seleccionar "TIMER SET". 2. Pulse [▲, ▼] para seleccionar "OFF" y después pulse [OK].

Temporizador de apagado automático

Pulse [SLEEP] para seleccionar la configuración (en minutos).

Para cancelar, seleccione "OFF".

SLEEP ON — SLEEP 30 — SLEEP 90 — SLEEP 120
OFF

Función de apagado automático

Esta función apaga el sistema (por ejemplo cuando está en la función de radio) si no se realiza ninguna actividad por un determinado tiempo.

- 1 Pulse [SETUP] para seleccionar "AUTO OFF".
- 2 Pulse [▲, ▼] para seleccionar "ON" (activación) o "OFF" (desactivación) y después pulse [OK].

