



## ENGLISH

### GETTING STARTED

1. Open the charging case.
2. Press and hold the button on the case until the LED turns to a slow blue pulse.
3. Select **MOTIF A.N.C.** from your sound device's Bluetooth® list.
4. Download the Marshall Bluetooth app and follow the in-app instructions to complete the setup.

### TOUCH CONTROLS

Touch the left or right earbud to control your music, phone calls and more. The long touch behaviour can be customised in the app.

- 1 touch to play/pause or receive/end a call
- 2 touches to skip forward or reject a call
- 3 touches to skip backward
- Long touch to toggle noise cancelling, transparency and ANC off

### CHARGING THE EARBUDS

Put your earbuds back in the case and close the lid to turn them off and begin charging.

### CHARGING THE CASE

Use a wireless charger or plug the case into a USB power source to charge it. The case is fully charged when the front-facing LED is steady green.

To charge the case using a wireless charger, follow the instructions below.

1. Place the charging case with its back flat against the wireless charging pad.
2. Make sure that the front LED lights up to indicate that the case is charging.
3. Once the LED light has turned steady green the case is fully charged.

### LED INDICATOR

The LED shows the case battery charge, from red through yellow to green (0–100%). It pulses blue while in Bluetooth pairing mode.

### NOISE CONTROL

Long touch either earbud to cycle through the noise control modes.

- Noise cancelling mode - blocks out your surroundings and lets you focus on the music
- Transparency mode - allows you to hear your surroundings and hold conversations without removing your earbuds
- Off – noise control is turned off

The amount of noise cancelling and transparency can be adjusted in the Marshall Bluetooth app.

### PAIRING A NEW DEVICE

Motif A.N.C. remembers up to 3 previously paired devices and will try to reconnect with the last connected device.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the button on the case until the LED turns to a slow blue pulse.
3. Select **MOTIF A.N.C.** from your sound device's Bluetooth list.

Note: Motif A.N.C. can be connected with one sound device at a time. Make sure to disconnect from the current device before reconnecting with a different device.

### RESETTING THE EARBUDS

If your earbuds become erratic or unresponsive, follow the instructions below.

1. Place the earbuds in the case and close the lid to restart the earbuds.

If the problem persists, perform a hardware reset:

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the touch surface on both earbuds for 4 seconds to reset the earbuds.

If the problem persists, perform a factory reset.

Note: This will delete all user settings and the earbuds will need to be set up again.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the the button on the case for 10 seconds, until the LED turns purple, to reset the earbuds to factory settings.
3. Remove **MOTIF A.N.C.** from your sound device's Bluetooth list before pairing again.

### CLEANING YOUR MOTIF A.N.C.

Earbuds come in close contact with your skin often and sometimes for long periods of time. This will over time cause build-up of dirt and grease that can affect performance and may cause skin irritation. Clean your earbuds regularly to keep them fresh and make them last longer.

Unplug any cables before cleaning the case. Make sure everything is completely dry before using the earbuds, putting the earbuds back in the case, or plugging in a USB charger.

Remove the silicone ear tips from the earbuds and clean them separately. Use a disinfectant wipe or a lint-free cloth, slightly damp with 70% isopropyl alcohol or 75% ethyl alcohol to gently clean the ear tips, the exterior surfaces of the earbuds and the case. Avoid getting moisture in any openings or in the speaker mesh. Carefully clean those areas with a dry and soft brush, or a cotton swab.

- Do not use any sharp objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the earbuds in any cleaning agents.