


MEET YOUR FIRE TV SOUNDBAR PLUS

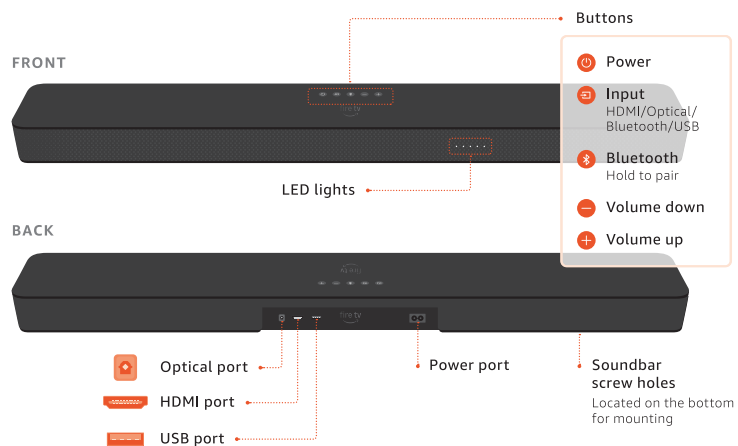

MEET YOUR SUBWOOFER



MEET YOUR REMOTE



ALSO INCLUDED

High Speed HDMI cable



Use this cable for the best experience

If connecting to a Fire TV, you can adjust the soundbar's settings in the Fire TV Settings menu.



2 power cords




2 AAA
batteries



Soundbar wall mounting accessories
See the mounting instructions

POSITIONING THE SOUNDBAR AND SUBWOOFER

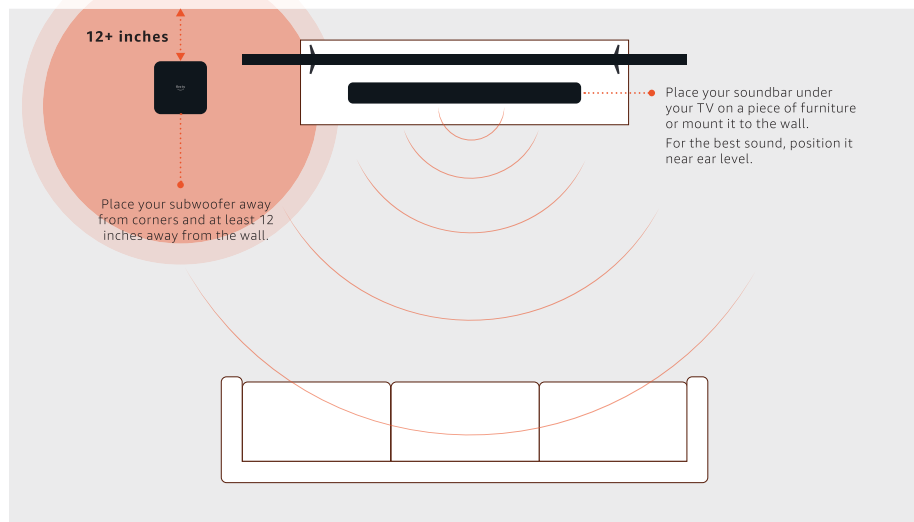


CONNECT TO YOUR TV WITH HDMI



1. Plug in the power cord

Plug the included power cord into your soundbar's power port and then a power outlet.

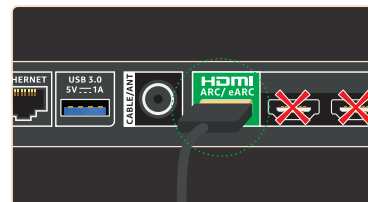

2. Plug the HDMI cable into your TV's HDMI ARC/eARC port

- Find your TV's ARC/eARC port. Plug the included HDMI cable into it.
- Plug the other end into your soundbar's HDMI port.
- Check that your TV's HDMI CEC setting is enabled.


Important: Only your TV's HDMI ARC/eARC port will work with the soundbar.



3. Select soundbar's HDMI input


Press the input button  on the soundbar or the soundbar remote until the HDMI option is selected.

SET UP YOUR SUBWOOFER

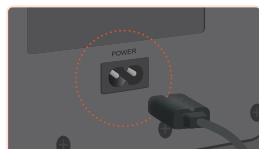

Your subwoofer comes already paired with the soundbar

- Make sure the soundbar is powered on.
- Plug the included power cord into your subwoofer and then into a power outlet.
- The subwoofer will automatically connect to your soundbar. The LED light on the connect button will turn white.

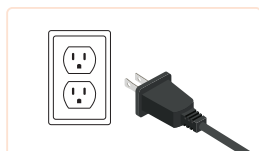

SUBWOOFER TROUBLESHOOTING



LED behaviors

- Connected**
The white light stays on
- Disconnected**
The white light is off



Connect button

To connect or disconnect the subwoofer manually from the soundbar, press the connect button.

Note: The subwoofer remains paired with the soundbar even when disconnected.

- Connection failed**
Amber light flashing

Make sure the soundbar is powered on.

More help:

If the connection continues to fail, scan the QR code on the back page for troubleshooting steps.

OTHER TV CONNECTION OPTIONS



OPTICAL

Use if your TV doesn't have an HDMI ARC/eARC port. Dolby Atmos and DTS:X aren't supported.



1. Plug an optical cable* into your TV's and soundbar's optical ports.
*Optical cable sold separately.
2. If using a Fire TV, go to the Settings and select Equipment Control > Manage Equipment > Amazon Fire TV Soundbar to finish setup.



BLUETOOTH

HDMI or optical cables must be unplugged to use. Dolby Atmos and DTS:X aren't supported.



1. Press and hold the Bluetooth button on the soundbar or remote until the LED blinks blue in discovery mode.
2. In the TV's Bluetooth settings, select Fire TV Soundbar Plus.

SOUNDBAR AUDIO SETTINGS



Equalizer

EQ modes are customized sound settings for different content: Movie, Music, Sports, and Night mode.



Bass

Adjusts the low frequency sounds from levels 1 to 9.



Treble

Adjusts the high frequency sounds from levels 1 to 9.



Surround Effect

Provides immersive, multi-dimensional sound experience.



Dialogue Enhancer

Increases the clarity of voices from levels 1 to 5.

DTS TruVolume

Long press the Dialogue Enhancer button to turn on. Automatically adjusts volume levels for different content and apps on your smart TV.

SOUNDBAR LED LIGHTS

Bass minimum

One white light on the left



Dialogue minimum

One white light on the left



Bass maximum

Five white lights



Dialogue maximum

Five white lights



Treble minimum

One white light on the left



Mute

Five white lights stay on



Treble maximum

Five white lights



Bluetooth ready to pair

One flashing blue light



DTS TruVolume on

Five white lights turn on



Bluetooth paired

One blue light



DTS TruVolume off

Three white lights turn on



Surround Effect on

Five white lights turn on starting with the middle light



Dolby Digital or DTS playback

One green light flashes once



Surround Effect off

Five white lights turn off starting with the outside lights




Dolby Atmos or DTS:X playback

Three green lights flash once



SOUNDBAR WALL MOUNTING ACCESSORIES

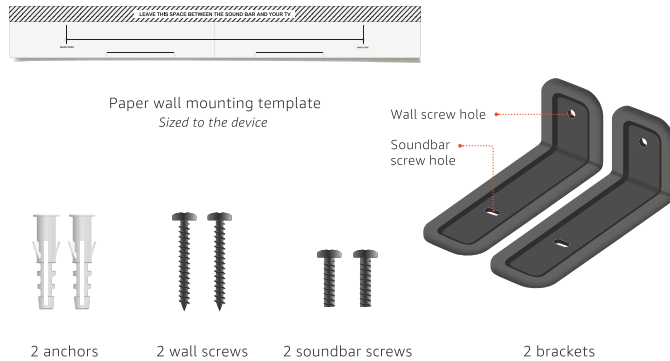


Note: Included screws and anchors are recommended for drywall. If using the anchors, do not drill into studs.

MOUNTING THE SOUNDBAR ON THE WALL


Tools you'll need Not included in the box

- Electric drill
 - 5/16" (or 8 mm) drill bit
 - Phillips #2 driver bit
- Hammer
- Level or level app
- Wall-safe tape

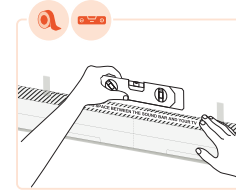

1. Level and tape the paper template to the wall

Using a level or level app, position and tape the template to the wall under your TV.

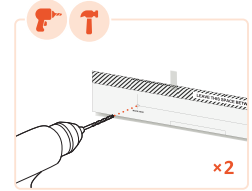


2. Drill holes and install anchors

If you're using the anchors, drill holes where the template says **MARK HERE**.

After drilling both holes, remove the template and tap the anchors into the holes with a hammer.

Warning: Do not drill into wiring or piping.


MOUNTING THE SOUNDBAR ON THE WALL

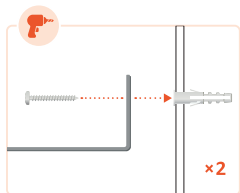

3. Attach the brackets to the wall


Insert the included wall screws into the brackets' wall screw holes.

Screw the wall screws into the anchors until the brackets are firmly attached.

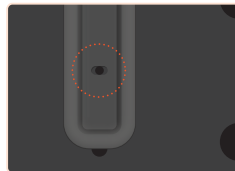

4. Position the soundbar on the brackets

Carefully line up the soundbar screw holes on the brackets and the bottom of the soundbar.

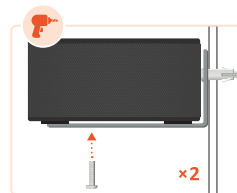

5. Attach the soundbar to the brackets

Screw the soundbar screws into the bracket's and soundbar's soundbar screw holes until secure.



Help and accessible information

Scan the QR code or visit:
amazon.com/setup/firetvsoundbarplus/sub