


DEFIANT®

USER GUIDE

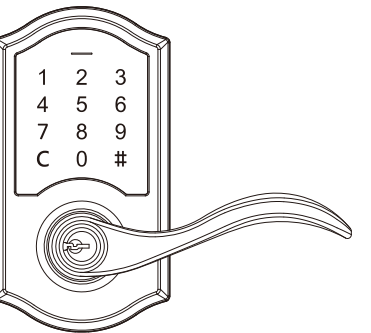

SCAN FOR PROGRAMMING




<https://goo.gl/mcceCM>

Questions, problems, missing parts?
Before returning to the store, call Defiant Customer Service
TOLL FREE HELP LINE 1-877-ONE-LOCK
HOMEDEPOT.COM
08:30 a.m.-05:30 p.m., EST, Monday - Friday


G32-KPLC112
Rev. 20/09-00

PROGRAMMING

OVERVIEW OF FUNCTIONS

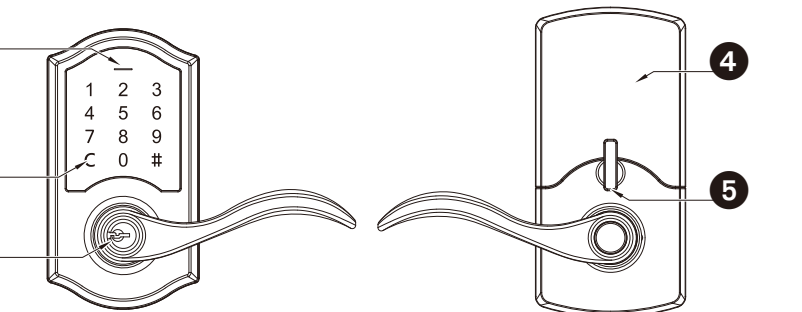


- 1 INDICATORS**
 1. Red light: Represents an incorrect entry or the unit is programming mode.
 2. Yellow light: Flashes when the batteries are low in power.
 3. Green light: Represents a correct entry.
- 2 CLEAR BUTTON**
 1. Please always press “ C ” button to cancel any typo.

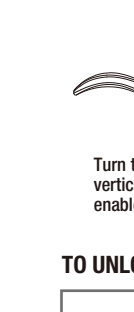

- 3 MECHANICAL KEYWAY OVERRIDE**
 1. Lock or unlock the lockset by a valid key.
- 4 BATTERY COVER**
 1. Protect the batteries from unexpected damage.
- 5 INTERIOR THUMBTURN**
 1. The lockset is in auto-lock mode when the interior thumbturn is horizontal.
 2. Lockset is set to passage mode when the thumbturn is in vertical position.


HOW TO LOCK / UNLOCK / PROGRAM THE LOCKSET

AUTO-LOCK

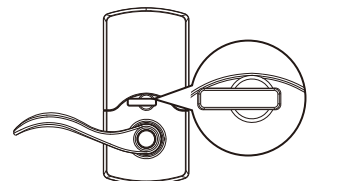


Turn the interior thumbturn from vertical to horizontal position to enable auto-lock mode.

PASSAGE MODE

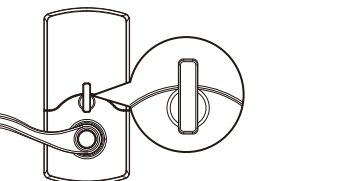

Rotate the interior thumbturn from horizontal to vertical position as shown to set your lock to passage mode. The lockset is then served as a passage lever.


TO UNLOCK

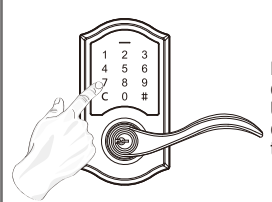

Enter the correct user code or Master code.
Upon the green indicator light on and a short beep heard, turn the outside lever to unlock.



The keypad is temporarily disabled after 4 consecutive incorrect entries.

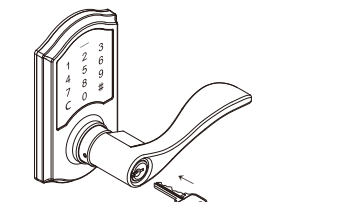

Use a mechanical key to lock or unlock.

Table Of Contents

Programming Guide



- Change Master Code..... 01
- Add User Code(s)..... 02
- Delete Individual User or Single-entry Code(s)..... 03
- Delete all User / Single-entry Codes..... 04
- Enable or Disable Beeper..... 05
- Vacation Mode..... 06
- Restore To Factory Settings..... 07



• Programming Mode will automatically time out after 30 seconds of inactivity.

Change Master Code



- A Master Code can be used to program or unlock the lock.
- The preset Master Code is 123456.
- Please change the Master Code before operating the lock.

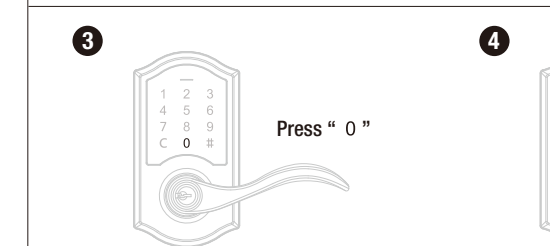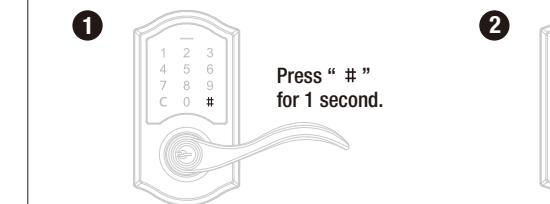

01

Add User Code(s)



- The unit can store up to 25 customized User Codes (4-8 digits long).

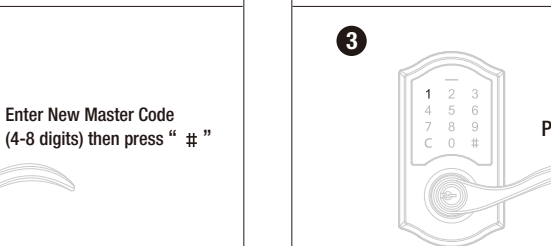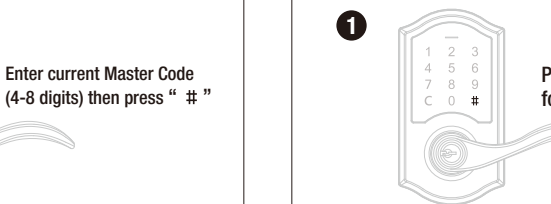

02

Delete Individual User Codes

- Delete one or more codes at a time, including User Codes.
- Users cannot be retrieved after they are deleted.

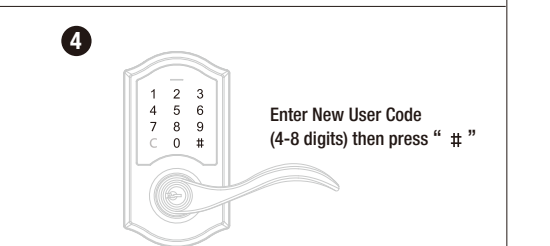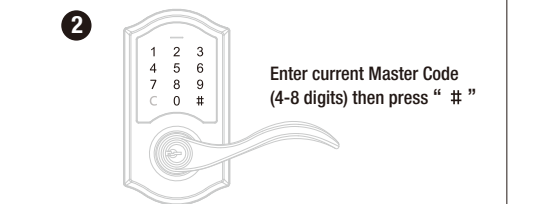

03

