

User Manual

Model: 4024, 4025, 4029



Electric Blanket





Contents

Safety Information	2	
Fitting Instructions Operating Instructions Cleaning & Care Technical Info	4	
		6

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Use this electrical appliance as described in this manual. Any other use is not recommended by the manufacturer and could have a detrimental effect on the durability of the appliance and or the safety of the user
- Never leave this appliance unattended whilst in use.
- Do not let the cord hang over the edge of a table, or come into contact with a hot surface.
- If abnormal noise, smell, smoke or any other failure is discovered during operation, turn off the product and unplug the power plug. Then contact the service centre for repair.
- This appliance is not intended for the use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.

- The appliance is not intended for medical usage; it is only intended for indoor household use.
- Do not cover or trap the controller under the pillow, mattress or blanket. Always check that the blanket and lead are not trapped. Do not tuck the blanket under the mattress.
- Do not insert pins or sharp objects into the blanket.
- Unplug the electrical power cord when the blanket is not in use.
- Do not use a hot water bottle while using the blanket.
- Please inspect the unit for damage after unpacking.
- Repairs should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.
- Do not operate this appliance with a damaged plug, or cord, after a malfunction, or after being dropped or damaged in any way. If the product is damaged or defective, please contact cservice@oypla.com

- The blanket should not be used by people that are insensitive to heat.
- Do not use the appliance on an adjustable bed, sofa beds or inflatable beds.
- Use the attached support ties to secure the product to the mattress.
- Only operate with the supplied lead and controller.
- Do not turn the blanket on when it is folded or creased.
- Do not use the power or the control with wet hands to prevent an electric shock. Do not use when wet or around liquids including bathtubs and showers.

- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not remove the appliance from the mains power supply by pulling the cord, pull the plug instead.
- This product is not a toy. Never leave the equipment within reach of children. Close supervision is required when using this equipment near children.



Gentle washing cycle at a maximum of 40°C



Do not iron



Do not tumble dry



Do not insert pins or needles



Do not dry clean



Not suitable for children under the age of 3



Do not bleach




Do not use when folded

Fitting Instructions

- Unfold the blanket and spread it out on the bed above your mattress.
- Align the blanket, so that the socket for the lead and controller are at the foot of the bed.
- Use the support ties to secure the product to the mattress, as shown in the figure on the next page.
- Ensure that your electric blanket is positioned correctly.
- Once the blanket is secure, connect the controller to the mattress.
- Place your bed sheet over the electric blanket.

Take the support tie at point A1 and place it underneath the mattress to connect
it to the support tie at point B1 with a secure knot. Repeat this with the support ties
from A2 to B2, A3 to B3 and A4 to B4.

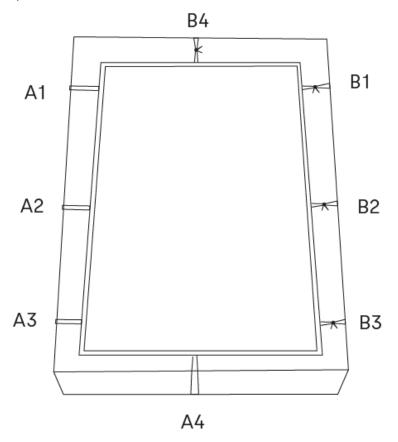


Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at cservice@oypla.com.

- Once the blanket has been securely fitted to the bed, plug the power lead into the closest socket at the foot end. Use an extension lead where necessary to ensure the power cord is not stretched and cannot be tripped over.
- This product is designed to pre-heat your bed to the desired temperature using the temperature control settings on the supplied controller. The numbers on the controller represent the heat settings shown on page 9.
- Move the heat setting on the controller to the desired heat setting in order to preheat your bed.
- The blanket will start to heat after a few minutes providing it is covered with a duvet or blanket.

- Allow 15-20 minutes for the blanket to begin warming up and approximately 60-90 minutes for the blanket to reach the maximum temperature. This time will vary depending on the temperature of the room, the type of bedding used and the thickness of the covering blanket or duvet.
- Note: If using the blanket all night, use it only on setting 1. This will provide a safe and comfortable temperature for all-night use.

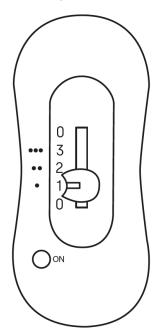

0 = OFF

1 = LOW HEAT

2 = MEDIUM HEAT

3 = MAX. HEAT

Cleaning & Care

Please familiarise yourself with the below information before cleaning your Oypla product

Oypla.com are not responsible for any product damage as a result of incorrectly cleaning and/or maintaining the product.

- Note: The blanket can be washed but never dry cleaned.
- When hand washing, use a mild washing powder or detergent and warm water.
 Soak for 5 minutes and gently wash and rinse thoroughly in clean water.
- It is recommended to air-dry the blanket.
- Always ensure the blanket is 100% dry and has returned to its original size before use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the retailer prior to any further use.
- Always disconnect the controller and the power lead from the blanket before washing.
- For machine washing, wash at a gentle cycle at a maximum of 40°C.
- Do not pinch the wired areas of the blanket as this will damage the internal circuit.
- Never wring the blanket.
- During use, checks should be regularly carried out to ensure the electric blanket is levelled, fitted firmly and not folded or rolled.
- The heating wire in the electric blanket should be spaced evenly and smoothly with no crossing, and no folds between wires.

Technical Information

Power Supply: 220 – 240 V ~50 Hz

Wattage: 40 W (4024) | 75 W (4025) | 120 W (4029)

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.









Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual