印前须知:印刷商印刷前需要结合印刷说明做印前评估,若有印刷风险请及时和作者联系,印刷时需严格执行印刷说明。 装订方式:风琴折,8折页。


正反印刷

印刷规格:

印刷内容	纸张材质	印刷方式	特殊工艺	备注
全文		快速指南/长120宽200mm 页/128g双铜过哑油	过哑油	使用环保大豆油墨印刷

ViewSonic®

Instructions and Precautions

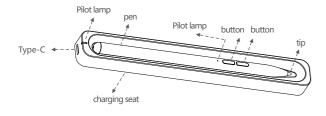

Instructions

- Please charge the pen for approximately one minute to activate and wake it up for first-time use.
- If the pen is not charged initially, it will remain in shipping mode and will not function properly.

LED Indicator	Battery Below 20%	Charging	Charging to 80%	Charging Complete
	Steady red	Flashing red	Flashing blue	Steady blue

- When the battery level of the MPP 2.0 Active Pen drops below 20%, the red light will stay on continuously.
- After two minutes, the pen will enter sleep mode, and the red light will turn off.
- However, once the MPP 2.0 Active Pen is reactivated, the red light will stay on continuously for another two minutes.

Press the button or pen tip to activate. The blue light will remain on for 5 seconds after activation.

2.Charging:

- A solid red light indicates low battery. Attach the pen to the charging dock for charging.
- The red light will flash during charging and turn solid blue when fully charged.
- The charging seat flashes blue to indicate that the pen has not been placed correctly and is charging normally, the charging seat flashes red.

3.Key Functions:

- Upper Button: Box selection.
- Lower Button: Eraser.

4.Sleep Mode:

The pen will automatically enter sleep mode after 2 minutes of inactivity.

5.Compatibility:

Designed for use with Windows systems.

6.Safety Number: VS20645

Precautions

1.Do not store the product in high-temperature or humid environments to avoid performance issues.

2.If not in use for an extended period, turn off the pen and recharge it periodically to prolong its lifespan.

3.Use only the designated charging dock. Do not use other charging equipment.

4.Apply light pressure on the screen during use to avoid damage.

For additional support, please refer to the full user manual or contact customer service.

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV technician for help.

IC warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the ollowing two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC/ IC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled nvironment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 10cm between the radiator & your body

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le
- brouillage est susceptible d'en compromettre le fonctionnement.
- IC Déclaration d'exposition aux rayonnements
- Cet appareil est conforme à IC l'exposition aux rayonnements limites fixées pour un

environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 10 cm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.

Battery Notice

Safety Precautions

metal objects such as wire.

To prevent the possibility of the battery from leaking, overheating, or causing fire please observe the following precautions:

- Do not immerse the battery in water or seawater.
 Do not use or leave the battery near a heat source such as a fire or heater.
- Do not reverse the positive and negative terminals.
 Do not discard the battery into a fire or other heat source.
- Do not short-circuit the battery by directly connecting the positive and negative terminals with other

- Do not use or leave the battery in extremely hot conditions (e.g., in direct sunlight or a vehicle), otherwise, it can overheat, cause a fire, or its performance will degrade and its service life will be shortened.

 If the battery leaks and the electrolyte gets into the eyes, do not the rub eyes. Immediately rinse the eyes with clean, running water and seek medical attention. Otherwise eye injury can result.
- If the battery gives off an odor, generates heat, becomes discolored or deformed, or in any way appears abnormal during use, recharging, or storage, immediately remove it from the device and stop using it.
- In the case the battery's terminals are dirty, clean the terminals with a dry cloth before use. Otherwise, power or charge failure may occur due to the poor connection with the device.
- Use the battery with only the accessories specifed by the manufacturer.
 This product has no parts which can be repaired by the user. Any damage caused by the user's own
- disassembly is not covered by warranty. Repair operations should be performed by qualified professionals.

 There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer, Discard used batteries according to the battery





