MAINTENANCE

USER SERVICING INSTRUCTIONS

Follow these instructions to safely and correctly care for this fan.

REPLACEABLE FUSE

If the (2.5 Amp, 125 Volt) replaceable fuse blows, please visit our website at www.getholmesfans.com for information on how to order a new fuse. Follow the below instructions to replace the fuse on the plug.

REPLACING THE FUSE

Unplug the fan.

Grasp plug and remove from the receptacle or other outlet device.

NOTE: Do not unplug by pulling on cord.

2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover towards the prongs.

NOTE: Ensure the fuse cover is completely open before attempting to remove fuse.

3. Remove fuse carefully by using a small screwdriver to pry it from the compartment at the metal ends of the fuse. (See Figure 2)

4. Place plug on a solid, flat surface. Insert new 2.5 Amp, 125 Volt fuse into fuse compartment. Use a small screwdriver to secure the metal ends of the fuse into the

CAUTION: Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.

5. Slide fuse cover closed completely.

NOTE: If fuse cover is difficult to close, make sure the fuse is completely secured in place by pressing on metal ends

CAUTION: Risk of fire. Do not replace the attachment plug. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.



Figure 2

Fuse cover

Contact our customer service at www.getholmesfans.com/en/contact-us or info@getholmesfans.com or 1-866-769-3166 (8:30 am - 5:00 pm EST) Monday-Friday. Our team will be happy to assist.

deny claims of damage caused by misuse or modifications of this product.

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

This device has a limited warranty of 3 years from the original date of purchase against workmanship and defects in material. If under normal use, your product fails to operate, please contact our customer service department at

info@getholmesfans.com. A refund or replacement will be provided to you with proof of purchase. Star Elite Inc. may

www.getholmesfans.com

Warranty Service

© 2023 Sunbeam Products, Inc. All rights reserved. HOLMES® is a registered trademark of Sunbeam Products, Inc. used under license. Distributed by Star Elite Inc., Montreal, Canada H3B 3X9 SEH024-090623

Printed In China



Instruction Manual

Item: 12211 Model: 32510380



12 Inch

Table Fan

 
PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

- Read all instructions before using this appliance.
 Use fan only for purposes described in the instruction
- 3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
- Close supervision is necessary when any appliance is used near children.
- 5. Not intended for use by children.
- 6. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
- 7. Avoid contact with moving parts.
- 8. Do not operate in the presence of explosive and/or flammable fumes.
- To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
- 10. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or contact customer service.
- 11. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped
- 12. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.

- 13. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
- 14. Do not use outdoors.
- 15. To disconnect, grip plug and pull from wall outlet. Never vank on cord.
- 16. Always use on a dry, level surface.
- 17. Do not operate fan until fully assembled with all parts properly in place.
- 18. This product is intended for household use ONLY and not for commercial or industrial applications.
- 19. WARNING: To reduce the risk of electrical shock and injury to persons, do not use in window.
- 20. WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 21. WARNING: To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D Printer).
- 22. This fan employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet.
 Replace the fuse as per the user servicing instructions
 (follow product marking for proper fuse rating) and
 check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or contact customer service



the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

ASSEMBLY / OPERATION

ASSEMBLY INSTRUCTIONS (SEE FIGURE 1)

NOTE: MAKE SURE YOU REMOVE ALL CONTENTS OF THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE THIS FAN.

Estimated assembly time: 5-10 minutes

- Pull power cord (L) through base opening (K) and secure into notch at the back of the base.
- To assemble the base, insert the Control Panel (J) and Power Cord (L) into the Fan Base (K).
- Line up the center hole of the Rear Grill (E) with the Motor Shaft (F) on the Motor Housing (G).
- Secure Rear Grill (E) to Motor Housing (G) with Rear Grill Mounting Nut (D). Turn clockwise to tighten
- 5. Secure Fan Blade (C) to Motor Shaft (F) with the Blade Cap (B). Alian blade notches and push into

FIGURE 1

the Motor Shaft (F) cross pin. Turn counterclockwise

Align the Front Grill (A) with the Rear Grill (E) so the logo is in the centre. Secure in place by lightly pushing together, an audible click will confirm

CLEANING / MAINTENANCE

OPERATING INSTRUCTIONS

- Set fan base on a dry, level, stable surface.
- Plug cord into any standard 120 volt AC outlet.
- The speed is adjusted by pressing the speed control buttons to the desired setting:
- 1-Low
- 2-Medium 3-Hiah
- 4. To start oscillation, press the Oscillation Knob (H) down. To stop oscillation, pull the Oscillation Knob (H) up.

TILT ADJUSTMENT

To change the tilting angle of the fan head, simply move the fan head to manually position to the desired anale. An audible click will confirm each anale adjustment.

FAN CLEANING

- Always unplug the fan before cleaning.
 Do not allow water to drip on or into the fan
- Use only a soft cloth moistened with a mild soap
- Do not use harsh chemicals such as aasoline. thinner or benzene as a cleaner.
- Do not attempt to remove the fan blade.
- Please use caution around the housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN HEAD AND BASE CLEANING

Unplug the fan, then, using a soft, moist cloth, with or without a mild soap solution, carefully clean the fan base and head. Use CAUTION ground the housing grea. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

- Store the fan in a clean, dry location between seasons or when not in use for an extended period
- Keep the fan protected from dirt and dust during

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

