

Go to www.vtechphones.com (US) to register your product for enhanced warranty support and latest VTech product news.

Go to phones.vtechcanada.com (CA) for latest VTech product news.

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology

DS6611
DS6611-2
DS6611-3



Scan the QR code for support information



DS6611-X (US)



DS6611-X (CA)

vtech®
Abridged user's manual

IMPORTANT SAFETY INSTRUCTIONS

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- Read and understand all instructions.
 - Follow all warnings and instructions marked on the product.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - CAUTION:** Do not install the telephone base at a height above 2 meters.
 - Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, nor in a wet basement or shower.
 - Do not place this product on an unstable table, shelf, stand or other unstable surface.
 - Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
 - Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
 - This product should be operated only from the type of power source indicated. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
 - Do not overload wall outlets and extension cords.
 - Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
 - Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into a power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of an electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
 - Only put the handset of your telephone next to your ear when it is in normal talk mode.
 - The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
 - For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
 - CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used. Use only the supplied rechargeable batteries or

- replacement batteries (BT183342/BT183342). Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the instruction. Disconnect the telephone line from the equipment before open the battery door.
- Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can defeat a safeguard.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
 - The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

- Battery**
- Use only the batteries provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 599-9211. In Canada, go to phones.vtechcanada.com or call 1 (800) 261-7377.
 - Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
 - Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
 - Exercise care in handling batteries in order not to create a short circuit with conductive materials.
 - Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

 
WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

WHAT'S IN THE BOX

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

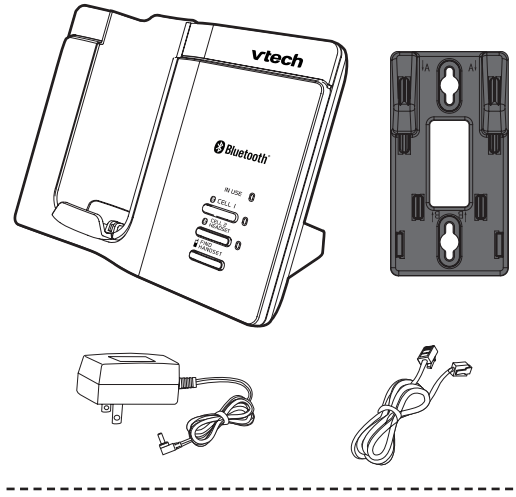


1 set for DS6611;
2 sets for DS6611-2;
3 sets for DS6611-3



1 set for DS6611-2;
2 sets for DS6611-3



 HANDSET OVERVIEW

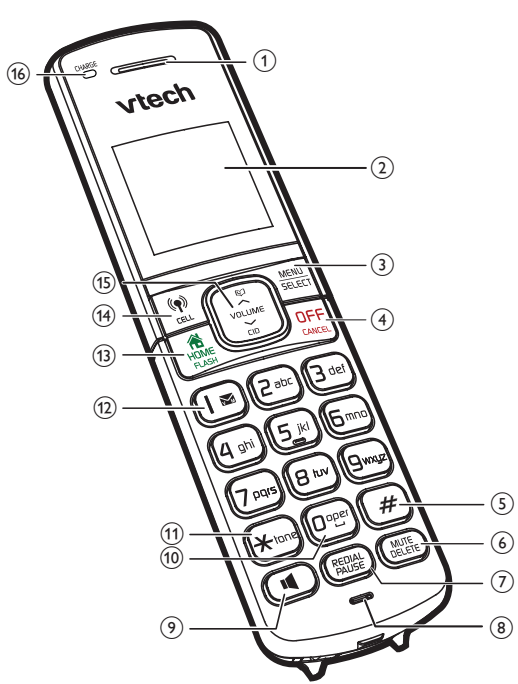

1 – Handset earpiece

2 – LCD display

3 – MENU/SELECT

- Show the menu.
- While in a menu, press to select an item, or save an entry or setting.

4 – OFF/CANCEL

- Hang up a call.
- Silence the ringer temporarily while the handset is ringing.
- Press and hold to erase the missed call indicator while the phone is not in use.
- Press to return to the previous menu; or press and hold to return to idle mode, without making changes.

5 –

- Press repeatedly to show other dialing options when reviewing a caller ID log entry.

6 – MUTE/DELETE

- Mute the microphone during a call.
- Delete digits or characters while using the dialing keys.
- Silence the ringer temporarily while the handset is ringing.

7 – REDIAL/PAUSE

- Press repeatedly to review the redial list.
- Press and hold to insert a dialing pause while entering a number.

8 – Microphone

9 – M

- Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset.

10 – P

- Press to add a space when entering names.

11 – *

- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

12 – M

- Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.
- Press and hold to set or dial your voicemail number.

13 – /HOME/FLASH

- Make or answer a home call.
- Answer an incoming home call when you hear a call waiting alert.

14 – /CELL

- Make or answer a cell call.
- Answer an incoming cell call when you hear a call waiting alert.
- Review the phonebook when the phone is not in use.
- Increase the listening volume during a call.
- Scroll up while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the right when entering numbers or names.

 
VOLUME/~/CID

- Review the caller ID log when the phone is not in use.
- Decrease the listening volume during a call.
- Scroll down while in a menu, or in the phonebook, caller ID log, or redial list.
- Move the cursor to the left when entering numbers or names.

16 – CHARGE light

- On when the handset is charging.

TELEPHONE BASE OVERVIEW

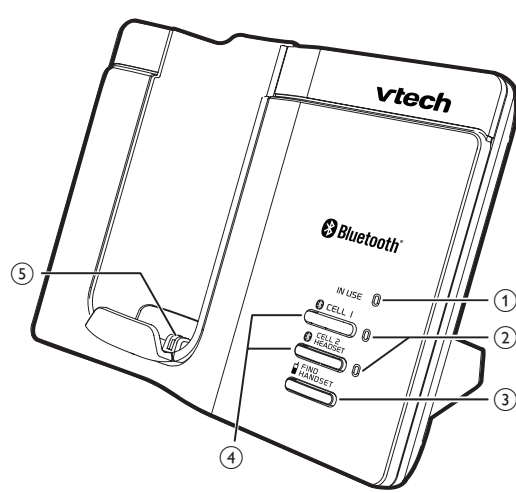

1 – IN USE light

- Flashes when there is an incoming call, or another telephone sharing the same line is in use.
- On when the handset is in use.

2 – CELL 1 and CELL 2/HEADSET lights

- On when the telephone base is paired and connected with a Bluetooth device.
- Flashes when the telephone base is in discoverable mode.

3 – /FIND HANDSET

 
- Press to page all system handsets.

4 – CELL 1 and CELL 2/HEADSET

- Press to connect the paired cell phones or headset.
- Press and hold to add or replace a cell phone or a headset.

5 – Charging pole

CHARGER OVERVIEW

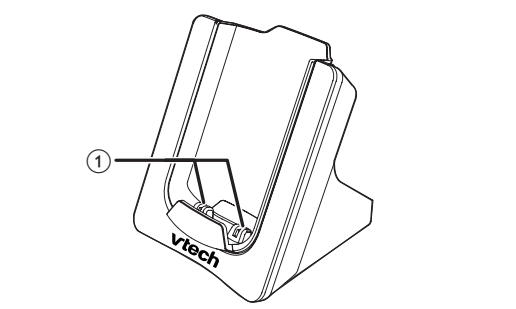

1 – Charging pole

2 – Power adapter

3 – Charging cable

4 – Charging cable

5 – Charging cable

6 – Charging cable

7 – Charging cable

8 – Charging cable

9 – Charging cable

10 – Charging cable

11 – Charging cable

12 – Charging cable

13 – Charging cable

14 – Charging cable

15 – Charging cable

16 – Charging cable

17 – Charging cable

18 – Charging cable

19 – Charging cable

20 – Charging cable

21 – Charging cable

22 – Charging cable

23 – Charging cable

24 – Charging cable

25 – Charging cable

26 – Charging cable

27 – Charging cable

28 – Charging cable

29 – Charging cable

30 – Charging cable

31 – Charging cable

32 – Charging cable

33 – Charging cable

34 – Charging cable

35 – Charging cable

36 – Charging cable

37 – Charging cable

38 – Charging cable

39 – Charging cable

40 – Charging cable

41 – Charging cable

42 – Charging cable

43 – Charging cable

44 – Charging cable

45 – Charging cable

46 – Charging cable

47 – Charging cable

48 – Charging cable

49 – Charging cable

50 – Charging cable

51 – Charging cable

52 – Charging cable

53 – Charging cable

54 – Charging cable

55 – Charging cable

56 – Charging cable

57 – Charging cable

58 – Charging cable

59 – Charging cable

60 – Charging cable

61 – Charging cable

62 – Charging cable

63 – Charging cable

64 – Charging cable

65 – Charging cable

66 – Charging cable

67 – Charging cable

68 – Charging cable

69 – Charging cable

70 – Charging cable

71 – Charging cable

72 – Charging cable

73 – Charging cable

74 – Charging cable

75 – Charging cable

76 – Charging cable

77 – Charging cable

78 – Charging cable

79 – Charging cable

80 – Charging cable

81 – Charging cable

82 – Charging cable

83 – Charging cable

84 – Charging cable

85 – Charging cable

86 – Charging cable

87 – Charging cable

88 – Charging cable

89 – Charging cable

90 – Charging cable

91 – Charging cable

92 – Charging cable

93 – Charging cable

94 – Charging cable

95 – Charging cable

96 – Charging cable

97 – Charging cable

98 – Charging cable

99 – Charging cable

100 – Charging cable

101 – Charging cable

102 – Charging cable

103 – Charging cable

104 – Charging cable

105 – Charging cable

106 – Charging cable

107 – Charging cable

108 – Charging cable

109 – Charging cable

110 – Charging cable

111 – Charging cable

112 – Charging cable

113 – Charging cable

114 – Charging cable

115 – Charging cable

116 – Charging cable

117 – Charging cable

118 – Charging cable

119 – Charging cable

120 – Charging cable

121 – Charging cable

122 – Charging cable

123 – Charging cable

124 – Charging cable

125 – Charging cable

126 – Charging cable

127 – Charging cable

128 – Charging cable

129 – Charging cable

130 – Charging cable

131 – Charging cable

132 – Charging cable

133 – Charging cable

134 – Charging cable

135 – Charging cable

136 – Charging cable

137 – Charging cable

138 – Charging cable

139 – Charging cable

140 – Charging cable

141 – Charging cable

142 – Charging cable

143 – Charging cable

144 – Charging cable

145 – Charging cable

146 – Charging cable

147 – Charging cable

148 – Charging cable

149 – Charging cable

150 – Charging cable

151 – Charging cable

152 – Charging cable

153 – Charging cable

154 – Charging cable

155 – Charging cable

156 – Charging cable

