


1. Pipe with connector

2. Manual Pump

3. Bathtub


QC
Check

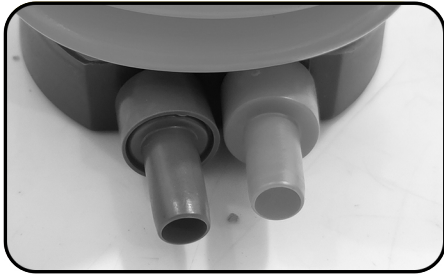

The blue valve is used to pump in the air and the red is to pump out the air



Connect the tube to the blue valve

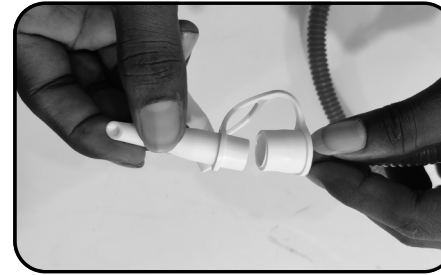


Connect the other end of the tube to the connector to the bathtub



Insert the connector into the mouth valve of the bathtub



connect the pump and bath tub as shown in the image

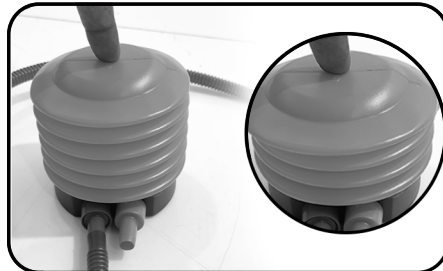

Press the pump manually to pump in the air as shown in the image



Pump until the tub looks like as shown in the picture



Connect the tube to the red valve to pump out the air