RETRO WIRELESS KEYBOARD AND MOUSE MODEL: OTTORTBMKB





PRODUCT OVERVIEW

Wireless Keyboard

 


- 1. Number Lock Indicator Light
- 2. Caps Lock Indicator Light
- 3. Battery Indicator Light



4. Battery Compartment

Wireless Mouse





- 1. Left Button
- 2. Scroll Button
- 3. Right Button
- 4. DPI Button
- 5. Battery Compartment
- 6. Optical Sensor
- 7. Receiver

Control


 Press DPI button on the mouse to adjust DPI settings. Each press will adjust the DPI to the next level in a loop sequence. The moving sensitivity of the mouse can be noticed when you move the cursor. The default DPI value is 1200.

 
OPERATION

Setup for computer

- 1. Install one AA battery (included) in your keyboard.
- 2. Install one AA battery (included) in your mouse.
- 3. Connect the USB receiver to an available USB Type-A port of the computer.

MULTIMEDIA HOTKEYS FUNCTIONS

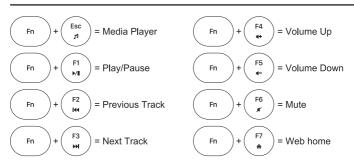



SPECIFICATIONS

Product Name: Retro Wireless Keyboard and Mouse

Officeworks Product Code: OTTORTBMKB

System Requirements: Windows® 10 or later, Mac OS Sierra 10.12.6 or later

Connection Interface: 2.4GHz dongle

Key Number: 104 keys

Multimedia Shortcut Kevs: 13

Switchable DPI: On Mouse: 1000/1200/1600 Battery: Keyboard AA x 1, Mouse AA x 1

Dimension: Keyboard 444 x 132 x 37mm±2mm, Mouse 108 x 63 x 36mm±2mm

Weight (without battery): Keyboard 715g±15g, Mouse 55g±5g

PACKAGE CONTENTS

- Wireless keyboard x 1
- · Wireless mouse x 1
- AA battery x 2
- Instruction manual x 1

PRODUCT WARRANTY - VALID FOR AUSTRALIAN CUSTOMERS ONLY

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- · to cosmetic damage;
- to damage caused by consumables used in connection with the product;
- · where the product has not been used in accordance with all provided instructions;
- · to damage arising from fair wear and tear;

- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition & Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

OFFICEWORKS LTD 236-262 EAST BOUNDARY ROAD EAST BENTLEIGH VIC 3165 AUSTRALIA

MADE IN CHINA