


Model:K26

Karaoke Machine Instruction Manual

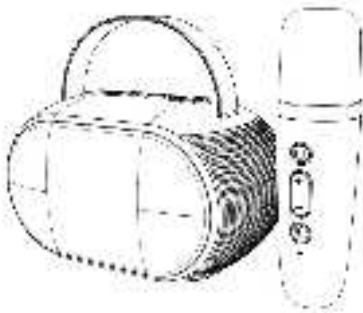


LIGHT UP MUSICAL DREAM !

Safety Warning:

Improper use of batteries can cause them to explode and cause fire or burns. Please read the following precautions!

- Do not disassemble.
- Do not squeeze the battery or subject it to any shock or external force such as hammering, dropping or stepping on it.
- Do not immerse in water to avoid short circuit.
- Do not expose to high temperature or near heat sources, and do not expose to direct sunlight.
- Do not handle damaged or leaking batteries, keep them out of the reach of children, keep them dry, and if you find any signs of damage, stop using them and contact the supplier.
- Do not place the machine in direct sunlight and keep it away from any direct heat source.
- Charging can only be done by adults.

PRODUCT LAYOUT AND BUTTONS

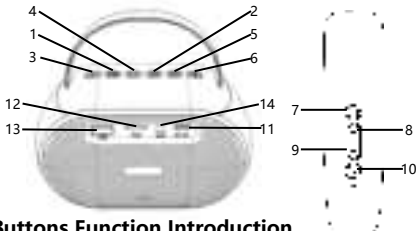





Buttons Function Introduction

Speaker

No.	Buttons	Action	Status
1		Long Press	Long press for 3 seconds to power on/off
		Short Press	Short press to play/pause
2		Short Press	Switch between Bluetooth® / USB / TF Card / AUX play modes
3		Long Press	Next track
		Short Press	Volume up
4		Long Press	Previous track
		Short Press	Volume down
5		Long Press	Turn on/off the vocal track
		Short Press	Switch between voice-changing effects ① Shout mode - default on startup; ② Female to male; ③ Male to female; ④ Baby voice; ⑤ Monster voice).
6		Short Press	Switch RGB lighting (4 modes). Short press the 5th time to turn off RGB lighting

Microphone

No.	Buttons	Action	Status
7		Long Press	Long press for 3 seconds to power on/off
		Double Click	① Adjust the microphone volume * ② Adjust the ECHO reverb effect * ③ Adjust the speaker volume *
		Short Press	Short Press to play/pause
8		Long Press	Next track
		Short Press	Volume up
9		Long Press	Previous track
		Short Press	Volume down
10		Long Press	Turn on/off the vocal track
		Short Press	Switch between voice-changing effects ① Shout mode - default on startup; ② Female to male; ③ Male to female; ④ Baby voice; ⑤ Monster voice).
		Double Click	Double-click to turn on/off the microphone (stops recording, does not power off)

*Tips: To switch between different modes of adjusting the volume with the microphone's +/- buttons, double-click the power button and you will hear a "beep" sound from the speaker. In mode ①, you can adjust the microphone volume by pressing the +/- buttons briefly. Double-click the power button again to enter mode ②, where you can adjust the ECHO reverb effect by pressing the +/- buttons briefly. Double-click the power button once more to enter mode ③, where you can adjust the speaker volume by pressing the +/- buttons briefly.

Rear Panel

- 11—Type-C Charging Port: input DC 5V/1A
- 12—TF Card Port: up to 32GB
- 13—USB Port: USB2.0 drives up to 32GB
- 14—AUX-in jack: 3.5mm audio jack

FEATURES

1. Bluetooth® Connection

- Step 1. Press and hold the power button to turn on/off the device. The blue light will flash, and the speaker will enter the waiting-for-connection mode.
- Step 2. Activate Bluetooth® on your phone or other electronic devices, search for "K26" and click to connect.
- Step 3. The speaker will emit a sound to indicate a successful connection, and the blue light will stay on. If no device is connected, the blue light will continue flashing.
- Step 4. Pairing is successful.

2. TF Card

Play music or audio from a TF card, supports cards up to 32GB. Supported formats: MP3/WAV.

3. USB Flash Drive

Play music or audio from a USB flash drive (U disk), supports drives up to 32GB. Supported formats: MP3/WAV.

4. 3.5mm AUX-in Jack

Can be used to connect headphones, microphones, and other audio devices.

5. Type-C Charging Port

Charging with a DC 5V/1A adapter (power adapter not included with the device). Charging process indicated by a steady red light, and the light goes off when fully charged.

6. Auto Shutdown

Automatically turns off after 10 minutes of music pause or no button operation.

PRODUCT SPECIFICATIONS

- Bluetooth®: Bluetooth® v5.0
- Wireless Transmission Distance: 10m
- Power: Maximum 10W
- Maximum Volume: 81dB
- Frequency Range: 100Hz - 10kHz
- Battery Capacity: Speaker - 2000mAh / 3.7V Lithium-ion battery;
Microphone - 500mA battery
- Charging Specifications: Type-C interface DC5V/1A
- Charging Time: Approximately 2-3 hours to fully charge
- Playback Time: Up to 3-4 hours at maximum volume without lights;
over 2-3 hours with lights on
- Standby Time: 12 hours
- Weight: 556g (Speaker), 85g (Microphone)
- Operating Temperature Range: 14°F to 122°F (-10°C to 50°C)
- Material: ABS
- Supported Formats: MP3, WAV

Included In This Package

- Speaker x1
- Microphone x1 or x2
- Charging Cable x1
- Instructions Manual x1



WARNING
CHOKING HAZARD -Small parts.
Not for Children under 3 yrs.

FAQ

Q: How do I connect the wireless microphone to the speaker via Bluetooth®?

A: Turn on both the microphone and speaker. On your phone/tablet Bluetooth® settings, select the device name starting with "T39" to pair with the speaker. The microphone will connect automatically.

Q: Can I use the karaoke machine without the pre-loaded songs on the SD card?

A: Yes, you can use the wireless microphones with just the speaker itself, without background music if desired.

Q: How do I control the volume of the microphone and speaker separately?

A: Press the microphone button to cycle to the microphone or speaker volume mode. Then use the + and - buttons to adjust each volume independently.

Q: Is there an echo effect on the microphones, and can I remove it?

A: Yes, there is an echo effect that can be removed by long pressing the microphone button for 2-3 seconds.

Q: What is the warranty period for the karaoke machine set?

A: The product comes with a 1-year manufacturer's warranty. You can contact our support for any issues within that period.

TROUBLESHOOTING

1. If the indicator light doesn't come on after powering on, please check if the speaker has sufficient battery power, or connect the speaker to a 5V/1A power source for charging. Charging time takes approximately 3-4 hours.
2. If the microphone has no sound, it could be due to the power not being turned on, incorrect mode selection, or the volume not being adjusted. Please adjust the microphone volume.
3. If there's no reverb from the speaker, it might be because the reverb switch is turned off. Please turn on the reverb switch.
4. If there's noise in the microphone, it could be due to environmental noise, signal interference, or the microphone being too close to the speaker. Please readjust the microphone's orientation.
5. If Bluetooth® playback is interrupted, it might be due to the Bluetooth® distance being too far, or obstacles between the phone and the speaker affecting signal transmission. Please stay close to the connected phone and avoid obstacles.
6. If Bluetooth® can't connect, it might be due to being too far away, obstacles, or another phone already being connected. Please approach the phone, avoid obstacles, and disconnect previously connected phones.
7. If charging is not possible, check if the charger is functioning properly. During charging, the red indicator light at the charging port should be lit.