

<div data-bbox="286 879 457 1130"></div> <div data-bbox="226 1180 512 1255"><p>Smart Doorbell X9</p><p>User manual</p></div>	<div data-bbox="624 780 862 807"><p>Product instruction</p></div> <div data-bbox="624 835 1053 1191"><p>Doorbell:</p><p>reset</p><p>microphone</p><p>camera sensor</p><p>doorbell button</p><p>charging port</p><p>indicator</p><p>match button</p><p>volume control</p><p>melody switch</p><p>speaker</p><p>rear mount</p></div> <div data-bbox="624 1208 1053 1332"><p>DingDong:</p></div>	<div data-bbox="1069 780 1284 807"><p>Product functions</p></div> <div data-bbox="1069 835 1498 1075"><p>visualizable talking:</p><p>when someone press the doorbell, cellphone that combined to it will receive a notification, and will be able to talk to visitor.</p><p>motion sensor:</p><p>device will auto detect movements within infrared detective range, automatically take a picture and send to combined cellphone.</p><p>(Note: a Plus version function, refer to specific real item.)</p></div> <div data-bbox="1069 1119 1359 1202"><p>share doorbell:</p><p>you can shall your visitor records to other users.</p><p>other user needs to download app and log in.</p></div> <div data-bbox="1069 1246 1498 1332"><p>low power& Charging</p><p>cellphone will receive a notification when device is low power.</p><p>red indicator lights on while charging, and lights off after fully charged.</p></div>	<div data-bbox="1522 780 1657 807"><p>How to use</p></div> <div data-bbox="1522 835 1928 1055"><p>1. scan the QR code below and download app</p><p>2. open app and log in with your phone number</p><p>3. click “+” button on upper right corner, follow app instructions to add device and combine with your cellphone.</p></div> <div data-bbox="1522 1099 1952 1342"><p>Warnings :</p><ul style="list-style-type: none">• please turn on Bluetooth, Wi Fi and allow all permissions of the app.• please use this product in an environment with good Wi Fi signal and try not to stick it on the metal door.• this product does not support 5g Wifi.• before installing the doorbell, please conduct normal function test at the position to be installed to ensure that the product works properly.<p>Remove the lens protective film after installation.</p></div>	<div data-bbox="1984 780 2278 807"><p>Pair Doorbell&Dingdong</p></div> <div data-bbox="2023 820 2258 953"></div> <div data-bbox="1968 967 2405 1113"><p>1. Plug Dingdong in power souce.</p><p>2. Long press Dingdong match button for 2 seconds, indicator light on suggesting enters pairing mode.</p><p>3. Press doorbell button once, 2 devices will pair with each other, after paired successfully, indicator lights off.</p></div> <div data-bbox="1968 1127 2405 1337"><p>Warnings:</p><p>1. During pairing, 2 devices should be as close as possible.</p><p>2. Make sure the doorbell is fully charged.</p><p>3. After pairing, the indicator light will automatically turn off.</p><p>4. If you don't ring the doorbell within ten seconds, the dingdong indicator will go out automatically.</p><p>5. If pairing fails or re pairing is required, please repeat the pairing process.</p></div>	<div data-bbox="2429 780 2803 807"><p>Reset&Restore factory settings</p></div> <div data-bbox="2437 823 2826 862"><p>Reset: press and hold the doorbell key for ten seconds until the doorbell sounds "reset succeeded".</p></div> <div data-bbox="2584 882 2675 1036"></div> <div data-bbox="2437 1050 2850 1119"><p>Restore factory settings: in case of equipment crash or other factors, remove the doorbell and press the black button in the doorbell reset pin hole.</p></div> <div data-bbox="2437 1141 2588 1303"></div> <div data-bbox="2485 1315 2600 1332"><p>backside of doorbell</p></div>	<div data-bbox="2882 780 3164 807"><p>Operating environment</p></div> <div data-bbox="2874 823 3312 1328"><ul style="list-style-type: none">• do not use the equipment in dusty, wet, dirty or close to the magnetic field, so as not to cause internal circuit failure of the equipment.• do not use this equipment in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.• please use the equipment within the temperature range of 0 ~ 35 ° C and store the equipment and its accessories within the temperature range of - 40 ° C ~ 70 ° C. When the ambient temperature is too high or too low, it may cause equipment failure.• do not place the equipment in direct sunlight, such as windowsill.• please avoid rain or moisture on the equipment and its accessories, otherwise it may cause fire or electric shock.• do not place the equipment near heat sources or exposed fire sources, such as electric heaters, microwave ovens, ovens, water heaters, stoves, candles or other places that may produce high temperatures.• do not place sharp metal objects such as pins on the earpiece or speaker of the device<p>Nearby to prevent metal objects from adhering and causing injury to you.</p><ul style="list-style-type: none">• after the equipment has been running for a period of time, the equipment temperature will rise. If the temperature of the equipment is too high, do not touch it for a long time, otherwise it may cause scald, skin redness and swelling or pigment precipitation.• do not let children or pets swallow the equipment or its accessories to avoid injury or equipment failure or explosion.</div>	<div data-bbox="3335 780 3522 807"><p>Children health</p></div> <div data-bbox="3327 823 3749 1033"><ul style="list-style-type: none">• the equipment and its accessories may contain some small parts. Please place the equipment and its accessories out of the reach of children. Children may inadvertently damage the equipment and its accessories, or swallow small parts, resulting in suffocation or other hazards.• this device is not a toy and should be used by children under adult supervision.</div> <div data-bbox="3335 1064 3506 1094"><p>Charger safety</p></div> <div data-bbox="3327 1110 3769 1321"><ul style="list-style-type: none">• when the equipment is used, it is necessary to connect the charger, and the power socket shall be installed near the equipment and easy to reach.• when the device is not used for charging, please disconnect the charger from the device and unplug the charger from the power socket.• do not drop or collide the charger. If the charger shell is damaged, please contact the customer service center for replacement.</div>
--	--	--	--	---	--	---	--

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.