# **User Manual**

# Barcode reader with stand HD10C



# Table of contents

Specification	3
The set includes:	4
Features:	4
Factory reset	5
Code Scan Modes	5
Beep settings	5
Setting End Characters	5
Case settings	6
Reading inverted codes (on black background)	6
Adding a prefix and suffix	6
Hiding barcode characters	7
Character table	8



# Specification

• Light Source: 620nm LED

• Sensor Type: CMOS

 Scanning method: manual (on the button) / automatically (after bringing the code closer)

• Scan Acknowledgement: Light and Sound Signal

• Read Rate: 200 times/second

• Interface: USB

• Cord length: 140 cm

• Ingress protection: IP54

• **Device dimensions:** 16 x 9.5 x 6.5 cm

• Stand dimensions: 24 x 12 x 12 cm

• Package dimensions: 18.5 x 12 x 8.5 cm

• Device weight: 300 g

• Weight with packaging: 370 g

• Operating temperature: - 20 - 50°C

• Storage temperature: -40 - 60°C

 Readable 1D codes: EAN-8, EAN-13, UPC-A, UPC-E, CODE 128, CODE 39, CODE 93, CODE 11, CHINESE 2 of 5, CODABAR, MSI, Interleaved 2 of 5 (ITF), other one-dimensional



### The set includes:

- Barcode Reader
- Self-assembly reader stand
- Built-in USB communication cable
- Manual

### Features:

- Wired reader for scanning standard barcodes
- Ability to scan codes displayed on LCD and LED/OLED screens as well as mobile device displays
- Barcode scanning in automatic mode
- Any character before or after the code can be programmed



## Factory reset



Restore default settings

Code Scan Modes



Manual mode



Auto mode

Beep settings



Sound On (Default)



Sound off

**Setting End Characters** 



CR



No signs



**TAB** 



LF+CR



# Case settings



Uppercase and lowercase letters



No case conversion



Uppercase letters only



Lowercase only

Reading inverted codes (on black background)



Enabled



Disabled (default)

Adding a prefix and suffix



Add a prefix



Add a suffix



Cancel prefix



**Cancel Suffix** 





Save settings

In order to set a prefix or suffix, first scan the code "Add prefix" or "Add suffix", then scan the corresponding character from the table at the end of this manual and finally read the code "Save settings".

# Hiding barcode characters





Hiding leading characters

Hide trailing characters

In order to hide individual characters in the barcode, first scan the code "Hide initial characters" or "Hide end characters" and then use the scanner to read the code at the end of this manual, corresponding to the number of digits to be hidden.

**For example,** if you want to hide the first two characters of a barcode, first scan the "Hide initial characters" code, then scan the "0" and "2" codes from the table.



# Character table

SOH	STX	ETX
EOT	ENQ	ACK
BEL	Backspace	TAB
LF	VT	FF
CR	SO	SI
DLE	DC1	DC2
DC3	DC4	NAK



SON	ETB	CAN
EM	SUB	ESC
FS	GS	RS
U.S.	SPACE	!
п	#	\$
%	&	ı
(	)	*
+		_



		0
1	2	3
4	<b>                      </b> 5	6
	8	9
		*
		;
<b>                                     </b>		<b>                       </b> B
[ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]	<b>                          </b> D	



F	G	Н
And	J	K
L	М	N


About	######################################	<b>                    </b>
At		



		c
		f
d	e	
g	h	and
j 	k IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	about



р	q	R
S	t	at

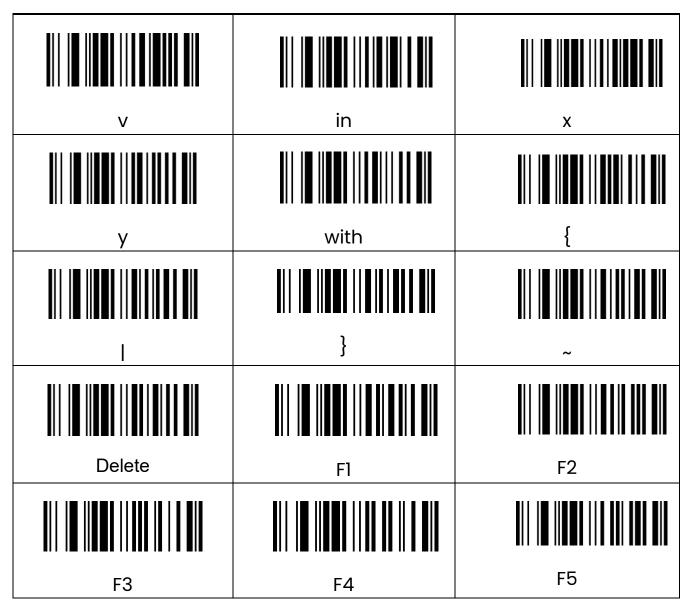

	<b>                       </b>	######################################
### F9	F10	
	INSERT(insert)	HOME
Page Up	Delete	END
Page Down	Right arrow	Left arrow

