

# Pronomic SPS-1 Boxenstative

ArtNr.: 00016444, 00016445, 00085601, 00090585

Vielen Dank, dass Sie sich für unser Boxenstativ entschieden haben. Um sicherzustellen, dass Sie mit diesem Produkt voll und ganz zufrieden sind, lesen Sie sorgfältig und verstehen Sie diese Bedienungsanleitung, bevor Sie unser Produkt verwenden. Bewahren Sie diese Bedienungsanleitung an einem sicheren Ort auf. Die Bedienungsanleitung muss an alle nachfolgenden Anwender weitergegeben werden.



Bitte Sicherheitshinweise beachten!



Mit dem Signalwort **WARNUNG** sind die Gefahren gekennzeichnet, die ohne Vorsichtsmaßnahmen zu schweren Verletzungen führen können.



Alle personenbezogenen Formulierungen in dieser Bedienungsanleitung sind geschlechtsneutral zu betrachten.

Alle Informationen in dieser Bedienungsanleitung wurden nach bestem Wissen und Gewissen kontrolliert. Weder Autor noch Herausgeber können jedoch für Schäden haftbar gemacht werden, die in Zusammenhang mit der Verwendung dieser Bedienungsanleitung stehen.

Sonstige, in diesem Dokument aufgeführte Produkt-, Marken- und Unternehmensbezeichnungen können die Warenzeichen ihrer jeweiligen Eigentümer sein. Die Einhaltung sämtlicher anwendbarer Urheberrechtsgesetze liegt in der Verantwortung des Anwenders dieses Dokuments.



## Detaillierte Sicherheitshinweise:

Bitte beachten Sie die folgenden Sicherheitshinweise um Fehlfunktionen, Schäden oder Verletzungen zu vermeiden:

- Diese Artikel sind keine Kinderspielzeuge und sind für Kinder unter 3 Jahren nicht empfohlen. Lassen Sie Ihre Kinder nicht unbeaufsichtigt mit den Produkten spielen.
- Bitte zweckentfremden Sie das Boxenstativ nicht, z. B. als Werkzeug, Stiege etc. und belasten Sie das Stativ nur mit dem Maximalgewicht von 50 kg (zentrische Traglast). Bei der Verwendung von Boxentürmen ist es erforderlich, darauf zu achten, dass das Stativ nicht umkippen kann.
- Achten Sie beim Aufbau darauf, dass sich keine Gegenstände oder Gliedmaße zwischen den Stangen befinden. Unsachgemäße Handhabung kann zu eingeklemmten Gliedmaßen führen.
- Die Beine des Boxenstativs müssen so weit auseinanderstehen, dass ein Umkippen nicht möglich ist. Das Stativ ist nur für die Anwendung auf ebenem und festem Untergrund vorgesehen.
- Bitte sichern Sie das Rohr stets mit dem entsprechenden Splint.
- Vor der Benutzung ist eine entsprechende Sichtprüfung auf mechanischen Verschleiß vorzunehmen. Insbesondere ist auf deformierte Rohre und Streben, abgeplatzte Schellen oder ausgeleierte Nieten zu achten. Beschädigte Stative dürfen NICHT eingesetzt werden.

Alle technischen Daten und Erscheinungsbilder können ohne vorherige Ankündigung geändert werden. Alle Angaben waren zum Zeitpunkt der Drucklegung korrekt. Die Musikhaus Kirstein GmbH übernimmt keine Gewähr für die Richtigkeit oder Vollständigkeit der in diesem Handbuch enthaltenen Beschreibungen, Fotos oder Aussagen. Gedruckte Farben und Spezifikationen können geringfügig vom Produkt abweichen.

 **KIRSTEIN.de**  
Musikhaus Kirstein GmbH

Bernbeurener Str. 11

86956 Schongau – Germany

Telefon/Phone: 0049-8861-909494-0

# Pronomic SPS-1 speaker stands

**ArtNo.: 00016444, 00016445, 00085601, 00090585**

 
Thank you for purchasing our speaker stand. To ensure that you are fully satisfied with this product, please read and understand this instruction manual carefully before using our product. Keep these operating instructions in a safe place. The operating instructions must be passed on to all subsequent users.



Please observe the safety instructions!



The signal word WARNING indicates dangers that could lead to serious injury if precautions are not taken.



All personal formulations in these operating instructions are to be regarded as gender-neutral.

All information in these operating instructions has been checked to the best of our knowledge and belief. However, neither the author nor the publisher can be held liable for any damage arising in connection with the use of these operating instructions.

Other product, brand and company names mentioned in this document may be the trademarks of their respective owners. Compliance with all applicable copyright laws is the responsibility of the user of this document.



## Detailed safety instructions:

Please observe the following safety instructions to avoid malfunctions, damage or injury:

- These items are not children's toys and are not recommended for children under 3 years of age. Do not allow your children to play with the products unsupervised.
- Please do not misuse the speaker stand, e.g. as a tool, staircase, etc. and only load the stand with the maximum weight of 50 kg (centric load capacity). When using speaker towers, it is necessary to ensure that the stand cannot tip over.
- When setting up, make sure that there are no objects or limbs between the poles. Improper handling can lead to trapped limbs.
- The legs of the speaker stand must be far enough apart to prevent it from tipping over. The stand is only intended for use on level and firm ground.
- Please always secure the tube with the appropriate split pin.
- Before use, carry out a visual inspection for mechanical wear. Pay particular attention to deformed tubes and struts, chipped clamps or worn rivets. Damaged stands must NOT be used.

All technical data and appearances are subject to change without prior notice. All information was correct at the time of printing. Musikhaus Kirstein GmbH accepts no liability for the accuracy or completeness of the descriptions, photos or statements contained in this manual. Printed colors and specifications may differ slightly from the product.

**KIRSTEIN.de**  
Musikhaus Kirstein GmbH

Bernbeurener Str. 11

86956 Schongau – Germany

Telefon/Phone: 0049-8861-909494-0



## Active PA Speaker Pronomic E Series



## Operating Manual

Revision: \*-03-2020

00063845 Pronomic E-210  
00063846 Pronomic E-212  
00063847 Pronomic E-215



© 2020

This manual is protected by copyright. Any copying or reprint, even in excerpts, is only allowed with written consent of Musikhaus Kirstein GmbH. The same applies to reproduction or copying of images, even in altered form.

## **Contents**

|                                                                              |           |
|------------------------------------------------------------------------------|-----------|
| <b>Technical Data .....</b>                                                  | <b>3</b>  |
| <b>Product Description .....</b>                                             | <b>4</b>  |
| IMPORTANT SAFETY SYMBOLS.....                                                | 7         |
| Power Supply .....                                                           | 7         |
| SAFETY .....                                                                 | 8         |
| Connections .....                                                            | 9         |
| <b>Installation and Operation.....</b>                                       | <b>9</b>  |
| <b>CLEANING &amp; MAINTENANCE .....</b>                                      | <b>9</b>  |
| <b>SIMPLIFIED EU DECLARATION OF CONFORMITY .....</b>                         | <b>10</b> |
| <b>WEEE Declaration (Waste of Electrical and Electronic Equipment) .....</b> | <b>10</b> |

Thank you for purchasing this product. To ensure you will be completely satisfied with this product, read and understand this manual carefully before use. Keep the manual in a safe place. The Operating Manual must be passed on to all subsequent users.



Follow the Operating Manual!



The signal word **WARNING** identifies hazards, which can result without precautions in serious injury.



The signal word **NOTE** indicates general precautions, which should be observed in handling the product.



Images used in this manual may differ slightly from the actual product, as long as it has no adverse effect on the properties and safety of the product.



All personal formulations in these instructions are to be considered gender neutral.

These operating instructions apply to persons who have been supervised or instructed in the operation of the unit by a person responsible for their safety and who have proven to be able to handle the unit.



**Children should be supervised to ensure that they do not play with the unit. Do not leave the children unattended.**

All information contained in this Operating Manual is accurate to the best of our knowledge and belief. Neither the author nor the publisher, however, can be held liable for damages or losses that arise in connection with the use of this Operating Manual.


Other product, brand or company designations specified in this document are possibly the trademarks of their respective owners. Compliance with all applicable copyright laws is the responsibility of the user of this document.

## Technical Data

| Model                               | Pronomic E-210 MA, 10"         |
|-------------------------------------|--------------------------------|
| Type                                | 2-Way Active Speaker System    |
| Frequency Response                  | 70Hz-20kHz                     |
| Sensitivity (1m/1w)                 | 92dB                           |
| Woofer                              | 10"                            |
| Driver                              | 1" Exit-1.0" Compression Drive |
| Crossover                           | 3.0KHz                         |
| SPL                                 | 110dB                          |
| Max. Transmission Power (Bluetooth) | 1mW / 0dBm                     |
| Frequency band (Bluetooth)          | 2401.418 - 2480.498 MHz        |
| Rated Power (@4 ohm)                | 100W                           |
| Max. Power (@4 ohm)                 | 200W                           |
| Dimension(W x H x D)                | 310x500x325mm                  |
| Weight                              | 10.3kg                         |

| Model                               | Pronomic E-212 MA, 12"       | Pronomic E-215 MA, 15"   |
|-------------------------------------|------------------------------|--------------------------|
| Type                                | 2-Way Active Speaker System  |                          |
| Frequency Response                  | 60Hz-20kHz(+/-3dB)           | 50Hz-20kHz(+/-3dB)       |
| Sensitivity (1m/1w)                 | 94dB                         | 95dB                     |
| Woofer                              | 12"MF/LF 2.0 Voice coil      | 15"MF/LF 2.0" Voice coil |
| Driver                              | 1"Exit-1.0"Compression Drive |                          |
| Crossover                           | 2.8KHz                       | 2.5KHz                   |
| Max SPL                             | 120dB                        | 120dB                    |
| Max. Transmission Power (Bluetooth) | 1mW / 0dBm                   |                          |
| Frequency band (Bluetooth)          | 2401.418 - 2480.498 MHz      |                          |
| Rated Power (@4 ohm)                | 120W                         |                          |
| Max. Power (@4 ohm)                 | 250W                         | 350W                     |
| Dimension(W x H x D)                | 380x590x320mm                | 425x720x365mm            |
| Weight                              | 13.7kg                       | 15.9kg                   |

## Product Description

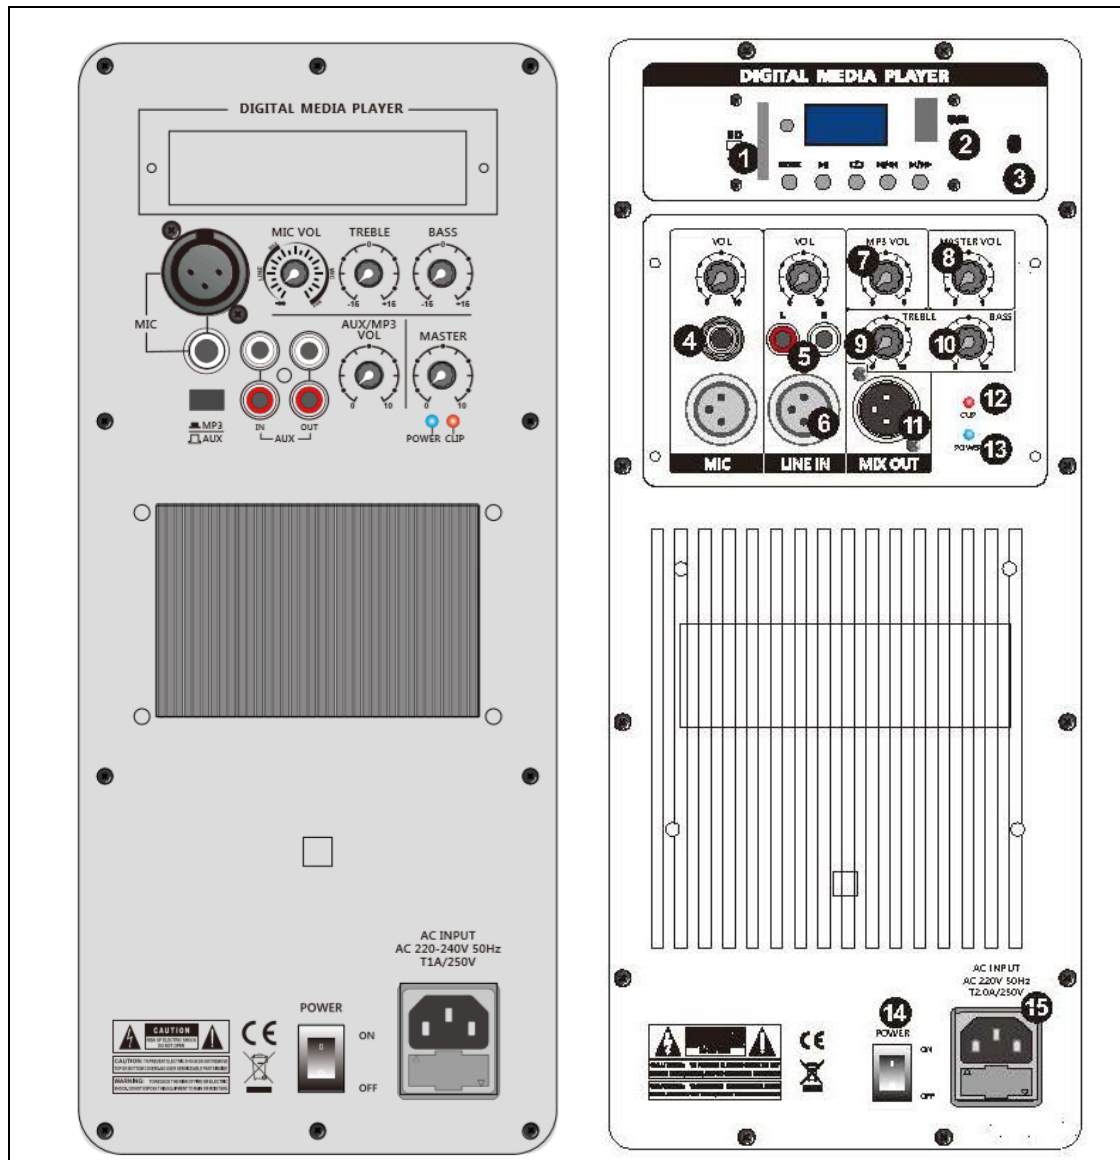

### 1. SD-Card Slot

SD-Card Input for playing MP3 files stored on SD-Card format.

### 2. USB Input

SD-Card Input for playing MP3 files stored on SD-Card format.

### 3. Bluetooth Function

Setting up a Bluetooth Connection with BT-ready Devices.



The built-in audio player features a Bluetooth receiver, which allows you to transfer music wirelessly from your devices such as smartphones, tablets and notebooks.

- A. Press the MODE button (repeatedly) on the audio player or the remote control until the display indicates “**N-BLUE**”.
- B. Activate the Bluetooth function on your mobile device and keep it at hand to pair it to the receiver. The Bluetooth receiver (pairing code) is indicated by “**E-210 MA, E-212 MA, E-215 MA**” on the display of your device. Bluetooth has a function range of approx. 10meters.
- C. Once the Bluetooth receiver is connected to your e.g. mobile device, the audio player’s display indicates “**BLUE**” and is ready to play music. Just play music on your mobile device as you normally would and the sound will come out the speaker system.
- D. To interrupt or continue the playback, press the button (▶||).
- E. With the buttons (⏮) and (⏭) you can skip titles in forward or backward direction.
- F. To flip through the menu to a playback of a USB device or a memory card, press the button (MODE) repeatedly.

#### **4. MIC INPUT**

Microphone input (No phantom power).

#### **5. RCA INPUT**

Connect a CD player, digital media player, mixer or other media source to these inputs. Control the output volume using the Line Input volume knob.

#### **6. LINE INPUT(XLR)**

Connect a line-level mixer or musical instrument to this XLR line-level input. Control the output volume using the Line Input volume knob. Also use this line-level input when linking together two Speaker units.

#### **7. MP3 VOLUME CONTROL**

This knob is used to control volume of the MP3.

#### **8. MASTER VOLUME CONTROL**

This control enables you to adjust the total volume level.

#### **9. TREBLE CONTROL**

This knob is used to regulate the amount treble applied to the output signal.

#### **10. BASS CONTROL**

This knob is used to regulate the amount bass applied to the output signal.

#### **11. MIX OUT**

Connect this XLR output to another active (powered) speaker. The level of the output is controlled by each channel’s volume setting (Mic Input volume, Line Input volume, and Media Panel volume).

**12. CLIP LED**

This LED will flash red if the signal from inputs or Media Panel source is clipping. If this happens, decrease the setting of the Mic Input volume knob, Line Level volume knob, or Media Panel volume knob.

**13. Power LED**

Indicates whether speaker is powered on or off.

**14. POWER SWITCH:** This power switch turns on the system. Remember to adjust the volume level to the lowest setting before turn on the power switch.

**15. AC INPUT CONNECTOR:** Connect the included power cord to the AC input connector before push on the power switch.

**Media Panel Functions**

|                                                                                     |                                                                                      |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| <b>MODE</b>                                                                         | Switches modes within the menu from Bluetooth, SD, USB.                              |
|   | Play/Pause the USB, SD, or Bluetooth source.                                         |
|  | Repeat a single song (ONE) or all songs (ALL) of a music list on your device         |
|  | Navigates through USB and SD tracks. Plays the previous USB, SD, or Bluetooth track, |
|  | Plays the next USB, SD, or Bluetooth track.                                          |

### IMPORTANT SAFETY SYMBOLS

|                                                                                   |                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                                                                                                                                                                        |
|  | <p>The symbol is used to indicate that some life-endangering parts are built in this device. Even normal operating conditions may be sufficient to constitute the risk of electric shock or death.</p> |
|  | <p>The symbol is used in the service documentation to indicate that for safety reasons specific components shall only be replaced by the component specified in that documentation.</p>                |
|  | <p>Protective grounding conductor is built-in.</p>                                                                                                                                                     |
|  | <p>Alternating current/voltage.</p>                                                                                                                                                                    |
|  | <p>life-endangering parts</p>                                                                                                                                                                          |
| <p><b>ON:</b></p>                                                                 | <p>Indicates that the device is turned on.</p>                                                                                                                                                         |
| <p><b>OFF:</b></p>                                                                | <p>Indicates that the device is turned off.</p>                                                                                                                                                        |

### Power Supply

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

## SAFETY



Before fitting or removing the unit, ensure that the power cord is disconnected from the mains.



Make sure that the unit is positioned so that no one can stumble over the power cord.

### Danger of Hearing damage

This speaker component easily is generating high sound pressure levels (SPL) sufficient to cause permanent hearing damage to performers, production crew and audience members. Avoid prolonged exposure to SPL in excess of 85 dB.

### Water & Moisture

To protect against electrical shock, do not immerse cord, plug or any part of this unit in water or other liquids;

### Heat

The speaker should be located away from heat sources such as radiators, stoves or other appliances that produce heat.

### Ventilation

Do not block areas of ventilation opening. Violation might result in fire. Always install the speaker in accordance with the manufacturer's instructions.

### Object and Liquid Entry

Avoid Objects falling into the housing and avoid liquids pouring into the speaker.

### Power Cord and Plug

Protect the power cord from being stepped on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.

If the provided plug does not fit into your outlet, refer to electrician for replacement.

### Fuse

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet.

### Electrical Connection

Improper electrical wiring may invalidate the product's warranty.

## Installation and Operation



#### **WARNING**

**Disconnect the device from the power supply before installation.**

### Connections

Before using the unit at the first time, ensure that your mains voltage corresponds to voltage indicated on the unit.

## CLEANING & MAINTENANCE



#### **WARNING**

**Never immerse the device in liquids.**

Clean only with a dry cloth. Do not use any solvents such as benzoyl or alcohol.

Do not implement any servicing other than those described in the manual. Refer all servicing to qualified service personnel only.

Only use accessories/attachments or parts recommended by the manufacturer.

## SIMPLIFIED EU DECLARATION OF CONFORMITY

Herewith Musikhaus Kirstein GmbH declares that the device/radio units

[Pronomic E-210]

[Pronomic E-212]

[Pronomic E-215]

are in compliance with the EU directive 2014/53/EU. You can download the full CE declaration of conformity for this item under download

[http://www.kirstein.de/docs/Konformitaetserklaerung/CE\\_Konformitaetserklaerung\\_00063845.pdf](http://www.kirstein.de/docs/Konformitaetserklaerung/CE_Konformitaetserklaerung_00063845.pdf)

## WEEE Declaration

### (Waste of Electrical and Electronic Equipment)

Your product has been designed and manufactured using quality materials and components that are recyclable and reusable. The symbol means that your product must be disposed separately from household waste at the end of its service life.

Dispose of this equipment at your local collection point or recycling center.

Please help to protect the environment in which we all live.

All specifications and appearances are subject to change without notice. All information was correct at time of printing. Musikhaus Kirstein GmbH does not guarantee for the accuracy or completeness of any description, photograph or statement contained in this manual. Printed colors and specifications may vary slightly from product. Products from Musikhaus Kirstein GmbH are only sold through authorized dealer. Distributors and dealers are not agents of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way.



**Musikhaus Kirstein GmbH**

**Bernbeurener Str. 11**

**86956 Schongau – Germany**

**Telefon/Phone: 0049-8861-909494-0**

**Telefax/Fax: 0049-8861-909494-19**

**[www.kirstein.de](http://www.kirstein.de)**

