
ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

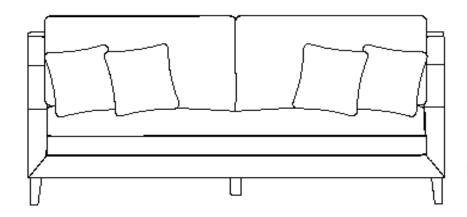



ASSEMBLY RATING



EASY ← DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

0	CHECK BEFORE STARTING
(\mathbf{v})	BEFORE STARTING

	Are you missing anything?	Check out our Quick Tips!
S 16	Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
	Should we send any replacements?	Prep Time!
	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


SOFA



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

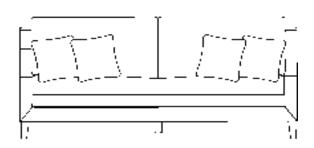

PARTS

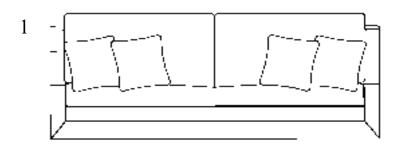

Sofa

1 pc.

HARDWARE

A



2 pc.

В



Front wood leg

2 pc.

C



Plastic spacer 11*40*2mm

5 pc.

D



Middle support leg 5/16*14.5cm


1 pc.

ASSEMBLY INSTRUCTIONS

1


Take out the legs and hardware package from the underneath zipper bag (Pls check the hardware QTY as above)

Assemble the wood legs with hardware, make sure to turn them tightly.

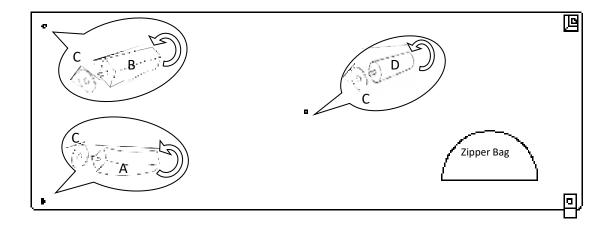

2

Assembly completed

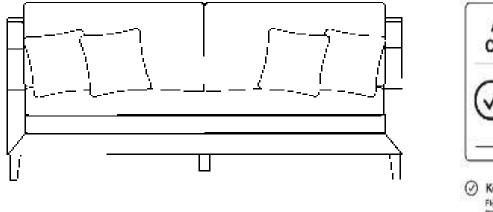

ASSEMBLY
COMPLETED

Places create the found to passed on an even and tall so takes. If the creates on an even create and tall so takes followed to the left followed the tall to the another some and properly digital and to an another some and properly digital and and another some and properly digital and and another some and properly digital and and another some and properly digital and another some and properly digital and another some another some and another some another some and another some and another some and another some another some and another some another some another some another some another some and another some anoth

Keep this handy!
Fleace relain this incruoden monant and any order to allow the hands of the companion of the compa

Lift, don't drag!
 To explicate product prices a regist ET the product when to characteristic distribution of wilesting the placet ett.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.