

Fanttik

NBB Nano Pressure washer

User Manual



Read this manual carefully before use
and keep it for future reference.

Contents

1.SAFETY WARNINGS	02
2.PACKAGE CONTENTS	04
3.OPERATION GUIDANCE	07
4.SPECIFICATIONS	09
5.TROUBLESHOOTING	10

1.Safety Warnings

 **WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Please read and comply with all original instructions before the initial operation of your appliance and storage the guidance for future reference or subsequent owners.

Apart from the notes included, the general safety provisions and rules for the prevention of accidents of the legislator must be observed. Warnings and notes that are attached on the appliance provide important notes for the safe operation.

 **DANGER**

All circuits in the working area must be protected from jet water.

The user must be the operator as intended. The person must consider the local conditions and must pay attention to other persons in the surroundings when operating the washer.

Before each operation, check important components such as high-pressure hoses, hand spray guns and safety devices for damage. Do not operate washer with damaged components.

High pressure nozzles can be dangerous if misused. The spray must not be directed at persons, live electrical equipment, or the machine itself.

 **ATTENTION**

Do not operate the washer at temperatures below 0°C

 **DANGER**

Pressure washer must not be operated in explosive atmospheres.

Explosion risk - Do not spray flammable liquids.

Never use acidic solvents containing solvents or undiluted! This includes gasoline, paint thinner, and heating oil. Spray can be highly flammable, explosive, and toxic. Do not use acetone, undiluted acidic solvents as they will corrode the materials used on the equipment. Never use the washer with flammable or toxic liquids, or liquids incompatible with normal operation.

Keep packaging films away from children, otherwise there is a risk of suffocation!

 WARNING

In accordance with applicable regulations, cleaning machines must never be used on drinking water networks without a system separator. Ensure that the connection to the building water installation in which the cleaning machine is operated is equipped with a compliant system separator!

Water flowing through an anti-backflow valve is considered undrinkable.

To ensure applicable safety, only use original spare parts from the manufacturer or manufacturer approved.

WARNING

High-pressure hoses, fittings and couplings are important to machine safety. Use only hoses, fittings and couplings recommended by the manufacturer.

 WARNING

Improper use of the cleaning machine may result in serious injury or oxidation.

 
Store the washer away from children.

Bleed any residual pressure before disconnecting the hose from the product.


Before each use, regularly check whether all metal fasteners are tight and whether the gasket components are intact; check whether parts are broken or worn.

Store indoors – Never store the washer outdoors or where it may freeze.


2.PACKAGE CONTENTS

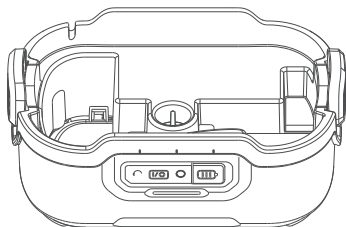


NB8 Nano base x1

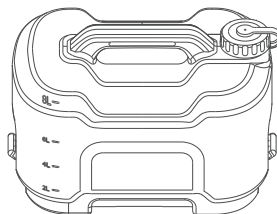 


Water tank x1

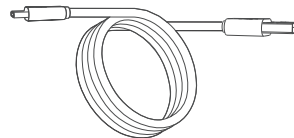 

Type-C cable x1

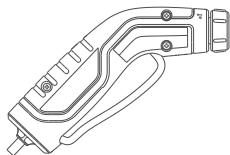 

trigger gun
(connected with hose) x1

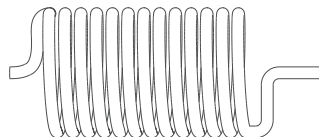 


Spiral hose
(connected with base) x1

USE MANUAL

Use manual x1

 1. Tank
2. Sprayer
3. Connector
4. Tank cap
5. Tray
6. Charge inlet
7. Frame
8. Indicator panel
9. ON/OFF Switch

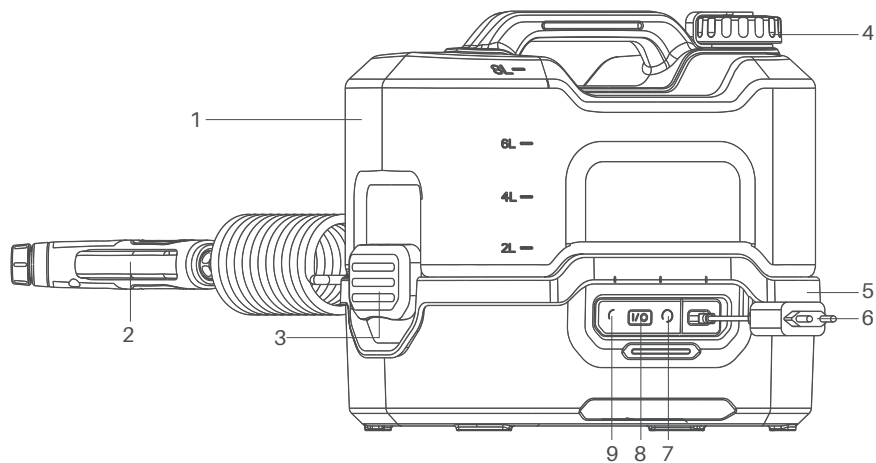


3.How to Use

- Place the device on a flat and leveled surface.


Charge the battery (suggest using 5V/3A USB charger)

 Note: the charge indicator flashes during the charging procedure.

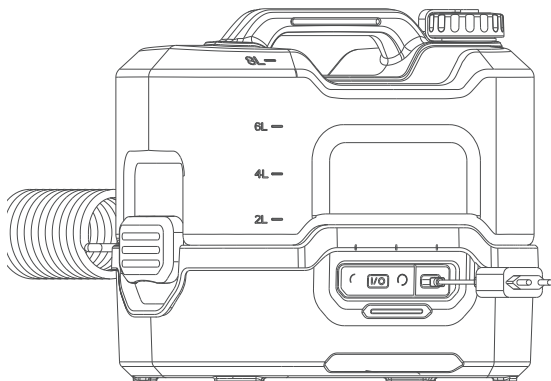


Charger status	Indicator light status
Normal charge	Green Scintillation
Battery filled	Green ON
Remove charger	OFF

 - Water supply from integrated water tank.

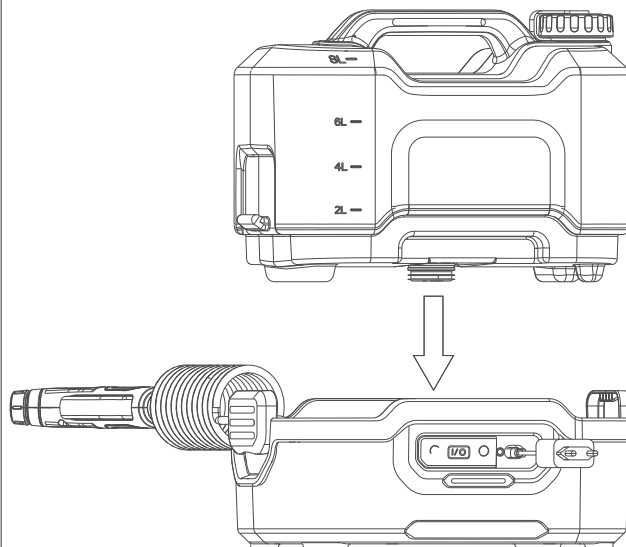

- Press the power switch I/O about 2 seconds, the appliance start up.

 Note: Green light ON, Full Battery

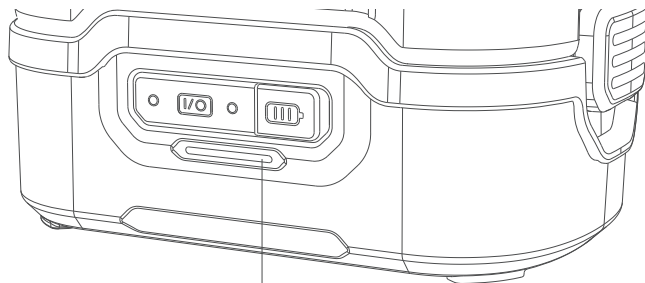

Indicator light

Red light ON	Low battery
Red light flashing	Empty Battery

- Press the lever of the trigger gun.
- Release the switch of the trigger gun; the appliance will switch off again and stop the water jet.

Note: Spray jet can leads to eye injuries and hearing damage. Do not direct the spray jet eyes or ears.

- Press the power switch I/O about 2 seconds, the motor stops running.
- Pausing operation
- Release the lever of the trigger gun.
- Battery pack is empty.
- Nozzle partially blocked
- Finish operation
- Turn off the power switch.
- Remove the tank
- Switch the appliance on.
- Actuate the lever of the trigger gun until no more water is emitted.
- Completely empty the reservoir

Attention

1. Only inject clean water into the water tank and ensure that only clean water is inhaled.
2. Impurities in the water will damage the pressure pump and its accessories.
3. Do not fill the water tank with any detergents, pesticides or other additives.
4. Do not immerse the device in water.
5. The pump is damaged due to poor operation of the equipment. If the device does not build pressure within 1 minute, switch off the device and follow the instructions in the "Troubleshooting" chapter.
6. This low-pressure cleaning machine is designed for cleaning products, including vehicles, tools, exterior walls, garden equipment, and pets.

4.Specifications

Motor Type	DC motor / 60W
Voltage	DC 12V
Rated Pressure (PSI)	72-98PSI
Rated Flow (GPM)	0.4-0.53GPM
Battery capacity	2600mAh/12V
Input(charger)	5V3A,5V1A
Charging time (5V 1A Charger)	about 5H
Charging time (5V 3A Charger)	about 2.6H
Tank Volume	8L
Hose Length	3m
Gross Weights	3.3kg
Storage Temperature	0°- 40°
Charging Temperature	4°-40°
Product Size	316*216*275mm

5.Troubleshooting

Symptom	Cause	Recommended action
The appliance refuses to start	Battery is empty Battery is protected Battery is too low	Charging battery until green light. Turn On/Off switch to check if the unit starts
Fluctuating pressure	Valves dirty, worn out or stuck Not reach required pressure	Check that hoses and connections are airtight. Make sure that the valve opener is inserted with the pin pointing upwards
The appliance pulsating	Air in inlet hose Inadequate supply of mains water Nozzle partially blocked Water filter blocked Hose kinked	Allow machine to run with open trigger until regular working pressure resumes. Make sure there is enough water in the tank. Check that the water supply corresponds to specifications required
The appliance starts, but no water comes out	No water supply Water filter blocked , Nozzle blocked	Clean the filter Clean the nozzle
Charging slowly	Use 5v/1A charger	Check if you use 5V/3A charger & original USB cable.