



Samsung PL200 SD card Replacement

This guide for the Samsung PL200 is for replacing the SD card. It is a straight forward task and no problems should be encountered.

Written By: Jacob Presnell



INTRODUCTION

Replace the SD card on your Samsung PL200 to provide more memory space as well as replacing a defective card. This is a simple replacement that requires no tools and can be completed in less than 2 minutes.

Step 1 — SD card



- Flip Samsung PL200 over to access battery/SD card compartment on the bottom. There is a sliding release button (labeled 'OPEN') that can be slid sideways to open the battery/SD card compartment.
- Slide this button in the direction that the arrow is pointing to release and open the spring loaded battery/sd compartment door.
- Once opened, the SD card should be visible.

Step 2



- Once the battery/SD card compartment is opened, simply push the SD card down to activate the spring loaded ejector.
- This will cause the SD card to raise up enough to allow you to grab it with your fingers.
- Use your fingers to remove the old SD card.

Step 3



- Insert the new SD card into the SD card slot.
- Make sure to push it down all the way until it clicks and remains flush with battery.
- Close the battery/SD card compartment.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 04:14:49 AM.