



USER MANUAL

Content

1. Announcements
2. Introduction
- 2.1 Packing Details
- 2.2 Features Overview
- 2.3 Technical Specifications
3. Quick Guidance
- 3.1 About Touch Panel
- 3.2 Switch On/Off
- 3.3 Power Save Modes and lock screen
- 3.4 Battery management and charging
- 3.5 Definition for the icons of the Functions
- 3.6 USB HOST Function
- 3.7 TF Card Storage
4. Network Access
- Network Access by Wi-Fi
5. Main Functions Introduction
- 5.1 Audio Function
- 5.2 Video Function
- 5.3 Internet Browser
- 5.4 APK Installer
- 5.5 Camera and Photograph
6. System Settings
7. iWawa Introduction
- 7.1 Security Control
- 7.2 Content and Management
- 7.3 Behavior Restriction
- 7.4 Featured Functions
8. FAQ

1. Announcements

1. Please keep the device away from moist and dust.
 2. Do not put the device in high-temperature environment, especially closed car in hot weather.
 3. Do not drop or strike the device.
 4. Do not shake the device violently, especially the LCD Screen part. Or it will cause abnormal display on the screen.
 5. Please choose proper volume when using the earphone which will be good for your ear.
 6. Please charge the device when
 - (1) The power icon shows lowest power.
 - (2) The device is turned off automatically, and when you turn on it, it is turned off automatically again.
 - (3) No response when operating the buttons.Attention: Please use the charger offered by manufacturer to charge, other charges may causes damage to the device.
Input: 100-240V ~ 50/60 Hz
Output: 5V 1500 mA
 7. Do not disconnect the device from PC when downloading, uploading or formatting, or it will cause programming errors of the device.
 8. Do not dismounting the device privately without professional guidance.
 9. Do not use alcohol, thinner or benzene-chemical to clean the surface of the device.
 10. Do not use the device in forbidden place, like airplane.
 11. Please back-up your files in device's memory always. The manufacturer is not responsible for the clear of files after damage or repair of the device.
 12. The manufacture reserves all right of device's technology and design, and will have no obligation to inform the user if there are new versions or designs been developed.
 13. The device is NOT water-proof; please keep it away from water.
- The turn on time of this device is about 20 seconds; please don't operate the device when it is turned on in 20 seconds.

1

2. Introduction

- 2.1 Packing Details
- Each unit of Tablet PC has the following items: Tablet PC device*1, charger*1, USB cable*1, OTG cable*1 and user manual*1. All items are packed in gift box.
- 2.2 Features Overview
 - ◆ CPU: A133, 1.5 GHz. With ANDROID 11 Go operation system.
 - ◆ 7" TFT touch panel LCD display, 1024*600 resolution.
 - ◆ 16GB Nand Flash Memory, support 32GB external TF card.
 - ◆ Support Medias playing: Video, audio, pictures, etc.
 - ◆ Built-in Wi-Fi.
 - ◆ Various applications are available in the ANDROID 11.
 - ◆ Support built-in microphone record function (optional).
 - ◆ Support G-sensor screen rotation function.
 - ◆ Supports multiple languages.
- 2.3 Technical Specifications

2

3.3 Power Saving Modes and lock screen.

- ◆ Press the "POWER" key shortly after starting up, system enter to power save and lock mode.
- ◆ Press the "POWER" key or tap the touch screen, system will return to bright in 1 second.
- ◆ The primary operation of the device will not stop under the power save mode, just the LCD is shut and with black screen.
- ◆ Switch Off: When the device is in the OFF mode, press and hold the "POWER" key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.
- [Note] When the device with low battery it will alarm continuous and shut automatically without charging. If the device can not start up please check if the battery is low, and try it again after the battery is charged.
- 3.4 Battery management and charging.
- 3.4.1 Charge the battery for 8-12 hours to make sure the battery is fully charged when firstly use.
- 3.4.2 Insert the micro port of the battery adaptor into charging slot on the device, and connect the other side with the power socket. Then the desktop icon of the battery keep rolling which shows it is charging, please wait until the battery is fully charged, don't disconnect the power when charging. Once the battery is fully charged, the icon on the desktop will stop rolling.

3

- [Note] In order to keep the battery working in the best condition, please pay attention as below:
- ◆ Please don't charge the power in high temperature.
 - ◆ No need to release the power for this Li- battery, you can charge the power even there is still some power in the battery, no need to wait it runs out.
 - ◆ In order to keep the battery in good condition, please make sure to charge the power once per two weeks if you don't use this device for a long time.

3.5 Definition for some icons of the Functions

Icon	Function Instruction	Icon	Function Instruction
	Back to main menu		Note when the system lock icon
	Show current power status		Set the alarm time
	The current system time		Reduce the volume
	Back		Louder the volume
	Menu		Menu for Function Block
	Google search		Adjust screen brightness
	System check		WiFi on/off
	New mail		USB Connection
Status Bar			

4

3.6 TF Card Storage

- There is a TF card slot in this device, it support reading the files in TF card. Insert the TF card into the card slot in right way, when take it out, just push the TF toward to the inside, then the slot will release the TF card, the TF card will pop out automatically, take it then.
- 3.7.1 Please insert the TF into the card slot in the right side of the device.
- 3.7.2 Don't pull out the card when operating (reading, copying), or it may cause date error.
- 3.7.3 Don't use the TF card under high temperature condition.
- 3.7.4 Keep the TF card far from the liquid and erosive materials.

4

4. Network Access

- Network Access by Wi-Fi
- 4.1.1 Turn on Wi-Fi, and Press Wi-Fi settings. The device will scans automatically for available Wi-Fi networks.
 - 4.1.2 Choose the Wi-Fi network that you want to connect to.
 - 4.1.3 Press Connect. Some network may need you input the password.
 - 4.1.4 On the Wi-Fi settings screen, press the Menu key, touch Advanced, you will get more settings for Wi-Fi.

 


5. Main Functions Introduction

- 5.1 Audio Function
- Enter the music player: In music player mode, double-click the favorite in the list to play music.
- ◆ When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player (the device supported audio file format: mp3, wav, midi, wma). The playlist as shown in the above figure.
 - ◆ If two more songs in the Music playlist area, slide up/down the touch screen to page up/down
 - ◆ Double-click the favorite in the list to play music.
 - ◆ Drag the playback progress bar to adjust audio playback progress.
- 5.2 Video Function
- ◆ Click the Video player icon to enter the video player interface, open the video files.
 - ◆ The device supported audio file format: MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP, etc.

5

- ◆ When no video files in the video player playlist, the system will automatically load the video files from the card to the video player playlist after turning on video player.
 - ◆ Drag the playback progress bar to adjust video playback progress.
 - ◆ 5.3 Camera and Photograph
- This machine is equipment with camera in the front, you can take photograph and record video clips.

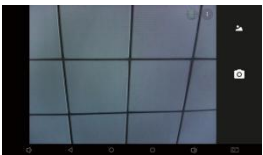

- ◆ Click on the applications tab to display all applications, then click "take photos" or "camera shooting" into the shooting model.
- ◆ Click on button to start or end shooting.
- ◆ The photographs or video can be previewed in the preview window.
- ◆ If you want play the video you shooted, turn on the video player and choose which video you want to play.
- ◆ If you want to see the photograph you taken, turn into the photo model and choose which pictures you want to see.

6. System Settings

- Click setting icon to enter system settings, then you can change wireless & networks, sound, display, location & security, Applications, accounts & sync, Privacy, Storage, language & keyboard, voice input & output, and date & time.
- 6.1 Wireless & Networks Setting. See item 4.
- 6.2 Sound Setting. You can adjust Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds, and Haptic feedback.

 
6

- 6.3 Display Setting. You can adjust Brightness, Auto-rotate screen, Animation, Screen timeout.
- 6.4 Location & Security Setting. In this Setting, you can set up screen lock and device administrators, as well as TF card password.
- 6.5 Applications Setting. You can manage applications here, and check storage & battery usage.
- Notice: If you want to install applications which are not downloaded from Google Android Market, you should turn on Unknown sources in advance.
- 6.6 Accounts & sync Setting. In this setting, you can manage accounts in the device.
- 6.7 Privacy Setting. In this setting, you can back up data, and reset factory default.
- 6.8 Storage Setting. In this setting, you can check storage use and Mount & Erase TF cards.
- Notice: Before you fetch out TF Card (if you have inserted TF card), please Unmount TF card first, in case that some applications will arise problems.
- 6.9 Language & Keyboard Setting. In this setting, you can change the language of system, and choose keyboard inputs.
- Notice: If you have installed an input and you want to use it, please remember to turn on it in this setting (All inputs could be turned on here). Long Press the blank where you want to type, there will be popup to choose inputs.
- 6.10 Date & Time Setting. In this setting, you can adjust date and time.
- 6.11 About device. Check device information.


7. iWawa Introduction

- 7.1 Security Control
- Separating contents which are not suitable for children and protecting kids' physical and psychological growth, parents can filter the contents which need to be blocked.
1. Applications Filter
- Select appropriate applications for kids, and block inappropriate contents like bloody and violent content. Only selected applications will be showed up in children's desktop.

7

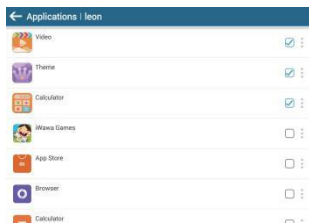

 2. Websites Filtering
- When children use the Internet browser, it will automatically block the websites without parental permission.

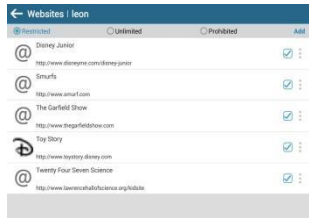


- 7.2 Content and Management
- Provide children with rich applications resources, and use tools to manage applications, video, music and other content.

1. Applications Recommendation
- Recommend with educational games and other applications which are suitable for kids. Recommended content is regularly updated and can be downloaded for free.


8

 2. Multimedia Management
- Children can open "Video" application in the children desktop and see all good movies selected by parents; similarly, children can open the "Gallery" and "Music" application and see pictures and listen to songs which are previously prepared.

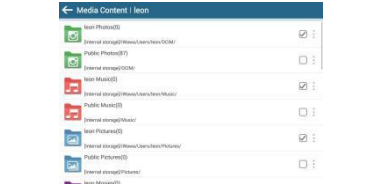

- 7.3 Behavior Restrictions
- Restrict kids' behavior by iWawa, kids can not disturb the parents' desktop any more, unexpected consumption and games addiction could be effectively avoided.

 
1. Child Lock
- Without permission of parents, children will not be able to exit the child desktop. Not only ensure that kids stay in a safe environment, but also ensure that kids do not have access to parents' desktop applications.

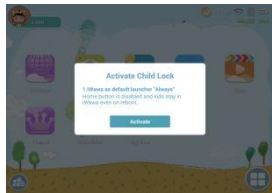

9

2. Consumption Restraint
- All purchases require parents' confirmation by entering the password. Prevent kids' unexpected consumption from clicking wrong buttons.

 1. Time Limit
- Parents can set a timetable for kids to use tablet and have a break time. It will automatically be transferred to break time when time is up, and tablet is temporarily unusable. It is flexible to protect the kids' growing environment.



2. Behavior Report
- The system automatically produces detailed reports of applications usage which record kids' behavior on using various applications and the frequency. In this way, parents can easily understand kids' habits and preferences.

10



- 7.4 Featured Functions
- Provide more practical and convenient features for children and parents.
1. Personal Style
- Multiple beautiful themes, kids can create their own beautiful space.



11

2. Multiple Accounts
- A tablet can set up more than one account. Each child can have their own separate desktop.



3. Prolong Time Quickly
- Parents can enter a password to prolong 30 minutes for kids, and deal with some unexpected conditions easily.



12

4. Karaoke
- Placing music video files to the specific path of storage, the system automatically recognize the files which makes you see them in the menu interface, click to enjoy music video. MKV video formats files are available to support switching freely between the original and Karaoke. Karaoke it is! Follow the video and subtitles to sing along.

8. FAQ

1. How can I change languages if I mistakenly choose an unknown language?
- Find setting icon in Menu Page to enter Settings.
 - Then, choose icon to enter language & keyboard setting, the first option is language setting.
2. I already installed some applications, but I can not find them now, why?
- In some conditions, by default, some applications are installed in external TF card, so if you fetched out the TF card from the device, you will not see these applications.
3. The machine can not be turned on.
- Check the battery and charge it if there is no power.
 - Connect the machine to Adapter.
 - Contact the seller if the machine still can not be turned on after charged.
1. There is no voice in the earphone.
- Check if the device is in Mute mode.
 - Check the volume setting in case it is 0.
 - Check the connection of earphone.
2. Why I can not install applications?
- Please check Settings -> Applications, make sure Unknown sources is chosen.

13

- FCC Statement
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.