


Designed and manufactured by **Benidub Audio Electronics, SLU**



WWW.BENIDUB.COM

TIME

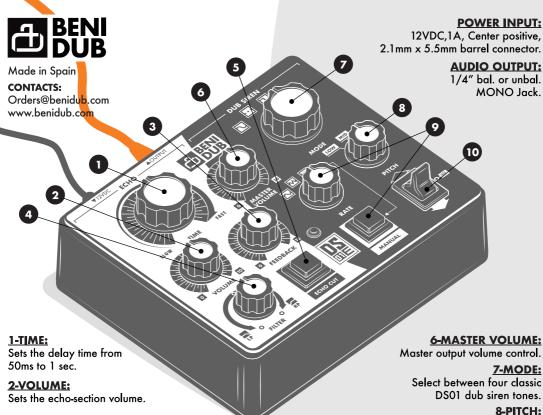

3-FEEDBACK:

Sets the repetition intensity ranging from one single repetition to continuous oscillation.

4-FILTER:

Combined HP-LP resonant filter to shape the echo tone.

5-ECHO CUT:

Temporary button that mutes the echo output. It can be used to rythmically cut the echo loop.

6-MASTER VOLUME:

Master output volume control.

7-MODE:

Select between four classic DS01 dub siren tones.

8-PITCH:

Select between three preset audio oscillator base frequencies.

9-RATE/MANUAL:

Modulation rate selector. In manual mode the push-button triggers the modulation.

10-TRIGGER:

Push upwards to trigger the siren temporarily or downwards for a continuous tone.