

# APsystems Microinverter User manual

## APsystems DS3 series DS3-L, DS3, and DS3-H Microinverters

(For EMEA)



ALTENERGY POWER SYSTEM Inc.  
emea.APsistemas.com

### APsystems

Karspeldreef 8, 1101 CJ, Amsterdam, The Netherlands  
EMAIL: info.emea@APsystems.com

### APsystems

22 Avenue Lionel Terray 69330 Jonage France  
EMAIL: info.emea@APsystems.com

© All Rights Reserved



Please scan this QR code to have  
access to our APPs and Products  
information

# Table of Contents

|                                                                                    |           |
|------------------------------------------------------------------------------------|-----------|
| <b>1. Important Safety Instructions .....</b>                                      | <b>2</b>  |
| 1.1 Safety Instructions .....                                                      | 2         |
| 1.2 Radio interference statement .....                                             | 3         |
| 1.3 Symbols in lieu of words .....                                                 | 4         |
| <b>2. APsystems Microinverter System Introduction .....</b>                        | <b>5</b>  |
| <b>3. APsystems Microinverter DS3 series Introduction .....</b>                    | <b>7</b>  |
| <b>4. APsystems Microinverter System Installation .....</b>                        | <b>8</b>  |
| 4.1 Additional accessories supplied by APsystems .....                             | 8         |
| 4.2 Other required accessories not supplied by APsystems .....                     | 8         |
| 4.3 Installation procedures .....                                                  | 9         |
| 4.3.1 Step 1 - Verify that the grid voltage matches the microinverter rating ..... | 9         |
| 4.3.2 Step 2 – Y3 AC bus cable distribution .....                                  | 9         |
| 4.3.3 Step 3 - Attaching the APsystems microinverters to the racking .....         | 9         |
| 4.3.4 Step 4 - Grounding the system .....                                          | 10        |
| 4.3.5 Step 5 - Connecting the APsystems microinverter to the AC bus cable .....    | 10        |
| 4.3.6 Step 6 - Installing a bus cable end cap at the end of the AC bus cable ..... | 11        |
| 4.3.7 Step 7 - Connecting APsystems microinverters to the PV modules .....         | 12        |
| 4.3.8 Step 8 - Connecting APsystems microinverters to the grid .....               | 13        |
| 4.3.9 Step 9 - AC extension cable .....                                            | 13        |
| 4.3.10 Step 10 - Completing the APsystems installation map .....                   | 14        |
| 4.3.11 Step 11 - Warning notice .....                                              | 14        |
| <b>5. APsystems microinverter system operating instructions .....</b>              | <b>15</b> |
| <b>6. Troubleshooting .....</b>                                                    | <b>16</b> |
| 6.1 Status Indications and Error Reporting .....                                   | 16        |
| 6.1.1 Start up LED .....                                                           | 16        |
| 6.1.2 Operation LED .....                                                          | 16        |
| 6.1.3 GFDI Error .....                                                             | 16        |
| 6.2 ECU_APP .....                                                                  | 16        |
| 6.3 Installer EMA (web portal or EMA Manager APP) .....                            | 16        |
| 6.4 Trouble Shooting Guide .....                                                   | 16        |
| 6.5 APsystems Technical Support .....                                              | 17        |
| 6.6 Maintenance .....                                                              | 17        |
| <b>7. Replace a microinverter .....</b>                                            | <b>18</b> |
| <b>8. Technical Data .....</b>                                                     | <b>19</b> |
| 8.1 DS3 series Microinverter Datasheet .....                                       | 20        |
| <b>9. DS3 series - Wiring Diagram .....</b>                                        | <b>21</b> |
| 9.1 Sample Wiring Diagram - Single Phase .....                                     | 21        |
| <b>10. DS3 series Accessory .....</b>                                              | <b>22</b> |
| 10.1 Dimensions .....                                                              | 22        |
| 10.2 Wiring Diagram .....                                                          | 23        |
| <b>11. APsystems Microinverter Installation Map .....</b>                          | <b>24</b> |








































## 9. DS3 series - Wiring Diagram


### 9.1 Sample Wiring Diagram - Single Phase

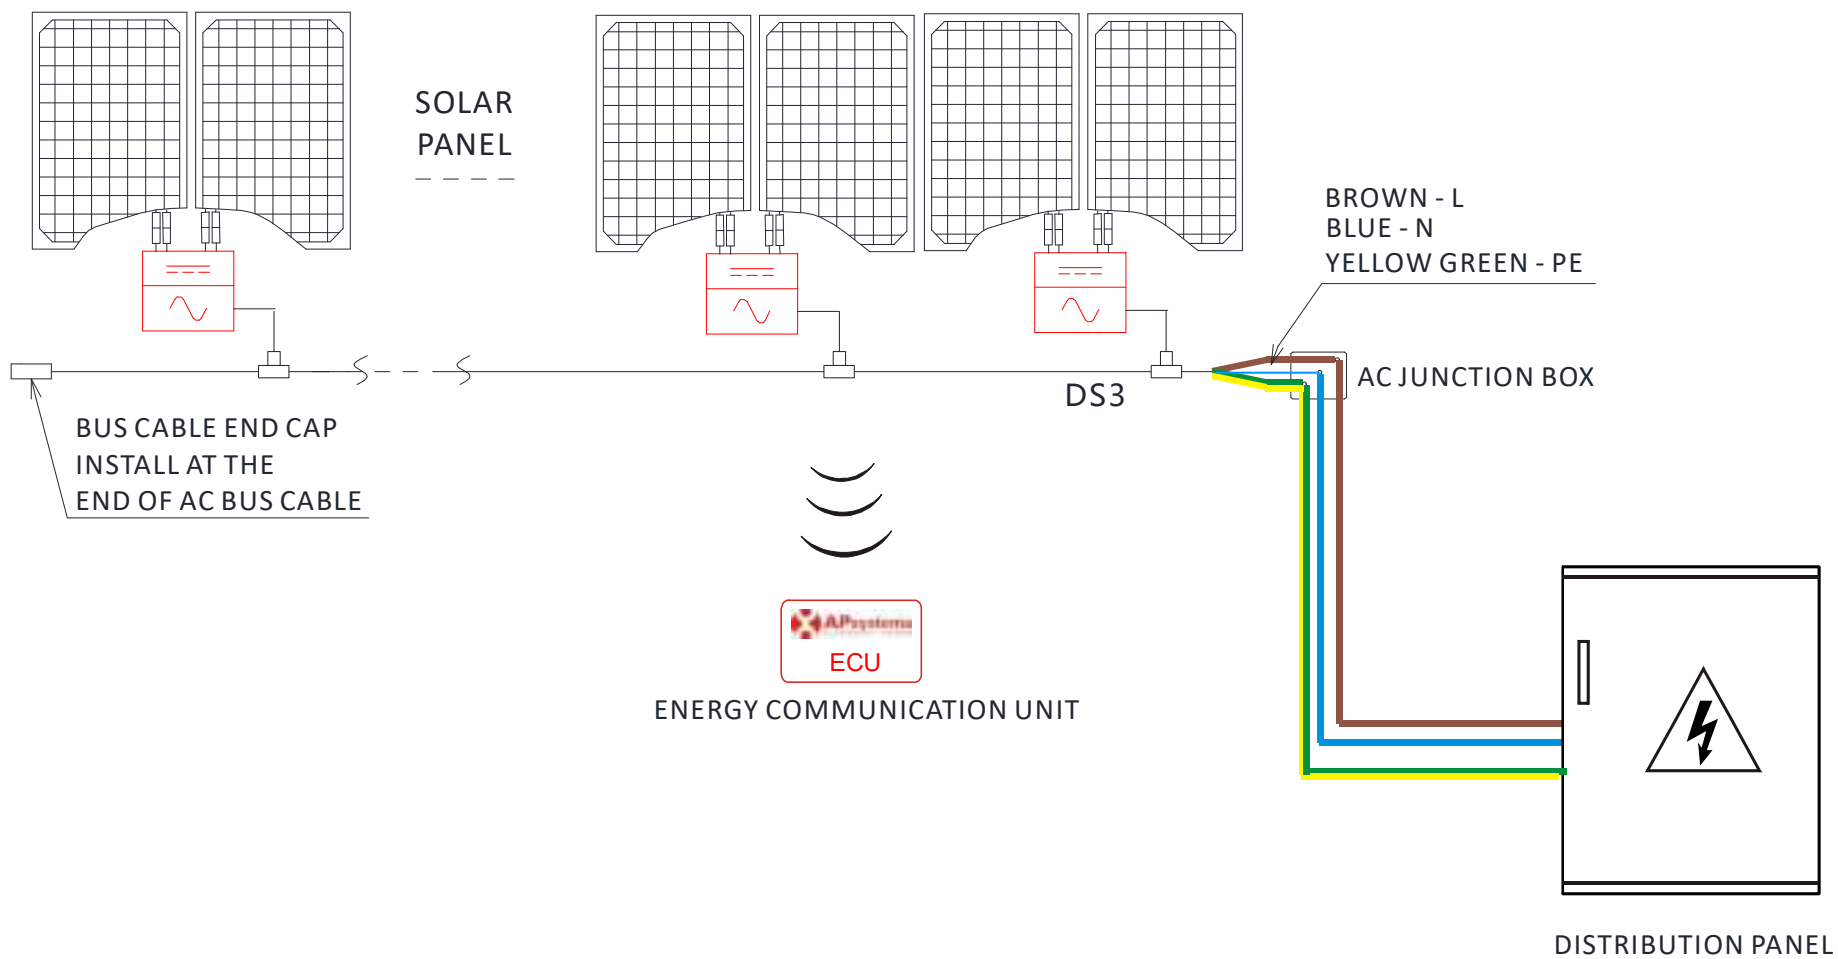


## 10. DS3 series Accessory

### 10.1 Dimensions

DS3/DS3-H Dimensions

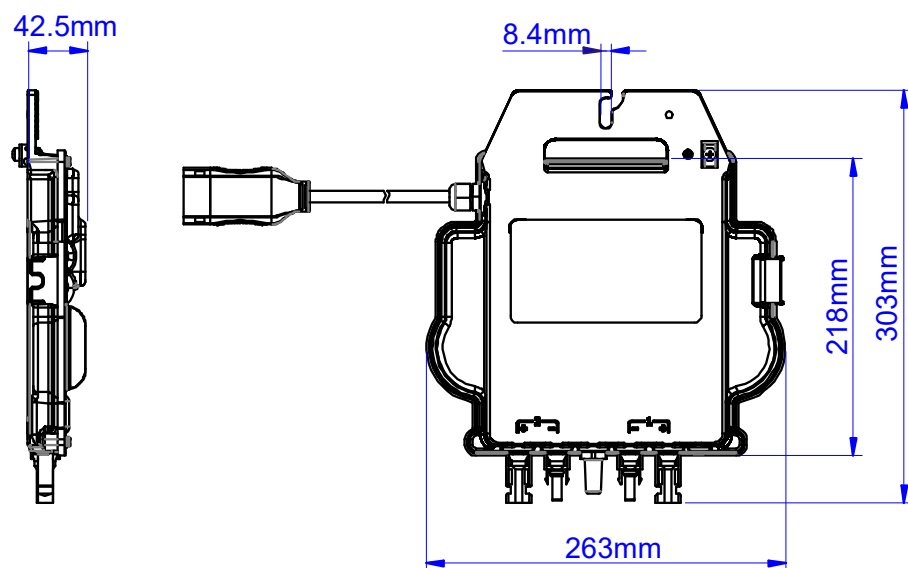


DS3-L/DS3-M/DS3-S Dimensions

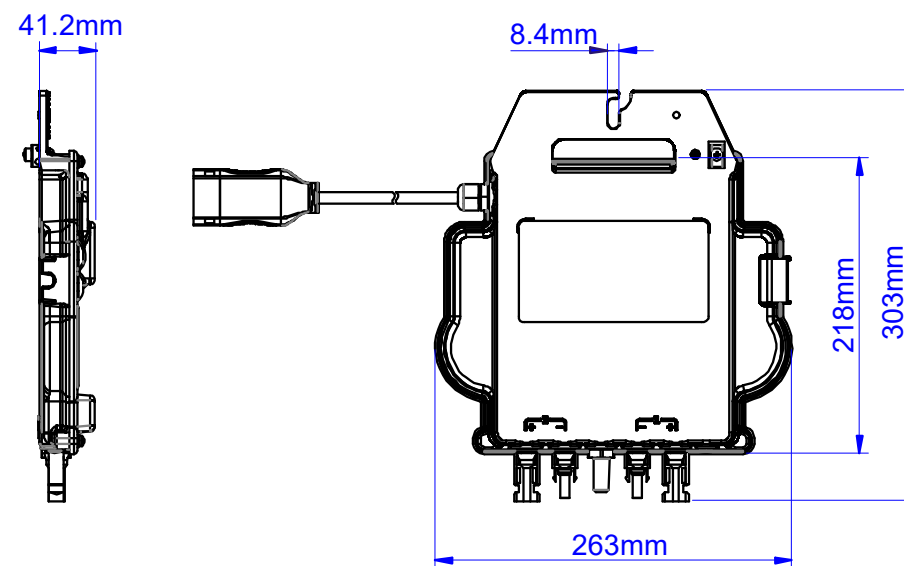

## 10. DS3 series Accessory

### 10.2 Wiring Diagram

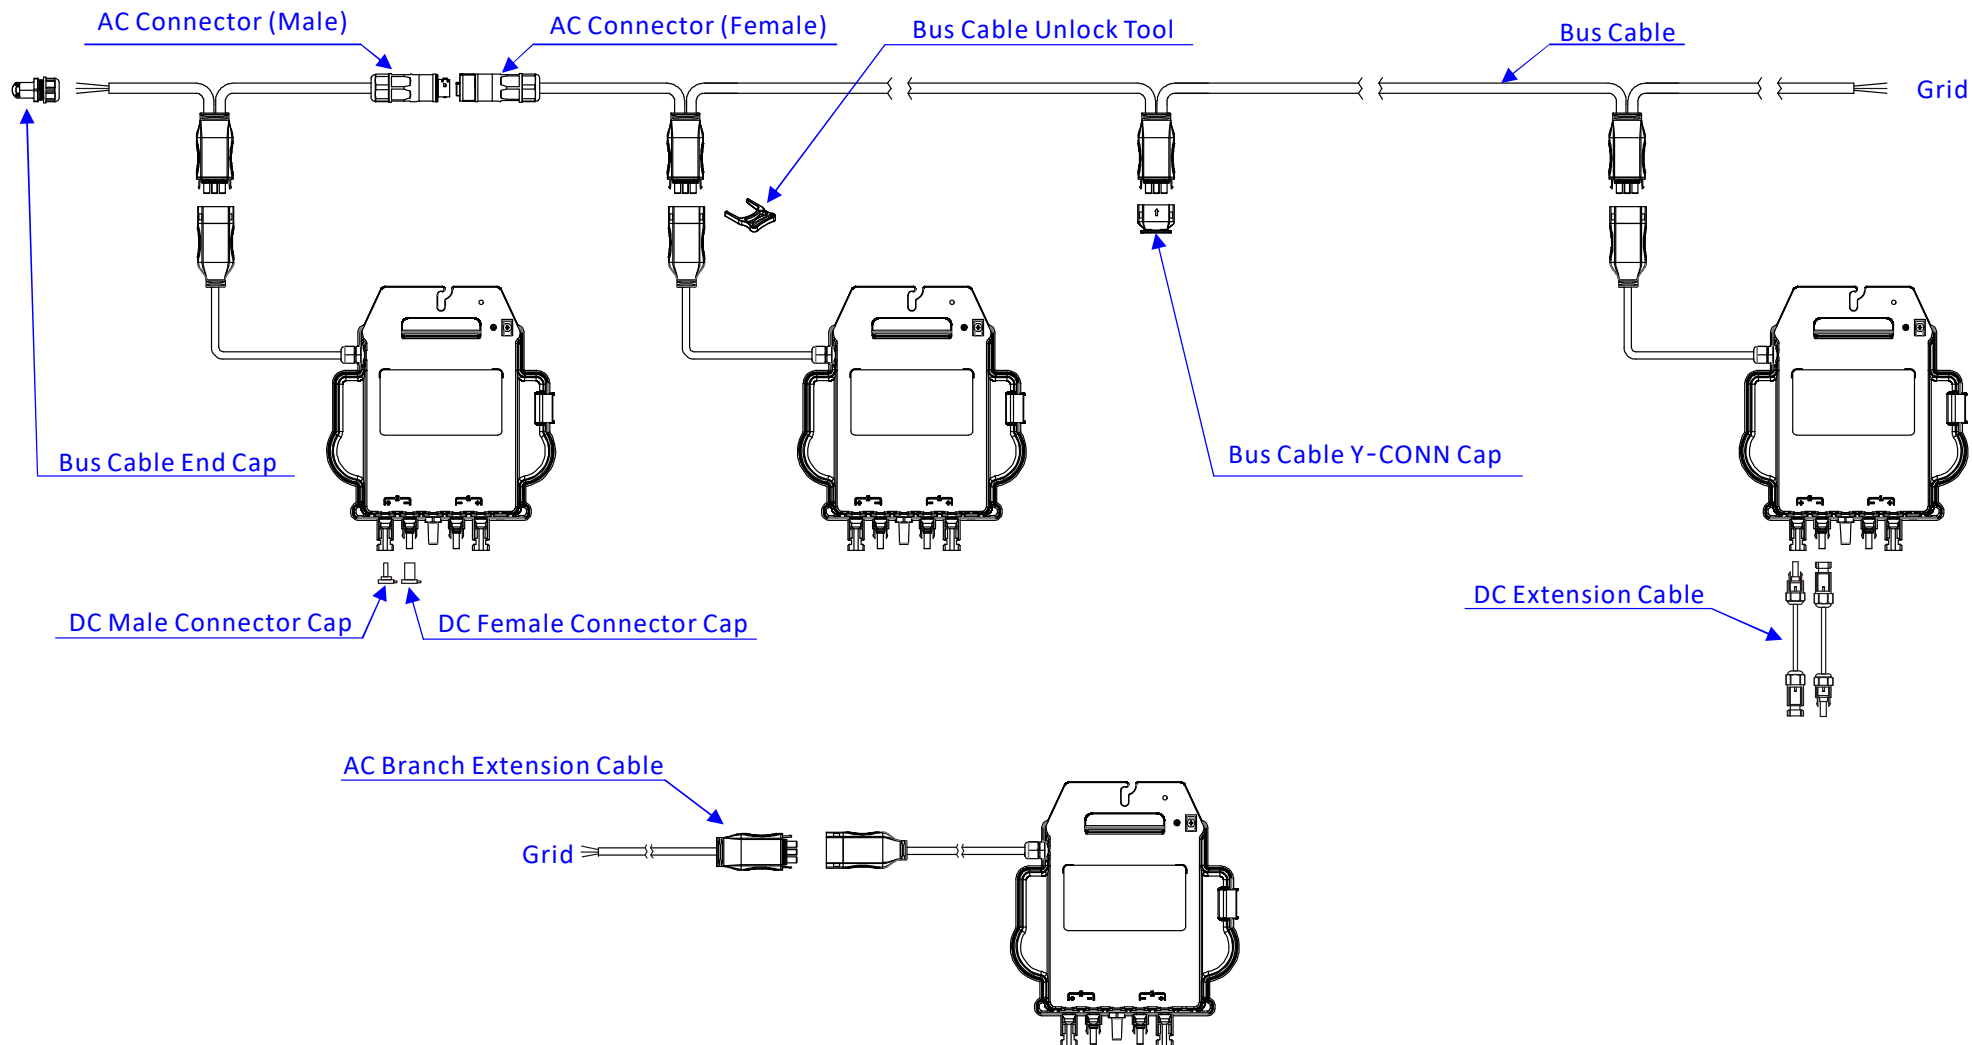

## 11.APsystems Microinverter Installation Map

The APsystems Installation Map is a diagram of the physical location of each microinverter in your PV installation. Each APsystems microinverter has two serial number labels. Peel the one label and affix it to the respective location on the APsystems installation map.

Installation Map Template

|                   |          |                            |          |             |          |                         |                                                                                     |
|-------------------|----------|----------------------------|----------|-------------|----------|-------------------------|-------------------------------------------------------------------------------------|
| <b>Installer:</b> |          | <b>PV module type:</b>     |          | <b>Qty:</b> |          | <b>Sheet ___ of ___</b> |  |
| <b>Owner:</b>     |          | <b>Microinverter type:</b> |          | <b>Qty:</b> |          |                         |                                                                                     |
|                   | Column 1 | Column 2                   | Column 3 | Column 4    | Column 5 | Column 6                | Column 7                                                                            |
| Row 1             |          |                            |          |             |          |                         |                                                                                     |
| Row 2             |          |                            |          |             |          |                         |                                                                                     |
| Row 3             |          |                            |          |             |          |                         |                                                                                     |
| Row 4             |          |                            |          |             |          |                         |                                                                                     |
| Row 5             |          |                            |          |             |          |                         |                                                                                     |
| Row 6             |          |                            |          |             |          |                         |                                                                                     |
| Row 7             |          |                            |          |             |          |                         |                                                                                     |
| Row 8             |          |                            |          |             |          |                         |                                                                                     |
| Row 9             |          |                            |          |             |          |                         |                                                                                     |
| Row 10            |          |                            |          |             |          |                         |                                                                                     |