


 





<div><div>WELLMOON</div><div></div></div>	<div><div>Preface</div><div>Dear users,thank you for purchasing WELLMOON products. In order for you to further understand the product, please read this manual carefully before use. Wish you a happy experience.</div><div><div>Product Details</div><div><div><div><div><div></div><div>Charging Contacts</div></div><div><div><div></div><div>Indicator Light</div></div><div><div></div><div>MFB</div></div><div><div></div><div>MIC</div></div></div></div></div></div></div></div>	<div><div>First use</div><div>Before the first use, please make sure that the two headphones and the charging compartment of the power is full, when the power is insufficient, please use the charging cable that comes with the product for charging, and choose the charging equipment produced by the regular manufacturers through the national CCC certification. If the product has not been used for more than 2 weeks, it is recommended to charge the product before use.</div><div><div>On/Off</div><div>Auto Power On: Open the cover of the charging compartment, remove the headsetand turn it on automatically. Auto power off: Put the headset back into the charging compartment, the headset will disconnect from the Bluetooth connection and power off automatically.</div><div><div>Bluetooth pairing</div><div>The headphones will enter the pairing state when powered on. The Bluetooth device searches for the headphones pairing name “MoonW1” and clicks to complete the connection pairing. (If you cannot find Bluetooth, turn it off and turn it on again.) Connection is successful: there is a voice prompt tone. Automatic connect: After the first connection is successful, the last device is connected by default</div></div></div></div>	<div><div>Reset</div><div>When the left and right headphones are not interconnected or the devices cannot be paired, you can reset them as follows: ①Delete the pairing information of the “MoonW1” headset from the Bluetooth list on your cell phone ②When the headset is turned on and not connected, reset the headset by clicking the left/right ear function keys 4 times. The headset will automatically turn off and clear the pairing ③After resetting the headset, the pairing information recorded by the headset has been cleared. Please press “Bluetooth Pairing” to reconnect the headset. procedure to reconnect and use <div>Manual on/off</div><div>Under the off state, long press the MFB for 3 seconds, the headset will turn on Under the power on state, long press the MFB for 5 seconds, the headset will disconnect and turn off.</div><div><div>Timeout without connection</div><div>When the headset is in standby pairing status and does not successfully connect to the device within 5 minutes, it will automatically turn off</div><div><div>Disconnect</div><div>After successful connection, if you turn off the Bluetooth of your cell phone or exceed the effective connection distance of Bluetooth (barrier-free environment 10m), then Bluetooth will disconnect, and if you don't connect with the device within 5 minutes, it will be shut down automatically.</div></div></div></div></div>	<div><div>Control method</div><div><div><div>L</div><div></div></div><div><div>R</div><div></div></div></div><div><div>Music Play</div><div>Play/pause music: Double-click MFB Previous song: Triple-click Left MFB Next song: Triple-click right MFB Volume -:click once Left MFB Volume +:click once right MFB</div><div><div>Call Management</div><div>Answer/hang up: Double-click MFB Reject call: Long press MFB 2 seconds.</div><div><div>Music/Game Mode Switching</div><div>Long press the right MFB for 2 seconds</div><div><div>Voice Control (SIRI)</div><div>Long press the MFB 2 seconds (Cell phone must support this function)</div></div></div></div></div></div>
--	--	--	--	--

<div><div>Headphone Battery</div><div><div>Headphone Battery Level Display</div><div>The status bar of the cell phone can display the Headphone battery level information(requires cell phone to support this feature)</div><div><div>Headphone charging status</div><div>Headphone charging process, the indicator light will have charging tips, full indicator light off.</div></div><div><div>Headphone low battery reminder</div><div>When the headset is in a low battery state, the headset will have a voice prompt to indicate that the battery is insufficient, please put the headset into the charging compartment in time to charge.</div></div></div><div><div>Charging case power and charging</div><div><div>Charging in the charging case</div><div>It is recommended to use a standard charger and the included charging cable to Charge the charging case.</div><div><div>Charging case Low Battery reminder</div><div>When the battery level of the charging compartment is too low,the indicator light will keep flashing, please charge the charging case in time.</div></div></div></div></div>	<div><div>Indicator status</div><div><div>Headphone Indicator</div><div>①Power on: white light on ②Power Off: White light is on and then off ③Not paired: white indicator light flashes ④Waiting for pairing: the white indicator light of the main Headphone blinks alternately, and the indicator light of the secondary Headphone goes out. ⑤Successful pairing: Indicator light off Music status: Indicator light off ⑦Call status: indicator light off ⑧Game mode: the white indicator light is a breathing light effect ⑨Low battery: white indicator light flashes, voice prompts low battery ⑩Charging status: white indicator light is always on ①Charging complete: the indicator light is off</div></div><div><div>Charging case indicator</div><div>①Charging: the screen percentage flashes ②Charging is complete: screen percentage “100” is always on ③Low battery: screen percentage flashes to off ④Charging the headset: the screen percentage is always on. ⑤Headset fully charged: screen off</div></div></div>	<div><div>Frequently Asked Questions</div><div>① The Headphone cannot be paired with the cell phone? Check whether the Headphone is in the state of pairing, and check the Bluetooth search function of the cell phone ②The Headphone can not be turned on? Please check whether the Headphone battery is sufficient, and charge for 30 minutes before turning on. ③Can I replace the battery of the Headphone? No, the Headphone uses non-removable batteries ④Can I use the Headphone while driving? Yes, you can use this Headphone while driving(Please observe ocal traffic regulations) ⑤Is the Headphone disconnected with the cell phone? The effective distance of this Headphone is 10 meters indoors, if the distance between the cell phone and the Headphone is more than 10 meters or there are multiple obstacles, the Headphone and the cell phone will be disconnected, please keep within the effective distance to use this Headphone ⑥Do I hear a different sound when I connect the Headphone to my computer or cell phone? Since Bluetooth is a wireless technology, it is sensitive to the objects between the Headphone and the connected device,please check whether there is metal or other objects that affect the connection within the connection range ⑦Can I use the Headphone to control applications on my cell phone when it is connected? The software settings of device applications may vary, so the functions of individual applications may not be supported by the headset</div></div>	<div><div>Note</div><div>1.Do not disassemble, repair or modify the headphone for any reason, as doing so may result in fire, electronic breakdown or even complete damage to the product. 2.Do not expose the product to temperatures that are too low or too high (below 0℃ or above 45℃). 3. Do not use aggressive chemicals, cleaning agents, or strong detergents to clean the device or its accessories. 4. Do not listen to music at high volume for long periods of time as this may cause hearing damage, and adjust the volume to an appropriate level when using the device. 5. Do not replace the batteries yourself, as the device is equipped with a non-removable internal battery to avoid damage to the battery or the device. Replacement is not recommended. 6.Do not leave your magnetic stripe card (e.g. bank card, phone card, etc.) in contact with the device for a long period of time, as this may result in damage to the magnetic stripe card by the magnetic field. 7.Before cleaning and maintenance, stop using the device, close all applications, and disconnect all connections or cables from other devices 8.Do not place the appliance near sources of heat or naked flames, such as electric heaters, microwaves, ovens, hot water heaters, candles on stoves, or other places where high temperatures may occur.</div></div>	<div><div>What's in the box?</div><div><div><div></div><div>WellMoon headphone</div></div><div><div></div><div>Charging Case</div></div><div><div></div><div>Type-C Cable</div></div><div><div></div><div>User Manua</div></div></div></div>
--	---	---	--	--

<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">— Reorient or relocate the receiving antenna.— Increase the separation between the equipment and receiver.— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.— Consult the dealer or an experienced radio/TV technician for help. <p>The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction</p>				
--	--	--	--	--

--	--	--	--	--