



Karaoke Machine

Instruction Manual



Please read the user manual carefully before using the machine



VS-0808
Karaoke Machine



Important Safety Warning

To ensure personal security and property, please keep in mind the points as below

1. Please use original charging cord for charging. The charging voltage requires 90V to 240V.
2. Do not use the machine while charging. Do not keep charging for a long time, especially no one at home, you should plug off the power adapter and turn off the machine first, or it will cause leakage of electricity, even a fire to make a big loss.
3. The charging cord cannot be squeezed, pulled, bent, knotted, hung heavy objects, or tampered to prevent the insulation layer of the cord from being damaged and causing electric shock.
4. To reduce the risk of fire or electric shock, do not expose the machine to rain or moisture. Do not place objects filled with liquids, such as vases, on the machine.
5. The device is equipped with batteries, so do not expose it to the scorching sun for a long time. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not block the heat radiation holes, otherwise, it will cause poor heat dissipation of the machine and affect the service life of the machine.
7. When encountering any issues with the battery or charging, do not disassemble the machine to change the battery even though you are experienced, please contact our customer service for a replacement.

Contents

Package List ----- 1

Charging Instructions ----- 2

Technical Specifications ----- 3

Description of Remote Control ----- 4

Description of Panel Function ----- 5

Main Features Instructions ----- 6

Microphone Instructions ----- 7

Trouble Shooting ----- 8

Warranty ----- 9

Package List

Karaoke Machine*1

Wireless Microphone*2 (Each requires 2 AA batteries, not included)

Remote Control*1 (Requires 2 AAA batteries, not included)

Charging Cord*1

3.5mm Audio Cable*1

3.5mm to RCA Cable*1

User Manual*1

Charging Instructions

Please use the charging cord included for charging.

The charging time is generally 5 to 8 hours. After fully charged, please plug off the cord, or over charging will damage the battery.

There is an icon on the screen to show battery power. When in low power, the icon will keep flashing until it is out of power. At this moment, please charge the machine asap.

Note:

To prolong the battery life, there are 4 points as below you need to know.

1. If the machine is out of power, please charge it within 48 hours.
2. Do not use the machine while charging.
3. After fully charged, plug off the charging cord asap. It is very important to protect your battery, safety and property.
4. The machine must be kept with enough power anytime. The battery life will be reduced, if you seldom use the machine or don't use it for a long time, and keep it without any power.

Karaoke Machine

Model: VS-0808

Peak Power: 250W

Sensitivity: $500 \pm 30 \text{mV}$

S/N Ratio: $\geq 65 \text{dB}$

Requency Response: 26Hz~18kHz

Input Voltage: DC 15V

Microphone

Requency: 261.5-268.5M

Operating Distance: 98FT (without any interference)

S/N Ratio: $> 98 \text{dB}$

T.H.D.: $< 0.5\%$

Microphone Input Sensitivity: 74DB SPL@1KHz

RF Sensitivity: 5dB UV

Working Temperature: $-15 \sim 85^{\circ}\text{C}$



Description of Remote Control

Repeat

Repeat song in USB or TF card

Numeric Keypad

Select songs in USB or TF card

Light Control

Turn on/off the LED lights

Previous

Go to previous song or FM channel

Play/Pause

Play or pause the music

Recording

Record your voice and the music

Mute

Mute audio

INPUT

Switch between Line and Bluetooth mode

Volume Up

Increase the volume

Volume Down

Decrease the volume

NEXT

Go to next song or FM channel

EQ

Choose from 5 EQ modes

REP

Repeat song in USB or TF card



Description of Panel Function



1. TF Card Slot
2. Bass Control **(for music only)**
3. USB Port
4. Treble Control **(for music only)**
5. Audio Output
6. Audio Input
7. Mic Volume Control
8. Musical Instrument Input (for most electronic musical instrument: piano/electronic guitar/ electronic piano/electronic drum and so on)
9. Echo Control **(for mic only)**
10. The 1st Wired Mic Input
11. Musical Instrument Volume Control
12. The 2nd Wired Mic Input
13. Recording/Recording Playback

14. Previous Song or FM Channel

15. Play/Pause

16. Next Song or FM Channel

17. Mode Switch

18. Light Control

19. Microphone Priority

20. Repeat Songs

21. Main Volume Control

22. LED Digital Display



1. Power Button

2. Charging Port

3. Light Button

4. External 12V DC Input **(for storage battery)**

Bluetooth Mode

Press "M" till the screen shows "BLUE". Turn on Bluetooth of your device and start to search. Then click the named "VS-0808" to pair. If it fails to pair, please reboot the machine or your device, and try it again. The working range for bluetooth is 32FT without any interference.

Note: The machine does not have a screen to show lyrics. Just connect the speaker to an ipad/computer/tv/phone and follow along with the lyrics on your ipad/computer/tv/phone while the sound plays through the speaker.

Line Mode

Press "M" till the screen shows "LINE". Then you can connect to your phone via 3.5mm audio cable or a TV via 3.5mm to RCA cable. This mode is mainly used for those devices that don't have Bluetooth. Besides, you can plug into a USB/TF card to record your voice or play the music in this mode.

Recording

Switch the mode to "LINE", plug into a USB/TF card and press "REC" to start recording. When first recording, a file folder named with "RECORD" is created in the card. All your recording files will be named with REC0001, REC0002, REC0003 in order and saved in this folder.

Note:

1. Recording is only available under "LINE" mode, so Bluetooth will not work while recording.
2. The machine only accepts the music with MP3, WAV and WMV formats.
3. The type of USB or TF card must be FAT and the largest capacity is no more than 32GB.
4. Both USB and TF card cannot be plugged into simultaneously.

Microphone Priority


When playing music and singing into the mic, the music goes mute and you can only hear vocal with mic. In this case, press the 'MIC PRIORITY' button if you'd like sing along with music, otherwise music stops when you use the mic.

Microphone Instructions

- A. Digital Display
- B. Power Button
- C. Tail Tube

Battery Installation

1. Unscrew the tail tube(C) of mic.
 2. Put 2 AA batteries(not included) into "C".
- Please make sure batteries are put in a correct way(both positive and negative poles).
3. Slide the power button(B) to turn on the mic.

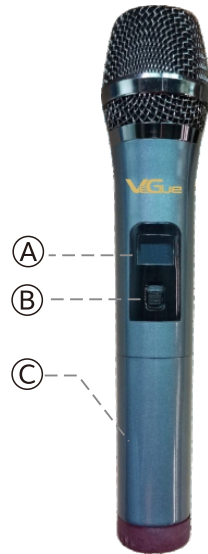

Trouble Shooting

We hope all your problems will be solved here! If the issue is still the same through the trouble shooting, please feel free to contact our customer service.

Problem	Possible Cause	Solution
There is no sound from microphone	1. Battery is under lower power. 2. Microphone fails to pair with the machine.	Try the fresh batteries.
The volume of the mic or the machine is low	1. Battery is under lower power. 2. Forgot to adjust the volume.	1. Try the fresh batteries. 2. Turn up the volume(both panel and remote).
Hissing sound from the mic or the machine	1. Volume is too high. 2. The mic is too close to the machine.	1. Turn down the volume(both panel and remote). 2. Have the mic get far away from the machine, especially not aim the top the mic to the machine.
Bluetooth stopped working	1. Signal is bad or lose 2. Bluetooth has been connected by other device.	1. Reboot both the machine and your device. 2. To get the better signal here. 3. The machine only connects to one device once. You need to delete the old device from Bluetooth and pair with the new one.
The mic or the machine sounds so staticy and muffled	—	The static noise is due to different reasons. Hope you contact our customer service and we will offer you the best solution.
When recording, the Bluetooth fails to connect	—	Recording is only available under "LINE" mode, so Bluetooth will not work while recording.

If you encounter any other problems, like parts missing or broken, not the new product and so on, please feel free to contact our customer service for a replacement.

Warranty

VeGue provides 2 years of after-sales service, free replacement to products that are NOT damaged resulting from accident, alteration, misuse, negligence, or abuse. If exceeding 30 days of Amazon return policy, you can still contact us through the email. We will serve you with full sincerity!

Email: support@veguetech.com