





J USING G	OIDE					
					200	
1		(2		3		
Connect the to the power	bank.	into the inn	·	Long press mode butto turn on.		
	•		Г	1	1	
Temperature	&	Green Light	Blue Light	Red Light		
Level	Power On/Off	LOW	MEDIUM	HIGH		
	•	•	•	•	•	

	CLEANING INSTRUCTIONS						
	Prior to cleaning, always disconnect the Power Bank from the heating pad						
	and remove it from the heating pad's pocket.						
0)	Always keep the Power Bank away from water or other liquids, as this may						
cause damage. To clean the Power Bank, use a dry, lint-free cloth. Do							
	use any chemical or abrasive cleaning agents.						
÷	NOTICE:						
ing/ to	•Supported to use wet towel to wipe the heating pad surface.						
	•Not supported to wash the heating pad.						
	TROUBLE SHOOTING						
	Q1.Why the heating pad can not be turned on?						

	Q2: Why is the heating pad not hot enough?	SAFETY INSTRUCTIONS & WARNINGS
t	•Cause: The use time is not long enough.	Signs and symbols
/	•Solution: It's recommended to use it continuously for more than 5mins before judging if the temperature meets the needs.	READ AND UNDERSTAND THIS ENTIRE MANUAL INCLUDING SECTION AND ALL INSTRUCTIONS AND WARNINGS COMP
	•Cause: Everyone's tolerance to temperature is different. •Solution: In order to prevent low temperature burns, we have limited the highest temperature.	CAREFULLY BEFORE USING THIS PRODUCT. FOLLOW ALL S. INSTRUCTIONS AND WARNINGS TO AVOID HAZARDOUS SI TO MAKE CORRECT USE OF THIS PRODUCT.

d the	INSTRUCTIONS AND WARNINGS TO AVOID HAZARDOUS SITUATIONS AND TO MAKE CORRECT USE OF THIS PRODUCT.				
		Read all instructions before use			
V.		Do not bleach			
l an		Keep away from sharp objects			
e?		Do not tumble dry			
nction.		Do not use when folded or bunched up			
	×	Do not iron			
		Keep away from children under three years of age			
		6			

READ AND UNDERSTAND THIS ENTIRE MANUAL INCLUDING THE SAFETY

	Input Voltage Output Voltage	Massage Heating Pad 5V/2A 5V/2A	 3 Battery Pocket 4 Power Cable 5 Heating/Mode Button 6 Power Bank 7 Charging Cable 	① ② ③ Connect the USB cable Place the power bank Long press the heating/	 Always keep the Power Bank away from water or other liquids, as this may cause damage. To clean the Power Bank, use a dry, lint-free cloth. Do not use any chemical or abrasive cleaning agents. NOTICE: Supported to use wet towel to wipe the heating pad surface. 	 Cause: Everyone's tolerance to temperature is different. Solution: In order to prevent low temperature burns, we have limited the highest temperature. 	SECTION AND A CAREFULLY BEF INSTRUCTIONS	DERSTAND THIS ENTIRE MANUAL INCLUDING THE SA ALL INSTRUCTIONS AND WARNINGS COMPLETELY AN ORE USING THIS PRODUCT. FOLLOW ALL SAFETY AND WARNINGS TO AVOID HAZARDOUS SITUATIONS RECT USE OF THIS PRODUCT.
	Battery Capacity	5000mAh	® Extension Belt	to the power bank. into the inner pocket. mode button for 1s to turn on.	•Not supported to wash the heating pad.	•Cause: The battery of the power bank is low. •Solution: Fully charge the power bank before use.		Read all instructions before use
	Main Material	Neoprene, Artificial Leather	<u>4</u> <u>5</u>	Setting the temperature level and mode level	TROUBLE SHOOTING	•Cause: The adapter or power bank's output power is lower than 10W.	*	Do not bleach
	Heat Settings	Low, Mid, High Waveform/Intermittent			Q1.Why the heating pad can not be turned on? •Cause: The power bank runs out of battery.	•Solution: Please use the power bank we provide, or choose another adapter or power bank which supported 5V rated voltage output and an	8	Keep away from sharp objects
	Massage Mode Auto Shut-off Timer	/Lateral Vibration	3	Temperature Level Power LOW MEDIUM HIGH	•Solution: Press the power bank button to check the battery power.	output current greater than or equal to 2-Amp. Q3: Why does the heating pad stop working after using it for a while?	Ø	Do not tumble dry
READ THIS MANUAL COMPLETELY AND CAREFULLY BEFORE USING THIS PRODUCT	Auto since on Timer	1* Massage Heating Pad		On/Off LOW MEDIOWI HIGH	-Cause: The heating pad doesn't turn on properlySolution: Long press the heating pad power button for 1s after the power	•Cause: For safety, the product has a 30mins automatic shutdown function. •Solution: It's recommended to restart the heating pad after a while.		Do not use when folded or bunched up
Keep this manual in a safe location for future reference	Package Included	1* Power Bank 1* Charging Cable		Massage Mode Green Light Blue Light Red Light	bank is turned on. •Cause: The voltage/current of the power bank is too low.	•Cause: The power bank runs out of battery while using. •Solution: Press the power bank button to check the battery power.	×	Do not iron
■ SKU: K9224		1* Extension Belt	8	Power Waveform Intermittent Lateral Vibration On/off	•Solution: Please use the power bank we provide, or choose another adapter or power bank which supported 5V rated voltage output and an			Keep away from children under three years of ag
		1	2	3	output current greater than or equal to 2-Amp.	5		6
Do not dry clean	reduced physical, sensory or mental	d by persons (including children) with Il skills or a lack of experience or supervised and have been instructed	manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times. • Never expose the power bank to extreme heat. This applies in particular	Steady on: 100 % 3. The Power Bank is fully charged when the Battery Level LED stops flashing and displays steadily (about 2.5 hours for a completely discharged Power	Warranty	www.comfytemp.com		
WARNING: Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	knowledge, unless they are closely s on how to use the heating pad safely	supervised and have been instructed ly and are fully aware of the risks of use.	Never expose the power bank to extreme heat. This applies in particular to storage in a car. Extreme temperatures can occur inside the vehicle and	and displays steadily (about 2.5 hours for a completely discharged Power Bank under a 2-Amp output).	24Hrs Quick Customer Support	Product Name: Massage Heating Pad Brand: Comfytemp		
CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.	 This product is not a toy. Children r This heating pad is not designed fo This heating pad is suitable for person 	or use in hospitals.	in the glove compartment when the vehicle is parked for a long period of time. Therefore, remove the power bank from the vehicle. • If you have any questions about using this device, contact Customer Service.	4. Disconnect the Charging Cable; the LED will shut off. Charge the Power Bank at least once per year to maintain its capacity.		Model: K9224 UK REP		
NOTICE: addresses practices not related to personal injury, such as product and/or property damage.	commercial purposes. • Do not insert sharp objects into the objects into the product if you or the product if	·	 Do not massage areas that are swollen, inflamed, or covered with skin eruptions. It is recommended not to use the massage function excessively. 	WARNING A	30 Days Free Return	Company Name: UKCA SERVICE LTD Address: 21 Ellesmere Avenue, Worsley, Manchester, UK, M28 OAL E-mail: ukca.service@gmail.com		
	The electrical and magnetic fields en	direct sunlight or high temperatures. mitted by this heating pad may interfere dowever, they are still well below the	USING THE POWER BANK	While charging, do not cover the Power Bank. Only charge the Power Bank in a dry environment at normal room temperature.	365Days Warranty	EC REP Company Name: TopToll GmbH		
 WARNING – To reduce the risk of fire, electric shock, or serious personal injury: Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and 	(80 A/m max), and magnetic flux de	000 V/m max), magnetic field strength ensity (0.1 millitesla max). Please consult of your pacemaker before using this	Charge the Power Bank before initial use and if the device has not been used for a long period. To charge:	Charging other devices from the Power Bank		Address: Einsteinstr.2,Neuss 41464, Germany USt-IdNr.:DE339651736 Email: toptollde@gmail.com		
hazard information is not only intended to protect your health and the health of others, it should also protect the product. For this reason, pay attention to	heating pad.	connection cable frequently for signs	 Insert the provided Charging Cable into the connection socket of the Power Bank. Connect the other end of the Charging Cable to a USB charger via the 	The Power Bank can also be used to charge other rechargeable devices, such as smartphones. To charge your device using the	If you have questions or concerns, don't hesitate to contract us directly at:	Manufacturer: Shenzhen Yicaiwangluo Technology Co.,Ltd Company Name: Xincaishenzhendianzishangwuyouxiangongsi		
these safety notes and include these instructions when handing over the product to others. This heating pad must not be used by persons who are not sensitive to heat	of wear and tear or damage. If detection customer service. • While charging, do not cover the p	ected, discontinue use and contact power bank with covers, cushions or	USB port (USB charger not included) with at least a 1-Amp output. The Battery Level LED on the Power Bank will flash white while charging. The	power bank, simply connect your device's USB cable to the Power Bank and to the USB port on your device.	US Customer Services Hotline 1 (833)990-0618	Address: Yousong Second Industrial Zone, Fukang community, Longhua, 416Rm, 4F, 3Bldg, 1980 Technology&Cultural Industry Park Shenzhen GuangDongSheng 518000 CN		
 or by vulnerable persons who may not be able to react to overheating. This heating pad must not be used by children under three. This heating pad is intended for adult use and should not be used by 	similar items. • Do not charge the power bank whi	nile heating pad is in use.	charging/decharging levels are as follows: 1 x flash: 0 % - 25 % 2 x flash: 26 % - 50 %		Monday to Friday, 9 AM to 5 PM EST			
Inis neating pad is intended for adult use and should not be used by children unless the setting has been set by a parent or responsible adult.	Risk of explosion! Do not put power Do not disassemble or crush the power	power bank.	2 x flash: 26 % - 30 % 3 x flash: 51 % - 75 % 4 x flash: 76 % - 99 %		Email: help@comfytemp.com	□ CE ROHS K FC CD X Made in China		
and the child is closely supervised at all times during use.	Batteries must be charged correctly	ly prior to use. The instructions from the						