# **ZANSONG®**

Shenzhen Aihua Electronic Technology Co.,Ltd. Room 1311, Xiner Sports Center Complex Building, Xiner Community Center Road, Xinqiao Street, Baoan District, Shenzhen








**ZANSONG®** 

M12

# ( Power On and Off

01. In off state, turn the knob to the right and hear a "Da" beep to turn on, and continue to turn it to the right to increase the volume. 02. In on state, turn the knob to the left and hear a

"Da" beep to turn off, and continue to turn

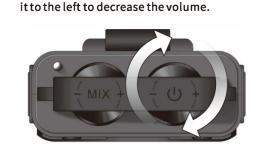


# **Battery Power Display Instructions**

─ Battery Power Display While charging, the battery power display icon flashes, and when fully charged, the battery power icon keeps on; when the power is low, the battery power icon flashes.

# **Bluetooth Connection**

When the device is in Bluetooth mode, turn on the Bluetooth function in your phone settings for fist connection, click to search for devices, and then find M12 (model name) in the available devices, when you hear that "Bluetooth is connected"indicates a successful pairing, you can use your phone to play music which you like.

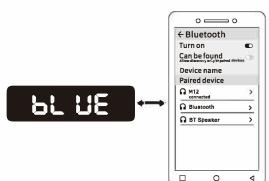

**■**-09

# Introduction

### Dear user:

Welcome to use the professional voice amplifier. We feel deeply honored to get your support and

In order to give you an overall understanding of this product and facilitate your use, we prepare the user manual which includes specifications, structural features, technical features, operations, instructions for use, simple troubleshooting, Maintenance, etc. are essential guidelines for you to use this product.

This product is a professional voice amplifier device. For safe use and proficiency use, the operator must first read the user manual in detail before operating this product, I believe it will help to you to use this product effectively. In addition, if you have any questions during use, please call or write for consultation, we look forward to serving you.

**■**-01)-**■** 

Some features and functions of the product and its accessories

described in this manual arefor reference only. The manufacturer reserves the right to modify any information in this manual at

For the contents of this manual, unless required by applicable laws,

themanufacturer does not provide any express or implied guarantee for all the contents of this manual, including but not limited to the guarantee of suitability for sale or use for a specific purpose. In any case within the scope permitted by law, any special, incidental,

indirect, consequential damages arising from the use of the content of this manual will not be compensated, nor will any profit, data, goodwill or Compensation for foreseeable losses.

Import and Export
If you need to export, re-export, or import the products described in

this product manual, you shall comply with applicable import and export control laws and regulations.

**■**-03**|**-

10. If the battery is improperly replaced, there is

a danger of explosion. Only replace it with the

same type or equivalent type of battery. The

battery must not be exposed to excessive heat environment such as sunlight, fire or similar.

product. Please perform the correct operation

can not dismantle the product with a built-in

replaced for any reason, it must be replaced by the manufacturer (or an authorized dealer

11. If it is necessary to replace the battery from the

provided on the battery package. The user

battery. If the built-in battery needs to be

12. Please turn off this product in places or areas

where the use of wireless devices is expressly

prohibited (such as gas stations, before taking off by plane, cabins below the deck of ships,

discarded together with other domestic waste. Segregated collection and proper recovery of electrical and electronic waste not only helps

us conserve natural resources, but alsó ensures

human health and environmental safety, for

more information on disposal, recovery and

collection of electrical and electronic waste.

**■**-05)-**■** 

please contact your local city of municipal

and storage areas for medical and chemical

13. This product is suitable for tropical climate

14. This product should not be disposed or


designated professionals).

products).

any time without any prior notice and assumes no responsibility

# Preparation before Recording

1. Prepare a TF card or USB flash disk into the device. 2. Use a wired headset to plug into the MIC hole or wireless microphone to record.

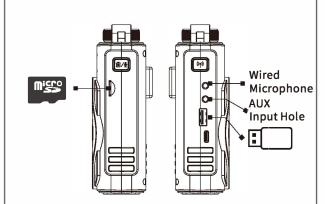

**■**10 **■** 

### **Recording Steps**

Recording: Press the "Record/Delete" button to start recording, the REC on the display will light up, and the recording will start timing. At this time, you only need to speak into the

time, and then press the "Record/Delete" button to save the recording and play,

microphone, voice amplify and record at the same

press "Record/Delete" again to record the next to play several recording , please press ""
for the previous song or "" for the next song to

switch, and press "▶II" to play or pause the recording. All currently playing recordings are played in a

### single loop. **Delete Recording**

While playing recording, long press the "Record/Delete" key to delete the currently playing recording file.

**11** 

 


REC icon lights up indicates the



REC 00 03

# **Recording with A Microphone**



Keepthe microphone right at the frontof the voice source This picture shows the correct way

**--12**-•

# **USB/TF card mode**

Insert the TF card or U Disk, automatically switch to MP3 mode, and automatically play the audio files of the TF card or USB flash disk. Our Product has a power-off memory function, will continue to play starting with the breakpoint position last time when the music mode is turned on next time.

TF card or USB flash disk maximum support capacity: 32GB

Music format: support Mp3

**■**13

#### **Connect the Wireless Microphone** to the Voice Amplifier

When the wireless microphone turned on, the blue light keeps on. Press and hold the "M" button on the wireless microphone for 5 seconds, the blue light flashes, release the "M" button.

turn on the power switch of the voice amplifier and enter the wireless automatic pair mode. The blue light stops flashing and keeps on, the voice amplifier delivers "microphone mode" means a successful pairing.

The wireless microphone has 12 levels of volume, the volume "+" means the signal is strengthened and the sound is increased, the volume "-" means the signal is weakened and the sound is decreased.

**14** 

During use, if the voice amplifier howling, you can continuously click the volume "-" key to reduce and eliminate interference.

# After the U circle wireless microphone is successfully connected to the voice amplifier,

The voice amplifier will automatically track the

 
Long press the "M" button 5 seconds on the

# **Screen Display During Decording**





The numbers on the display



# Warm Tips:

# **Frequency Conversion and Prevent** Interference of Frequency Channeling

click the "M" key twice to prevent interference frequency channeling.

frequency and reconnect when amplifying. the voice amplifier will deliver "microphone mode"indicating reconnecting is successful.

wireless microphone to unlock it for 5 seconds, the blue light flashes, means entered the frequency conversion mode, and need to re-link the frequency.

**■**15

**Packing List** 

01: Voice amplifier

05: Lanyard

04:Type-C charging cable

02:Wireless Microphone (standard accessories of M12)

\*After opening the package, please check the accessories in detail. If you find that there are incomplete accessories or no accessories, please contact the local dealers and accessories.

**■**-02**→** 

1. Please pay attention to all safety warnings and

3. Do not block any interface of the product, please

use the product according to the user manual

4. Do not place this product near any heat sources

5. Protect the charging cable from being stepped on

or squeezed, especially the plug, socket and other

such as radiators, heat registers, stoves, or

other apparatus (including amplifiers) that

6. Please use the accessories specified by the

7. In case of thunderstorm or long-term non-use

an authorized dealer), any damage to the

falling and causing damage.

9. Do not expose the product to dripping or

product needs to be repaired, such as liquid

n failure to operate normally, or the product

splashing liquids, and do not place objects containing liquids (such as water cups) on the

**04** 

of this product, please unplug it.

8. All maintenance work should be performed by a

professional designated by the manufacturer (o

splashes or sundries entering the product, or the product is exposed to rain or humidity, resulting

2. Only use a dry cloth to clean this product

provided by the manufacturer.

Safety instructions

follow all instructions


manufacturer

product.

\*1

\*1

03: User manual (including warranty card certificate)

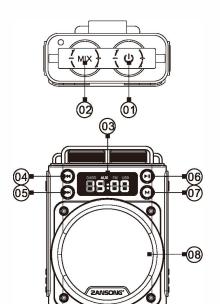

**■**--08)--

display 04. Select channel after

12. MIC 13. AUX 14.USB Flash Disk radio/previous song 05. Select the channel 15. Type-C before radio/next song 06.Play/Pause

**■**-07

# Use Multiple Sets without Interference

The U-shaped wireless microphone can support multiple sets at the same time without interference.


If multiple sets are used at the same time, first reconnect according to the steps (Connect the Wireless Microphone to the Voice Amplifier) and then operate the frequency conversion;

if 10 sets are used at the same time, press and hold the "M" button once for the first wireless microphone to change frequency, press and hold the "M" button twice for the second wireless microphone, and so on to the tenth to achieve multiple use without interference.

#### U-shaped wireless Microphone reset. use time & transmission distance Press and hold the volume "+" of the U-shaped

wireless microphone, turn on the power switch, the blue light flashes five times indicates successful reset; then turn on the voice amplifier, and release the volume "+" of the U-shaped wireless microphone. The Microphone use time up to 6 hours. **■**-18}-■

# U-shaped Wireless Microphone

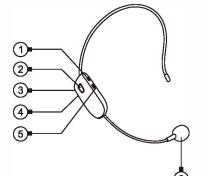

1. Power switch: power on and power off 2.M mode key: unlock, frequency conversion, frequency interruption, frequency binding 3. Volume key: volume up


4. Volume key: Volume down. 5. Charging: Connect to USB power with output voltage DC5V

**■**17**→** 

 6. Microphone head: voice input

**How to Wear A Microphone** 1. Keep the wired microphone in front of the voice source and speak

2. When speaking, please refer to the correct



Voice source front Aim at this side when speaking.

wearing instruction and keep it right at the front of the voice source (as shown in the picture) Keep the microphone right at the front of the voice source This picture shows the correct way

Not at the front of the voice source

This picture shows the wrong

3. Wrong wearing (as shown in the picture) will cause problems such as howling and low voice.

Tip: The black cotton can filter the sound of interfering airflow.

#### ≥95dB AUX Input 850mV Frequency 120Hz-20KHz Maximum 15W **Output Power** 4Ω Output Impedance Double power Battery battery 7.4V **Charging Voltage** DC 5V **Charging Time** About 3-4 hours 135 x 51 x 91mm **Product Size**

**Specifications** 

**Product Weight** 

**■**19

About 320g

# / Warning

# **Operating Environment**

- 01. This product should not be placed in an unbalanced, humid place or near other fire or
- heat sources (such as stoves). 02. Do not place the product near devices that are
- susceptible to interference. 03. Please do not use power chargers and batteries

#### that are not equipped with this machine. Cleaning and maintenance

- 01. This product must not be immersed in water or splashed with water. 02. Do not use hard objects to wipe the surface to
- avoid scratches. 03. Please use a soft cloth to wipe.

### **Power Warning**

or damage to the PCBA.

01. Please do not use power adapters and charging cable not provided with this machine. 02. If the power adapter and charging cable are damaged, must be replaced with the original

matching to avoid insufficient power supply

**■** 20 **■** 

- 03. Do not pinch, bend or twist the AC charging cable excessively, otherwise the core may be exposed or broken.
- 04. Do not use the power adapter and charging cable provided with this product on other devices. 05. Please do not let children operate it alone and
- keep it away from the reach of infants and young children to avoid dangerous accidents such as
- 06. Please do not insert or press out the power adapter plug with wet hands to avoid electric

# shock or injury.

and injury..

Cautions 01. Please do not drop this product or hit it with

electric shock and burns.

- hard objects to avoid injury or malfunction. 02. Please do not use it when the structure is damaged, so as not to cause injury or other
- accidents. 03. Do not remodel. Non-maintenance technicians
- are not allowed to disassemble and repair it to avoid fire, electric shock and injury. 04. When abnormality or malfunction occurs, stop using it immediately to avoid fire, electric shock

**■**21**■** 

# Warranty & Repair Policy

- 1. Please keep this warranty service card properly. If the warranty service card is lost, it will not be reissued. Please be sure to keep the invoice (or photocopy) or relevant vouchers (valid vouchers must be affixed with the dealer's store stamp), and present them together when the device is faulty and sent for repair. If you can not provide the invoice or relevant valid purchase vouchers, the product warranty The starting date of the period will be based on the date of manufacture
- corresponding to the serial number. 2. Within one month from the date of sale of this product, if the voice amplifier has a failure under normal use conditions, you can receive free after-sales replacement service: within two
- normal use conditions, you can receive free after-sales repair warranty service. For product warranty service needs, please contact local purchasing dealer or agent for
- assistance. 3. The accompanying consumables (product lanyards, charging cables, etc.) are not covered by the warranty.

the company will have the right to charge maintenance service fees as appropriate. ₽-22-•

4. If the damage is caused by the following factors,

- A. Damage caused by natural disasters (floods, fires, earthquakes, lightning strikes, typhoons, etc.), irresistible external forces, or careless
- human operation.

  B. You can not disassemble, repair, or send the product to an uncertified maintenance point for inspection and maintenance by yourself.
- C. Alterations or unauthorized repairs:
  Faults and damages caused by modification,
  repair, or change of specifications by the user
  or by a third party to accessories that are not
  shipped, authorized or approved by the
- manufacturer. D. Damage caused by improper use by the user (such as excessive power supply voltage, overheated or cold environment, damp, impact,
- drop, etc.).

  E. The company's warranty service card is torn or unrecognizable, the warranty service card is altered or does not match the product.

F. Other abnormal uses.	
	Certificate
Product name	High-Power Professional Voice Amplifier
Model	M12
QC	
Date of manufacture	

# **WARRANTY CARD**

When purchasing products, please fill out this card

carefully and keep it properly. Customers fill in. Model Purchase Date Name Address Phone Number Dealers fill in Company Name Address Person in Charge

Phone Number

FCC Caution\*

(1) § 1s\*19 Labelling requirements\*

This deVice complies with part 1s of the FCC Rules\* coperation is subject to the following two conditions: (1) This deVice may not cause harmful interference, and (2) this deVice must accept any interference received, including interference that may cause undesired operation\*

§ 1s\*21 Changes or modification warning

any Changes or modifications not expressly approved by the party responsible for compliance could Void the user's authority to operate the equipment\*

Signed and Sealed

§ 1s\*10s Information to the user\* Note: This equipment has been tested and found to comply with the limits for a Class B digital deVice, pursuant to part 1s of the FCC Rules\* These limits are designed to proVide reasonable protection against harmful interference in a residential installation\* This eQuipment generates uses and can radiate radio freQuency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications\* iloweVer, there is no guarantee that interference will not occur in a particular installation\* If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures: -Reorient or relocate the receiVing antenna\* -Increase the separation between the equipment and receiver -Connect the equipment into an outlet on a circuit different from that to which the receiver is

-Consult the dealer or an experienced radio/TV technician for help\*

only certificate antenna can authorization to use, other types of antennas and/or higher gain antennas and cables may require the additional authorization for operation to ensurecompliance with the leIRD limits applicable to unlicensed wireless microphones\*

**Product Description** 01. Power on/off and 07.M mode volume adjustment 08. Speaker 02. Reverberation 09.Record/Delete adiustment 10.TF card 03. Digital dot matrix 11.Pairing key