



ICEMAN

Portable 4L Personal Fridge




RJ48-V2-6-Series





Get to Know Your Mini Fridge

 1. Discreet door handle
2. Removable shelf
3. Red and green indicator lights
4. WARM/COOL/OFF switch
5. DC plug outlet
6. AC plug outlet
7. AC plug and cord
8. DC plug and cord

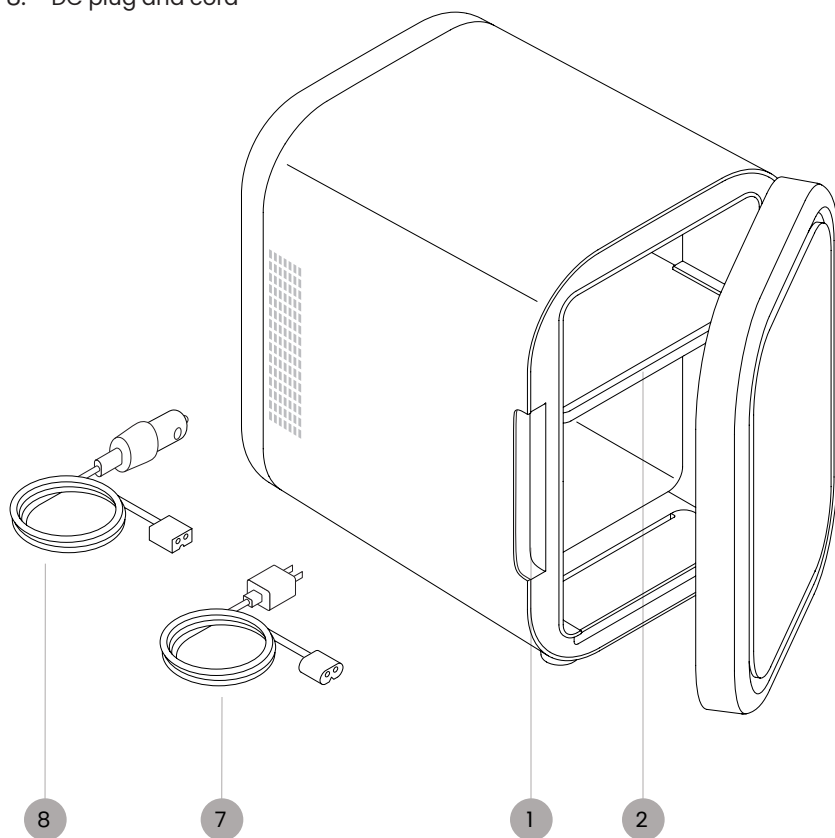



Get to Know Your Mini Fridge

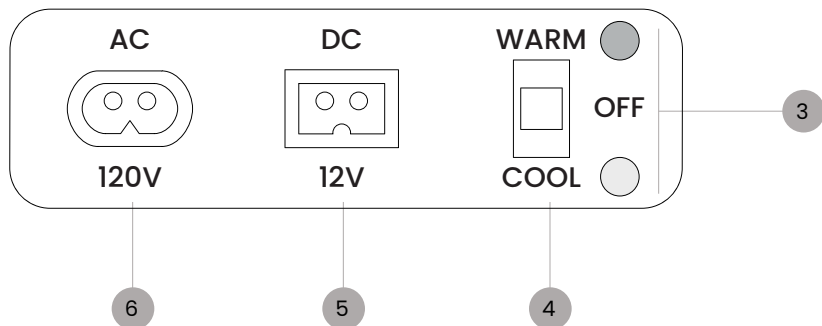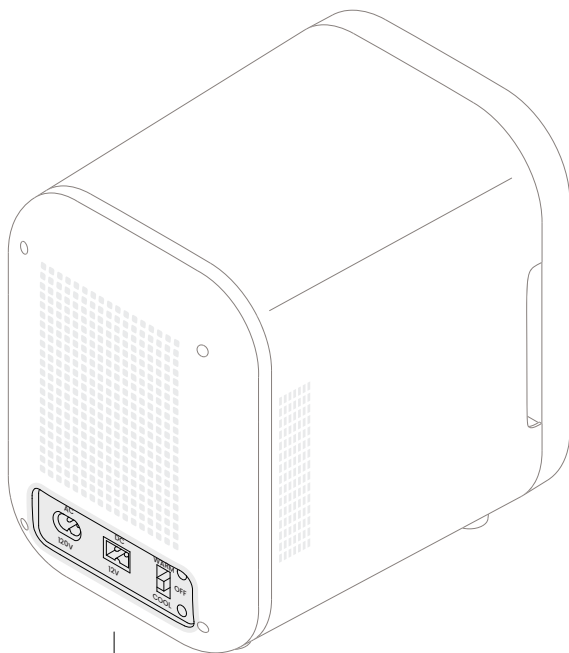  

READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.



Safety Instructions & Important Safeguards

WARNING: When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions.**
2. To protect against the risk of electric shock, **do NOT** immerse the cord, plug, or any part of the unit in water or other liquid.
3. Close supervision is necessary when this appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool prior to cleaning the product.
5. **Do NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Should this occur, contact Chefman® Customer Support for examination, repair, or adjustment.
6. **Do NOT** let the cord hang over the edge of a table or countertop or touch hot surfaces.
7. **Do NOT** place appliance on or near a hot gas or electric burner, or in a heated oven.
8. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
9. **Do NOT** use the appliance for other than intended use.
10. When alternating between **WARM** and **COOL** functions, turn the switch to **OFF** first. After 2 minutes, turn the switch from **COOL** to **WARM**.
11. When using in a car, disconnect the plug from the outlet when the appliance is not in use or when the car is not running.
12. Allow adequate ventilation on all sides of the unit when in operation. Keep the fan free of obstructions.

Save these instructions For household use only





Safety Instructions & Important Safeguards

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electric shock.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



Safety Instructions & Important Safeguards

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of abrasion or excessive wear. Contact Chefman® Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov



Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.





How to Use the Mini Fridge



Before First Use

1. Remove all packaging materials, such as plastic bags and foam inserts. Check to ensure that all parts and accessories are included before throwing out packaging.
2. Read and remove any stickers on the mini fridge except for the rating label, which should remain on the unit.
3. Wipe down the interior, exterior, and removable shelf with a clean, damp cloth. Dry thoroughly.

Using the Mini Fridge

The mini fridge's small size makes it perfect for the office, bedroom, or car, and the removable shelf can be adjusted or taken out for convenient storage options. Plus, not only does it keep cold things cold, but with the flip of a switch, it can also keep hot items warm.

1. Select your desired cord and plug. The mini fridge can be plugged into a wall socket to be used at home or in the office, or it can be plugged into a 12V power outlet for portable use in the car.
2. Connect the plug of the chosen cord into the corresponding outlet on the back of the mini fridge. Connect the other end of the cord into the appropriate power outlet.
3. Once plugged in, you can choose either the hot or cold function. Turn the switch to **COOL** for cooling mode, and the green LED light will illuminate. Alternatively, turn the switch to **WARM** for warming mode, and the red LED light will illuminate. When the switch is turned to **OFF**, the mini fridge will function as an insulated box.
4. For best results, have items already chilled or heated before placing in the mini fridge.
5. The shelf can be adjusted or removed to accommodate food, beverages, or other items. Simply slide the shelf out from the corresponding slots inside the mini fridge to remove. To replace or move to a different shelf level, line up the shelf with the slots and slide it back in. The mini fridge can fit up to six 12 oz cans when the shelf is removed.
6. Unplug the mini fridge when not in use. Open the door and let it come to room temperature before cleaning and storing.



Keep it Clean

1. Make sure the mini fridge is unplugged and at room temperature.
2. Wipe the inside and outside of the mini fridge with a clean, damp cloth. Wash the shelf with warm, soapy water and dry thoroughly. **Do NOT** immerse the mini fridge or power cords in water or any other liquid.
3. **IMPORTANT:** In the **COOL** operation mode, the unit may develop frost that can lead to liquid condensation when switched **OFF** or to **WARM**. This is normal. Periodically wipe the interior surfaces with a dry cloth to ensure clean and dry operating conditions.
4. Always ensure the mini fridge is completely dry before storing it in a cool, dry place out of reach of children and pets.



Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Terms and Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only.

Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.



Terms and Conditions

What the Warranty Covers

- **Manufacturer Defects** – Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**
Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;
- **Poor Maintenance**
General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;
- **Commercial Use**
Damage that occurs from commercial use;
- **Normal Wear and Tear**
Damage or degradation expected to occur due to normal use over time;
- **Altered Products**
Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;
- **Catastrophic Events**
Damage that occurs from fire, floods, or natural disasters; or
- **Loss of Interest**
Claims of loss of interest or enjoyment.





Terms and Conditions

For product information, please visit us at Chillwithiceman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.



Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see sample below)
- Access Code (see sample below)

CHEFMAN

Model/Modele: RJ25-C

Conveyor toaster

120v~60hz 1800W

CONFORMS TO UL STD. 1026

CERTIFIED TO CSA STD.C22.2 No.64

CAUTION: DO NOT IMMERSE IN WATER

ATTENTION: NE PAS PLONGER DANS L'EAU

WARNING: TO PREVENT ELECTRIC SHOCK,

UNPLUG BEFORE CLEANING

PRÉAVIS: POUR ÉVITER LES CHOCS ÉLECTRIQUES,

DÉBRANCHEZ L'APPAREIL AVANT DE L'UTILISER

READ INSTRUCTIONS BEFORE USING

LISEZ LES INSTRUCTIONS AVANT DE L'UTILISER

HOUSEHOLD USE ONLY

POUR USAGE DOMESTIQUE SEULEMENT

Date Code:

0000

Access Code:

Xxxxxxxx

Made in China/Fabrique en Chine
AC Only/ AC Seulement

NOTE: Label depicted here is an example.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.





ICEMAN

Portable 4L Personal Fridge

RJ48V26SERIESUG010524

Iceman™ designed by ©Chefman 2024.

Chefman® is a registered trademark of RJ Brands, LLC.

Iceman™ is a trademark of RJ Brands, LLC.